




—
INSTALLATION INSTRUCTION



Fuse base

OFAZ1_, OFAZ2_, OFAZ3_

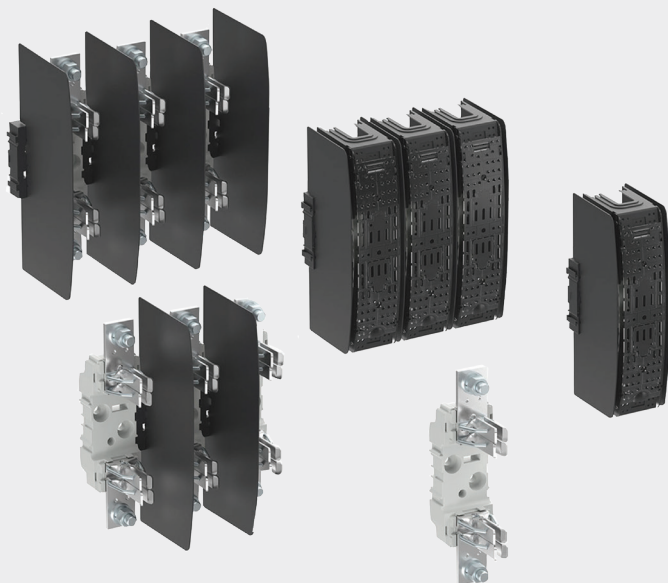


Installation

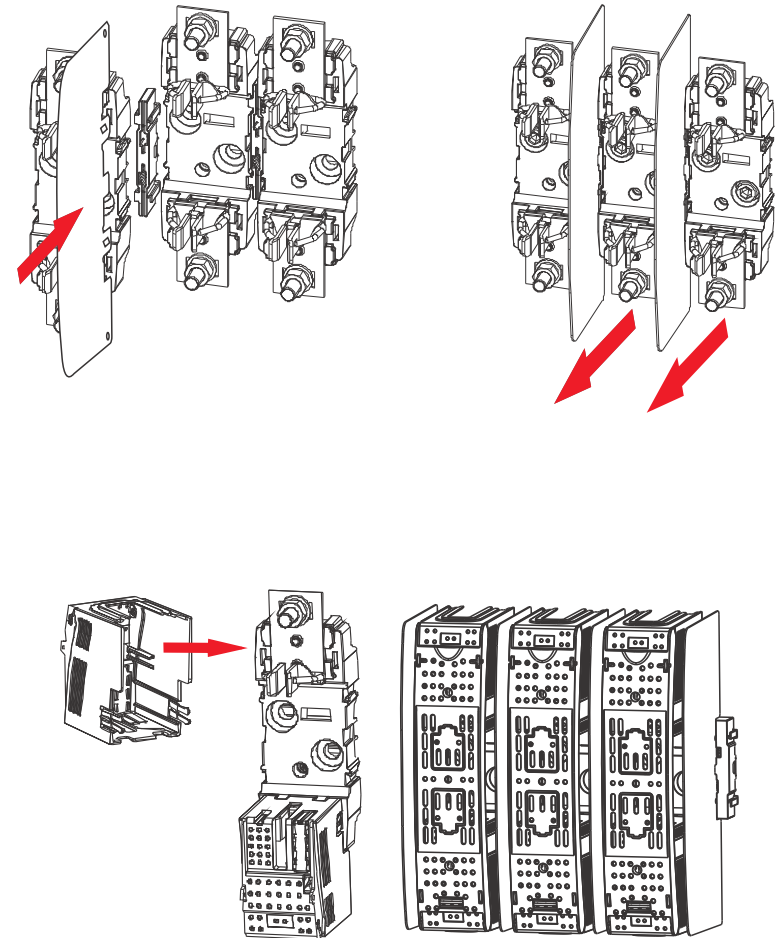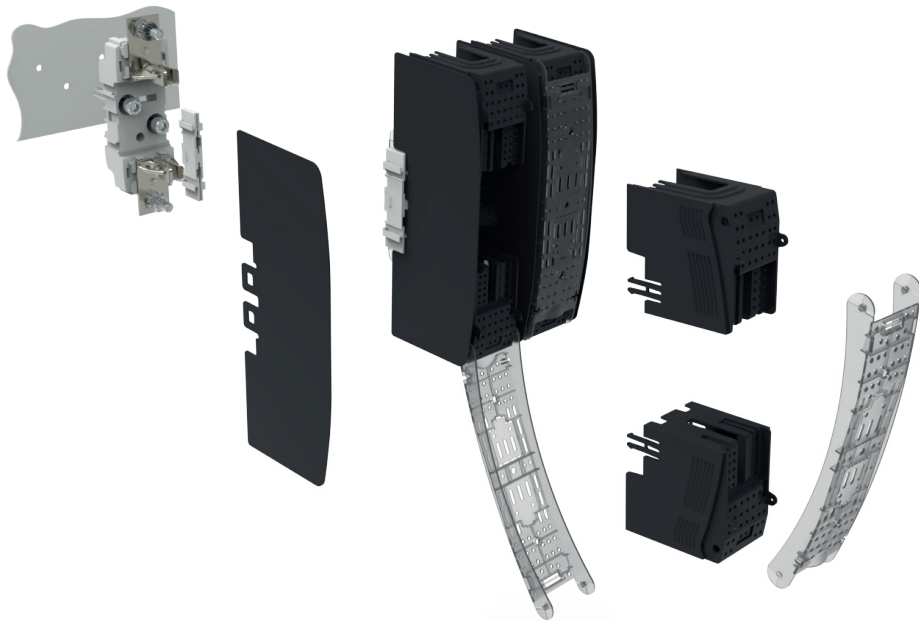

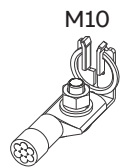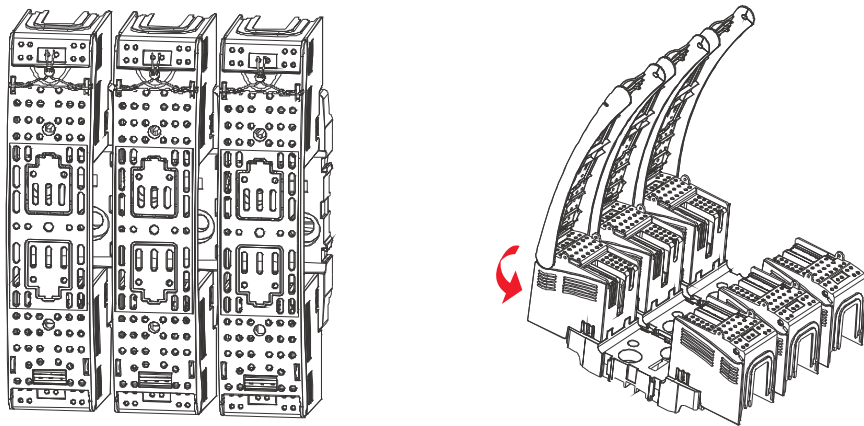

max. 32 Nm

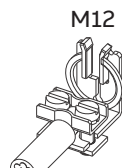
OFAZ1_
OFAZ2_

max. 32 Nm



OFAZ3_

Dimension drawings

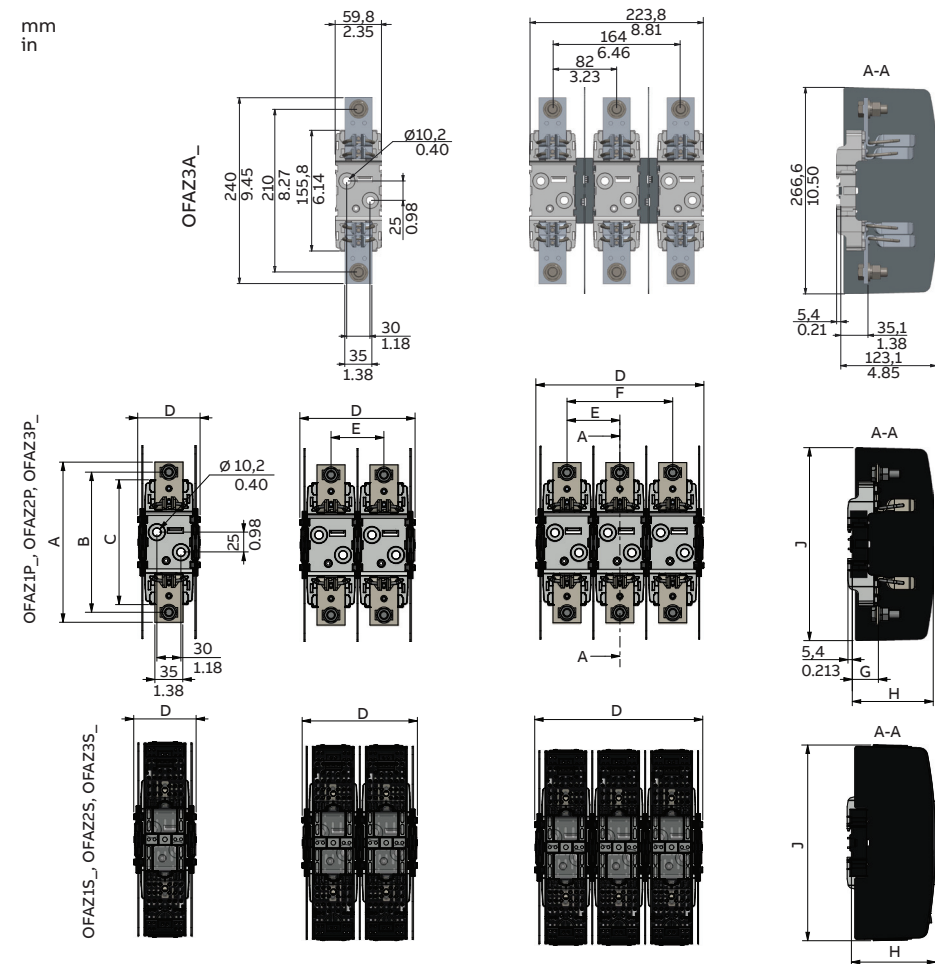mm
in

	OFAZ1P1/S1		OFAZ1P2/S2		OFAZ1P3/S3		OFAZ2P1/S1		OFAZ2P2/S2	
A	200	7.87	200	7.87	200	7.87	225	8.86	225	8.86
B	175	6.89	175	6.89	175	6.89	200	7.87	200	7.87
C	155,8	6.14	155,8	6.14	155,8	6.14	155,8	6.14	155,8	6.14
D	77,9	3.07	143,9	5.67	209,9	8.26	77,9	3.07	143,9	5.67
E			66	2.60	66	2.60			66	2.60
F					132	5.20				
H	32,6	1.28	32,6	1.28	32,6	1.28	32,6	1.28	32,6	1.28
G	101,1	3.98	105,3	4.15	101,1	3.98	108,6	4.28	108,6	4.28
J	241	9.49	244,4	9.62	241	9.49	244,4	9.62	265,8	10.46
							265,8	10.46	269,4	10.61
	OFAZ2P3/S3		OFAZ3P1/S1		OFAZ3P2/S2		OFAZ3P3/S3			
A	225	8.86	240	9.45	240	9.45	240	9.45		
B	200	7.87	210	8.27	210	8.27	210	8.27		
C	155,8	6.14	155,8	6.14	155,8	6.14	155,8	6.14		
D	209,9	8.26	109,9	4.33	191,9	7.56	273,9	10.78		
E	66	2.60			82	3.23	82	3.23		
F	132	5.20					164	6.46		



Contact us

ABB Oy

Muottitie 2A 65320

Vaasa, Finland

abb.com/lowvoltage