

INSTRUCTION

RSA..C

6504 0... ..



CUBUS LED

REGIOLUX


Regiolux GmbH
Hellinger Str. 3
D-97486 Königsberg/Bay.
T 09525 89-0
<http://www.regiolux.de>
info@regiolux.de

Achtung:
Leuchte nicht öffnen!
Garantieverlust!

Attention:
Don't open the luminaire!
Loss of Guarantee!


Attention:
N'est pas ouvrir le luminaire!
Perte de garantie!

Atención:
Non abrir la luminara!
Pérdida de garantía!

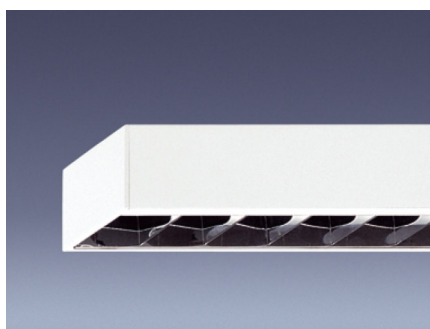


L = Leuchtenlänge
A₁ = Befestigungsabstand
A₃ = Bef.-Abst. Bandmontage
KE = Kabeleinführung


	L	A ₁	A ₃	KE X/Y
1200	1188	800	376	80/-41
1500	1488	1100	376	225/-41






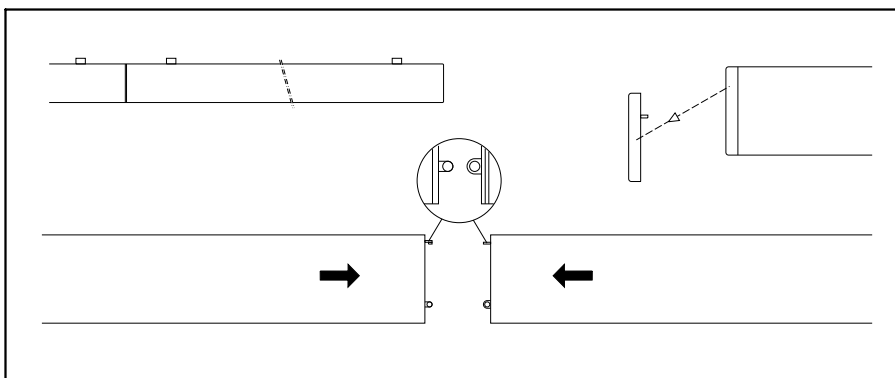


RSAXC


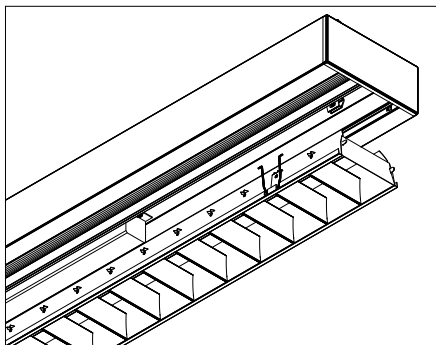


RSAGC


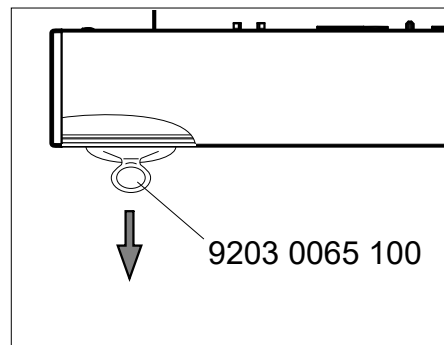


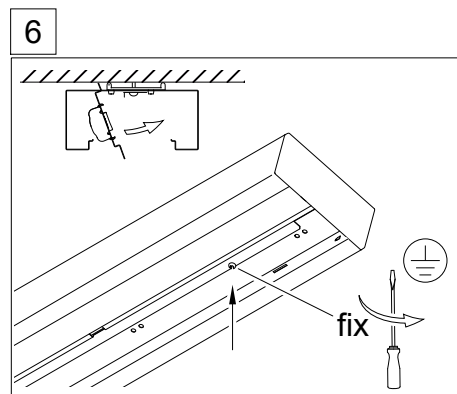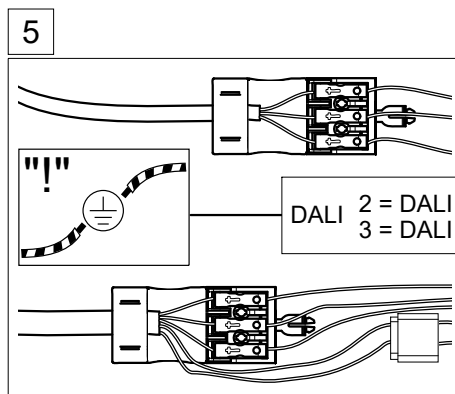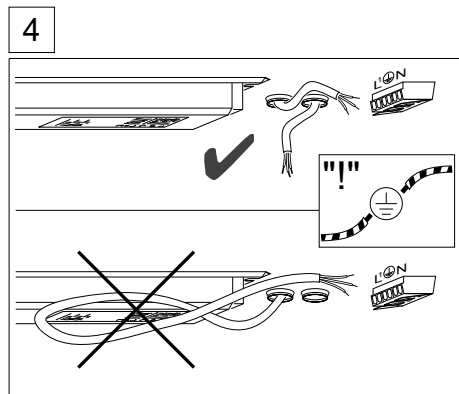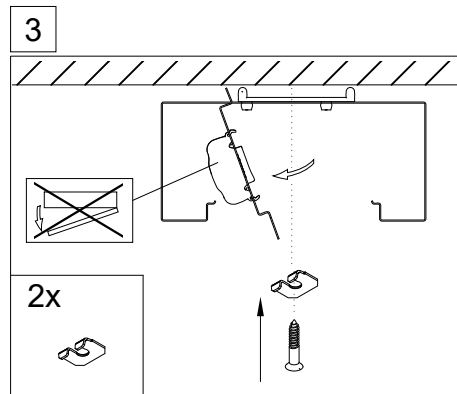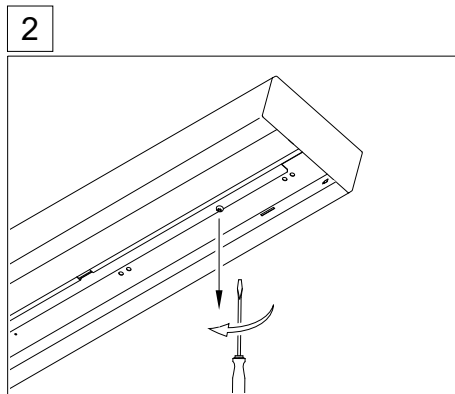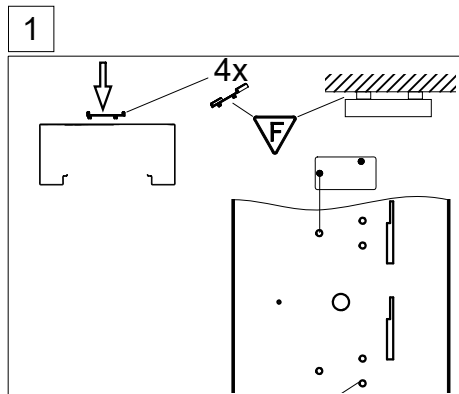


RSAXC

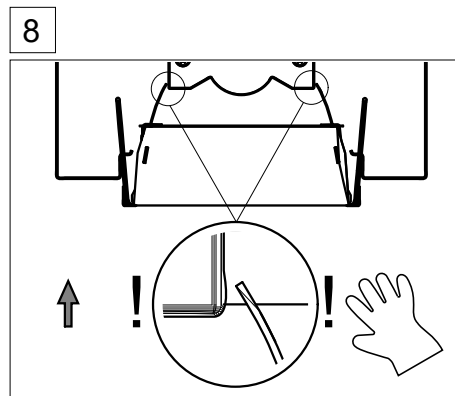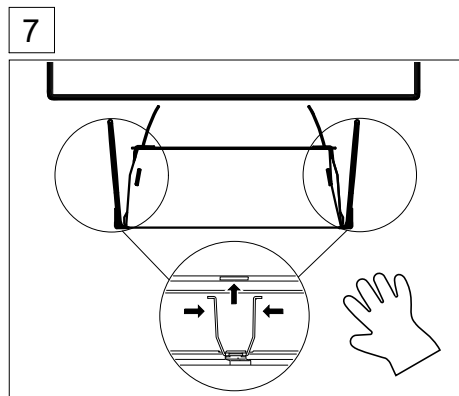

RSAGC

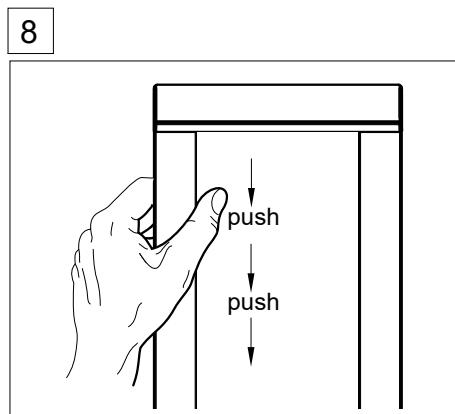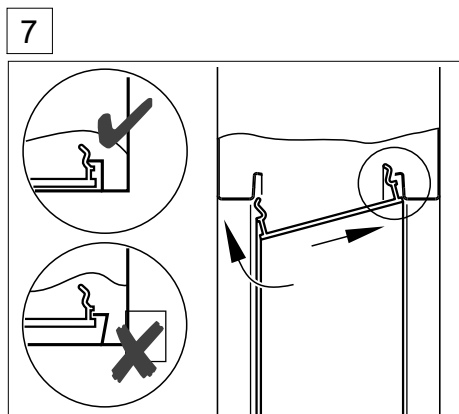

optional

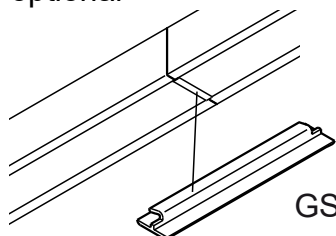

GSL3 84601003100

