

INSTRUCTION

SHX

SHXI/SHPI

STAIL LED


6030

6031



REGIOLUX

Regiolux GmbH
Hellinger Str. 3
D-97486 Königsberg/Bay.
T 09525 89-0
<http://www.regiolux.de>
info@regiolux.de

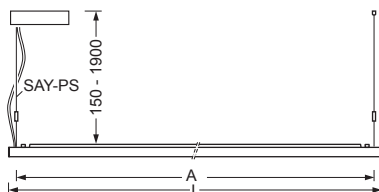


	L	A
SH./SH.I /1200	1240	1216
SH./SH.I /1500	1540	1516

Achtung:
Leuchte nicht öffnen!
Garantieverlust!





Attention:
N'est pas ouvrir le luminaire!
Perte de garantie!

Attention:
Don't open the luminaire!
Loss of Guarantee!

 Atención:
Non abrir la luminara!
Pérdida de garantía!




SAY-PS 1900/190

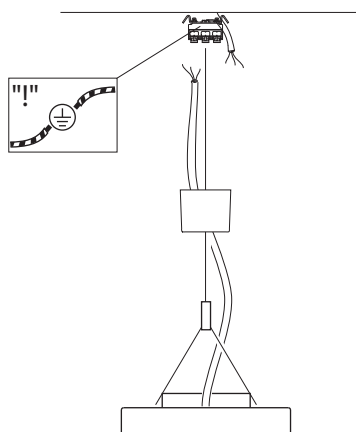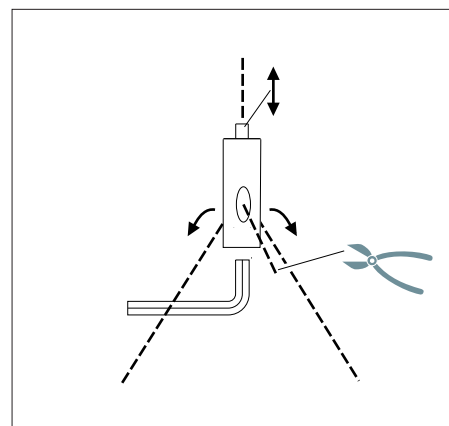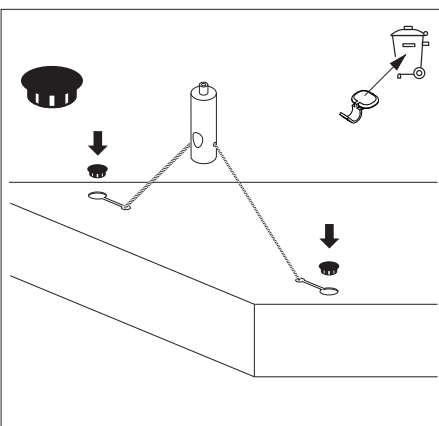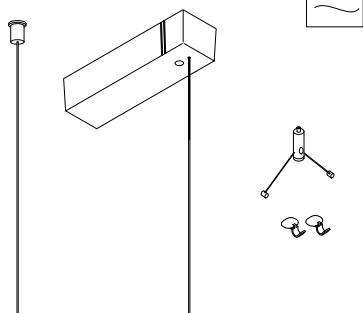


DALI

- Ein / Aus / Dimmen -
- On / Off / Dimming -

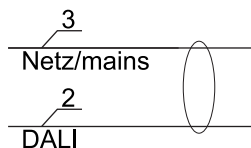

ext.		int.
DA	3	tr/tr
N	N	bl/bl
PE	⊕	gnge/gnye
L	1	bn/bn
DA	2	sw/bk

- Ein / Aus / Tast-Dim -
- On / Off / Touch dim -

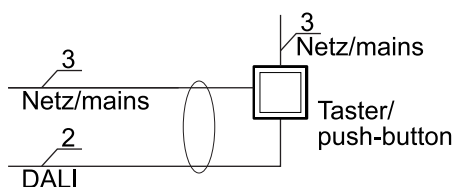

ext.		int.
N	3	tr/tr
N	N	bl/bl
PE	⊕	gnge/gnye
L	1	bn/bn
L	2	sw/bk