Single key with 'up' and 'down' arrows for wireless switch or push button with 2 control buttons, cream

100-00004



A single key with the symbol 'up' and 'down' for a wireless switch or bus push button with 2 control buttons. Finishing colour: cream.

Technical data

Single key with 'up' and 'down' arrows for wireless switch or push button with 2 control buttons, cream.

- Function: Finishing set for a Nikobus bus push button or a RF wall transmitter.
- Number of control buttons: 1 control button
- Material central plate: The central plate is made of rigid PC and ASA. The base material is coloured in
- Colour: cream (coloured in mass, approximately NCS S 1005 Y10R, RAL 1013)
- Print: Each key on the central plate is printed with the symbols "up" and "down" in indelible print.
- Dismantling: To dismount simply pull the central plate off the mechanism.
- Protection degree: IP41 for the combination of a mechanism, central plate and faceplate
- Impact resistance: After mounting, an impact-resistance of IK06 is guaranteed.
- Fire safety
 - The plastic parts of the central plate are self-extinguishing (comply with a filament test of 650°C)
 - The plastic parts of the central plate are halogen-free.
- Dimensions of finishing: 45 x 45 mm (HxW)
- Dimensions (HxWxD): 44.5 x 44.5 x 8.6 mm
- Marking: CE



