

# Double push button for Niko Home Control, cream

100-51036

4 year  
warranty

This push button allows you to control two groups of roll-down shutters, curtains or sunblinds. It is attached to the wall-mounted printed circuit board via a click mechanism. Switch including button. Finishing colour: cream.

## Technical data

Double push button for Niko Home Control, cream.

- Material central plate: The central plate is made of rigid PC and ASA. The base material is coloured in mass.
- Print: Arrows printed on the top and bottom keys show whether you are raising or lowering the roller shutter or blind. On the middle key(s) a shutter is printed including the favourite button. If you press this key the shutter, sunblinds or blind will go straight to the set position.
- Colour: cream (coloured in mass, approximately NCS S 1005 - Y10R, RAL 1013)
- Fire safety
  - The plastic parts of the central plate are self-extinguishing (comply with a filament test of 650°C)
  - The plastic parts of the central plate are halogen-free.
- Input voltage: 26 Vdc (SELV, safety extra-low voltage)
- Dismantling: To dismount simply pull the central plate off the base.
- Impact resistance: After mounting, an impact-resistance of IK06 is guaranteed.
- Dimensions (HxWxD): 44.5 x 44.5 x 8.6 mm
- Marking: CE



CE