

Fourfold push button with LED for Niko Home Control, cream

100-52004

4 year warranty

This push button allows you to perform four operations. It is attached to the wall-mounted printed circuit board via a click mechanism. An LED indicates whether the light is switched on or off. Switch including button. Finishing colour: cream.

Technical data

Fourfold push button with LED for Niko Home Control, cream.

- Material central plate: The central plate is made of rigid PC and ASA. The base material is coloured in mass.
- Lens: On the external corner of the four keys on the push button there is a small amber-coloured LED (1.5 x 1.5 mm) to indicate the status of the action.
- Colour: cream (coloured in mass, approximately NCS S 1005 - Y10R, RAL 1013)
- Fire safety
 - The plastic parts of the central plate are self-extinguishing (comply with a filament test of 650°C)
 - The plastic parts of the central plate are halogen-free.
- Input voltage: 26 Vdc (SELV, safety extra-low voltage)
- Dismantling: To dismount simply pull the push button off the wall-mounted printed circuit board.
- Impact resistance: After mounting, an impact-resistance of IK06 is guaranteed.
- Dimensions (HxWxD): 44.5 x 44.5 x 8.6 mm
- Marking: CE



CE