Finishing set for a wireless switch or push button with 4 control buttons and LED control, white

101-90002

Finishing set with four control buttons to control a LED controller. Each control button has its own label: switch on/dim up, switch off/dim down, colour loop and favourites. This button, combined with the base for the wireless switch with four control buttons (410-00002), is particularly suitable for the control of the wireless 4-channel constant voltage controller (410-00121).

Technical data

Finishing set for a wireless switch or push button with 4 control buttons and LED control, white.

- Number of control buttons: 1 control button
- Material central plate: The central plate is made of rigid PC and ASA. The base material is coloured in mass.
- Colour: white (coloured in mass, approximately NCS S 0502 Y50R, RAL 9010)
- Fire safety
 - The plastic parts of the central plate are self-extinguishing (comply with a filament test of 650°C)
- The plastic parts of the central plate are halogen-free.
- Dimensions (HxWxD): 44.5 x 44.5 x 8.6 mm
- Marking: CE

CE

4	6
20	0

4 year warranty



www.niko.eu