## Fourfold push button for Niko Home Control, anthracite

## 122-51004



This push button allows you to perform four operations. It is attached to the wall-mounted printed circuit board via a click mechanism. Switch including button. Finishing colour: anthracite.

## Technical data

Fourfold push button for Niko Home Control, anthracite.

- Material central plate: The central plate is enamelled and made of rigid PC and ASA.
- Colour: enamelled anthracite (approximately NCS S 7502 R, RAL 7022)
- Fire safety
  - The plastic parts of the central plate are self-extinguishing (comply with a filament test of 650°C)
  - The plastic parts of the central plate are halogen-free.
- Input voltage: 26 Vdc (SELV, safety extra-low voltage)
- $\bullet$  Dismantling: To dismount simply pull the push button off the wall-mounted printed circuit board.
- Impact resistance: After mounting, an impact-resistance of IK06 is guaranteed.
- Dimensions (HxWxD): 44.5 x 44.5 x 8.6 mm
- Marking: CE



