

TIMEGUARD®

24 Hour
Segment Timeswitch
Model: TG24

1. General Information

These instructions should be read carefully and retained for further reference and maintenance.

2. Safety

- Do not plug in any appliance that exceeds the capacity of the Timer.
- Always ensure the plug of any appliance is fully inserted into the timer outlet.
- If cleaning of the timer is required, remove from mains power and wipe timer with a dry cloth.
- Do not immerse in water or any other liquid.
- For indoor use only.


3. Technical Specifications

- 230V AC 50 Hz
- Switch Rating: 13A Resistive (3kW)
400W Filament Lighting
100W CFL Lighting
60W LED Lighting
- Operating Temperature: 0°C to +40°C
- Manual Override for continuous ON operation
- CE Compliant
- Dimensions (H x W x D): 78mm x 75mm x 72mm

Note: Not suitable for use with Discharge Lighting.

3

Diagram A

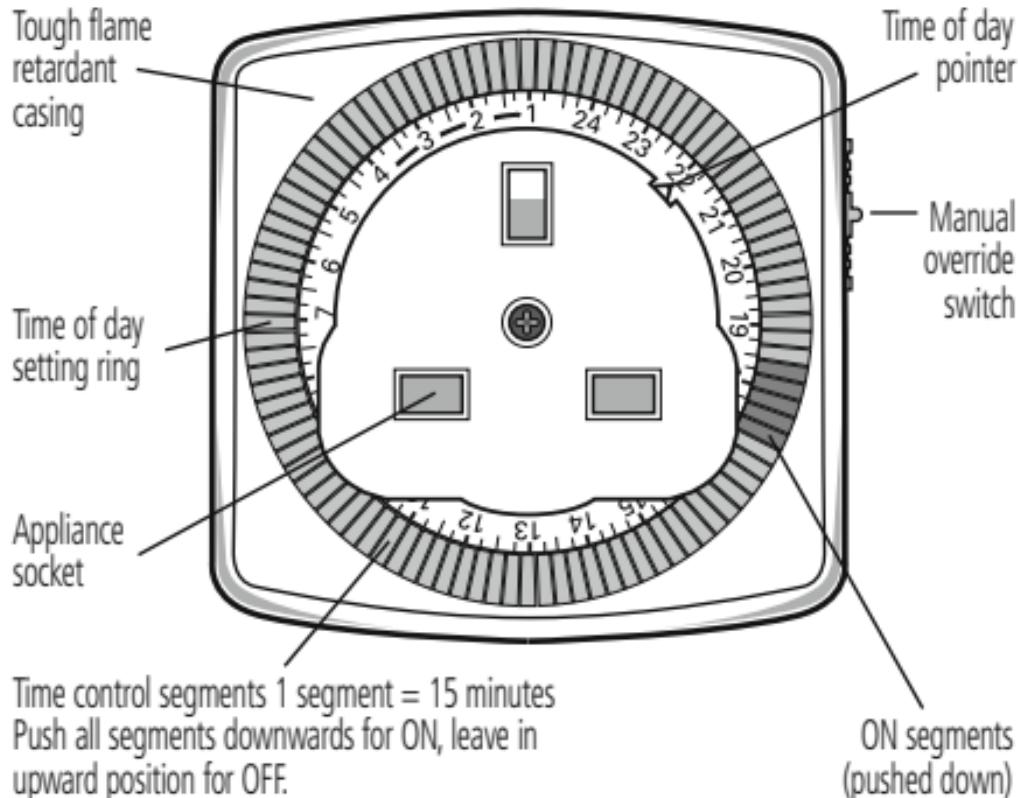

4

4. Operation

- Decide what times you would like the TG24 to switch ON and OFF.
- Push the segments down for the duration of an ON period (see diagram 'B').
- Pull the segments up for the duration of an OFF period (see diagram 'B').

Diagram B

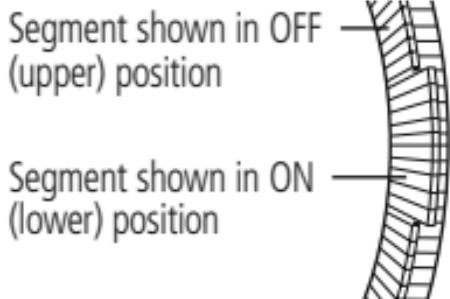
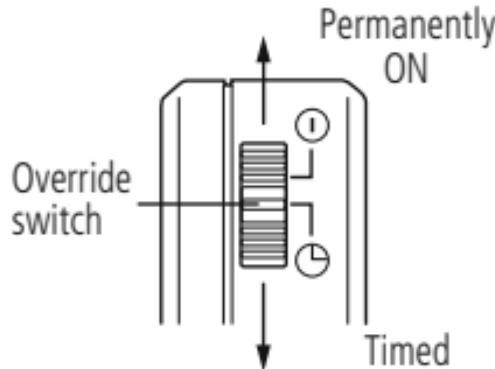


Diagram C

- The minimum switching interval is 15 minutes, and this can be increased in 15 minute steps.
- Ensure that the override switch is in the timed position by moving the slide switch to the 'Clock' symbol \oplus (see Diagram 'C').

- Set the correct time of day by rotating the dial clockwise until the correct time is indicated by the 'time of day pointer' (See Diagram 'A').
- Plug the TG24 into a live socket.
- Plug your appliance into the TG24 and switch ON the appliance. The TG24 will now repeat the set programme day after day indefinitely.

Points to note;

- The segment dial can be turned even when the time controller is operating.
- After a power failure, re-adjust the time controller to the correct time of day, turning the dial in a clockwise direction.

5. Permanent Override

- You are able to override the programmed settings for continuous ON operation using the main slide switch (See diagram 'A').
- When the slide switch points towards the 'Clock' symbol  the unit will operate normally as a Timeswitch.
- When the slide switch points towards the 'ON' symbol  the unit will be ON continuously.
- You can operate the slide switch by sliding it up or down.

9

10

If you experience problems, do not immediately
return the unit to the store.
Telephone the Timeguard Customer Helpline:

HELPLINE
01582 544 548

or email helpline@timeguard.com

Qualified Customer Support Coordinators will be online
to assist in resolving your query.



Deta Electrical Co Ltd
Panattoni Park, Luton Road,
Chalton, Bedfordshire, LU4 9TT
Sales Office: 020 8452 1112
or email csc@timeguard.com

www.timeguard.com