

Architectural Exterior Range

Installation instructions for JC17064 GU10 Stainless Steel Spike Light



Warnings & Cautions

- To avoid electric shock, serious injury or property damage, isolate power before installing, removing or servicing the product
- It is recommended that luminaires are installed by a qualified electrician and the installation complies with the local current wiring regulations
- Do not install this product in areas subjected to localized flooding: it has been rated for use in wet locations, but should not be subjected to periods where it is fully immersed in water
- It may be necessary to upgrade your MCBs to allow for increased inrush current
- The light source of this luminaire is replaceable: when the light source reaches its end of life the light source can be replaced by the end user
- Any broken or damaged parts should be replaced as soon as possible. JCC will not accept responsibility for claims arising from sub-standard installations; which will void the warranty
- Damage to seals by overtightening is not covered under the terms of the warranty
- This luminaire is suitable for outdoor use
- These products are designed for connection to a 220-240V~ 50/60Hz supply
- Please check with lamp manufacturer for suitability for use in an enclosed fitting


INSTALLATION

ENGLISH

Specification : GU10 Cap 7W LED max only (not supplied)


220-240V~ 50/60Hz Class I

 Figure 1. Mains input

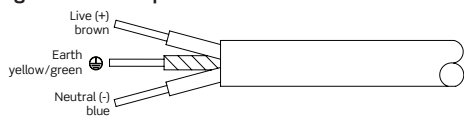

Terminal block must comply to EN 60998-2-1 or EN 60998-2-2

Profile & Dimensions

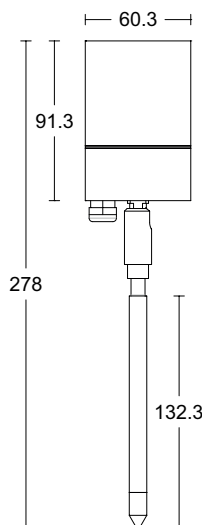

All dimensions in millimetres

- Read instructions and check that you have all of the tools and accessories required to complete the installation correctly. Isolate power supply before starting the installation.

Installation procedure

1. Select a suitable area to install this luminaire.
2. Carefully drive the mounting spike into the ground.
3. Prepare and terminate the supply cable as shown in Fig.1. Use suitable IP rated connector or junction box if required.
4. Fit suitable LED lamp (GU10 7W LED max) by unscrewing the lens cover, be careful to not overtighten cover when screwing back on.
5. Reconnect the power and check that the luminaire is operational.

General maintenance requirements for exterior products:

JCC recommends that all exterior products, especially those with stainless steel components are cleaned with warm water and dried with a chamois leather or absorbent dry cloth. Weathering, environmental pollution and bird droppings should be cleaned off with a non-abrasive cleaner suitable for the material type. To preserve the finish of the product, clean every two to three months. After installation is complete, then bi-annually, grease or lubricate removable fixings, to help ensure maintenance is trouble free.



You can help protect the environment. Please remember to respect the local regulations: hand in the non-working electrical equipment to an appropriate waste disposal centre. The packaging material is recyclable. Dispose of the packaging in an environmentally friendly manner and make it available for the recyclable material collection service.

Important warranty information

This product is supported by a 2-year standard warranty which will extend to 3 years if registered within the first year of purchase. Please register at jcc.co.uk/warranty - Terms and conditions apply.

The installer will be asked to provide the following information, which is detailed on a label attached to the luminaire's chassis:
Product Code/Date Code.

JCC Lighting Products Ltd. Lux Park, Chichester Business Park, City Fields Way, Tangmere, Chichester, West Sussex, PO20 2FT

Technical Support: +44(0)1243 838986 Customer Services: +44(0)1243 838999

V2_Oct_2022_RS