

Surface Mounted PIR Movement Sensor

Overview




The OCCPIR-SURFACE movement sensor is designed to provide automatic control of lighting, heating or ventilation loads. It detects movement using a PIR sensor and turns the load on. When an area is no longer occupied the load will switch off after an adjustable time out period.

An adjustable internal light sensor provides additional energy saving in lighting applications. When an area is occupied, lighting is only switched on when the level of natural light falls below a preset level.


When the sensor is first powered up the PIR sensor will always detect immediately regardless of whether the room is occupied.

Features

Front features

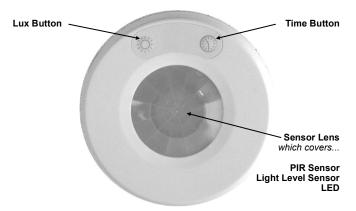

Back features

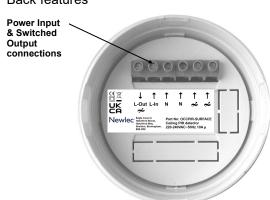

PIR Sensor

Detects movement within the sensor's detection range, allowing load control in response to changes in occupancy.

Light Level Sensor

Measures the overall light level in the detection area

The red LED is used for feedback information during Setup. See **Set-up** section.

Power Input & Switched Output Connector

Used to connect mains power to the sensor and to connect a switched load.

Lux Button

Use to set the Lux level for Lux switching. See Set-up section.

Time Button

Use to set the Time delay after which the load switches off when an area is vacated. See **Set-up** section.


Sensor functionality

Movement Detection

When movement is detected the load will automatically turn on. When the area is no longer occupied the load will automatically switch off after an adjustable time period.

Lux level switching

The OCCPIR-SURFACE has a built-in adjustable lux sensor which will keep the lighting switched off if there is sufficient natural light. The Lux level is set using the Lux Button on the front of the sensor.

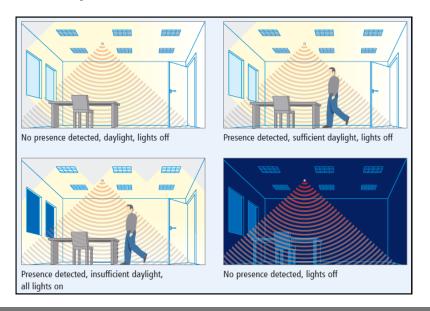


Installation

Choosing a suitable location


The OCCPIR-SURFACE is designed to be ceiling mounted and must satisfy the following criteria:

- The sensor should be sited so that the occupants of the room fall inside the detection pattern overleaf, at a recommended height of 2.8m on the ceiling. Note that the lower the sensor is installed the smaller the detection range will be, subject to the parameters shown on the diagram.
- Avoid positioning the sensor where direct sunlight may enter the sensor element.
- Do not site the sensor within 1m of any lighting, forced air heating or ventilation.
- Do not fix the sensor to an unstable or vibrating surface.

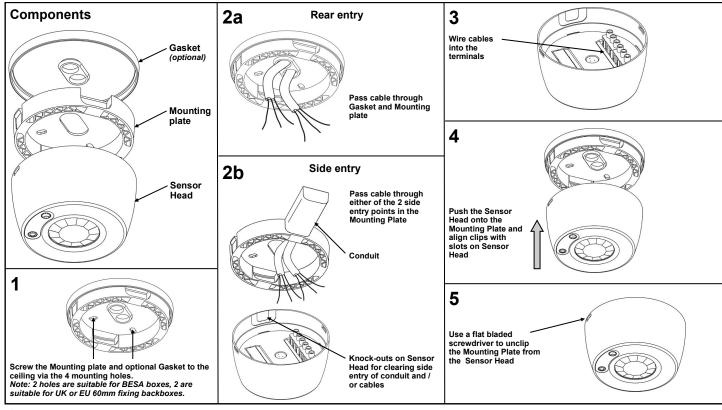

Installation

Wiring diagram

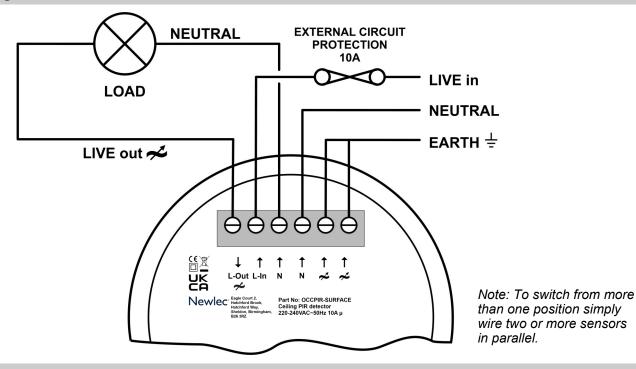

Power-up test procedure

- Power the sensor up—the load should come on immediately.
- Set the Lux level to maximum and the time to minimum.
- Vacate the room or remain very still and wait for the load to switch off (should take no more than 2 minutes).
- Check that the load switches on when movement is detected.
- To set the final Lux level wait until the level of natural daylight is just enough that lighting is required. Starting with the Lux control at minimum, slowly increase the Lux until the lights come on. Note that when the Lux control is at maximum then the lights will always come on with occupancy.
- Set the time required.

Set-up

To program a Time or Lux setting

 Press and release either the Time or Lux Button quickly (presses within 1 second of each other) to access 1 of 5 settings. 1 second after the switch has been released, the LEDs will flash to signify which setting has been loaded.

To find out what the Lux or Time has been set to

Press either switch for more than 3 seconds then release.
The LED will flash to signify the setting.

To lock the programmed settings

- Use to stop accidental re-programming of the sensor.
- Press either switch for more than 10 seconds and do not release. It will toggle between lock and unlock. If the sensor was unlocked, whilst the button is pressed the LED will be lit, after 10 seconds it will extinguish. If the sensor is locked, the LED will flash once after 10 seconds.

Button presses	LED flashes	Time (Lux 🌣
1	*	10 seconds	1 (minimum)
2	☀	5 minutes	3
3	***	10minutes	5
4	***	20 minutes (default)	7
5	***	30 minutes	9 (default) Always on / lux disabled

Fault finding


What if the load does not turn ON?

- Check to see if the live supply to the circuit is good. Strap across the L and LIVE OUT terminal to turn the load on.
- If the supply and wiring are good, check the Lux level setting. Increase the Lux level setting to allow the controller to turn on at higher ambient natural light level.
- If the detection range is smaller than expected, check the Detection Diagram above. Rotating the sensor slightly may improve the range.

What if the load does not turn OFF?

- Ensure that the area is left unoccupied for longer than the Time Out Period.
- Ensure that the sensor is not adjacent to circulating air, heaters or lamps.

Detection diagram

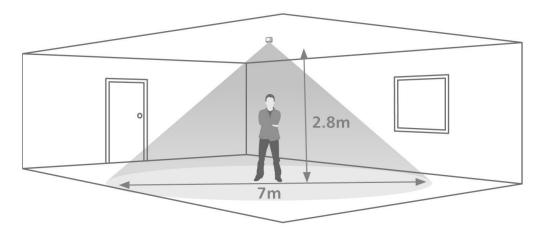

Area of high sensitivity

Area of lower sensitivity

Technical data

See diagrams opposite **Dimensions**

0.15kg Weight

230VĂC +/- 10% Supply Voltage

Frequency 50Hz Circuit protection 10A

Maximum Load 10 Amp resistive and incandescent lighting

6 Amp fluorescent lighting and resistive 3 Amp compact fluorescent lighting

3 Amp low energy lighting

3 Amp low voltage lighting (switch primary of transformer)

Fluorescent lighting (max 6 fittings

recommended)

For fluorescent lighting total power factor correction capacitance must not exceed

40µF.

3 Amp fans and ventilation equipment Switch SON lighting loads via a contactor

Minimum load 100mA

On 572mW, Off 670mW Power consumption

 2.5mm^2 **Terminal Capacity** Temperature . -10°C to 35°C

5 to 95% non-condensing Humidity

Material (casing) Flame retardant ABS and PC/ABS

IP rating 40 without gasket. 54 with gasket.

Compliance EMC-2014/30/EU


LVD-2014/35/EU

IMPORTANT NOTICE!

Type

This device should be installed by a qualified electrician in accordance with the latest edition of the IEE Wiring Regulations and any applicable Building Regulations.

OCCPIR-SURFACE (with gasket fitted)

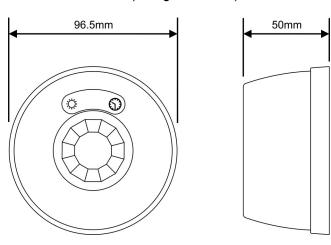



Eagle Court 2, Hatchford Brook, Hatchford Way, Sheldon, Birmingham, B26 3RZ, United Kingdom Rexel Group, 13 boulevard du Fort de Vaux, CS 60002 — 75838 Paris Cedex 17, France