



# VITM-ROSE

## Vitesse Modular Ceiling Rose

### VITM-ROSE mains wiring

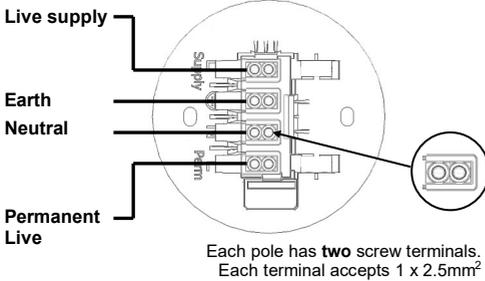

 
### VITM-ROSE connector wiring



### Conduit box to VITM4-S or VITM6-S connection

Use a VITM-ROSE when there is a need to take power from a conduit box. Plug the connector into the VITM-ROSE and wire the other end of the lead into the terminals of the VITM4-S (illustrated below) or VITM6-S. Pre-wired versions are available, VITM4-SL1 VITM6-SL1. See Product Guides for the VITM4-S and VITM6-S wiring details.

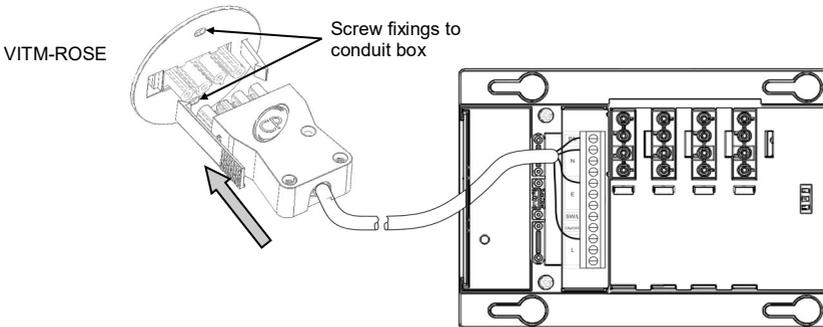

### Technical data

Voltage 230VAC +/- 10%  
Frequency 50Hz  
Terminal capacity 2.5mm<sup>2</sup>  
Temperature 0°C to 35°C  
Power 16A  
Compliance LVD-2014/35/EU  
For further compliance information visit [www.cpelectronics.co.uk/compliance](http://www.cpelectronics.co.uk/compliance)

**For lighting purposes only with suitable circuit protection. For fixed wiring only.**

#### IMPORTANT NOTICE!

This device should be installed by a qualified electrician in accordance with the latest edition of the IEE wiring regulations.