



4521/31

45A DP 'SLIM LINE' COOKER CONTROL UNITS

BS 4177 & BS 1363-2

PACK QTY

45A DP main switch and 13A switch socket outlet. Faceplate marked 'cooker' 1 **4521/1**

45A DP main switch and 13A switch socket with neon indicators. Faceplate marked 'cooker' 1 **4521/31**

For technical information please see page 113



4520/31

45A DP COOKER CONTROL UNITS

BS 4177 & BS 1363-2

PACK QTY

45A DP main switch and 13A switch socket outlet. Faceplate marked 'cooker' 1 **4520/1**

45A DP main switch and 13A switch socket with neon indicators. Faceplate marked 'cooker' 1 **4520/31**

For technical information please see page 113



4523/3

50A DP COOKER CONTROL UNITS

BS EN 60669-1

PACK QTY

50A DP Control Switch marked 'cooker' 1 **4523**

50A DP Control Switch marked 'cooker' and fitted with neon indicator 1 **4523/3**

Blank Faceplate 1 **4211/BLANK**

For technical information please see page 113



4500/31

50A DP CONTROL SWITCHES

BS EN 60669-1

PACK QTY

50A DP Control Switch 5 **4500**

50A DP Control Switch marked 'cooker' 5 **4500/1**

50A DP Control Switch fitted with neon indicator 5 **4500/3**

50A DP Control Switch marked 'cooker' and fitted with neon indicator 5 **4500/31**

For technical information please see page 113



4506
4507



4075

45A CABLE OUTLETS

BS 5733

PACK QTY

45A Cable Outlet with terminals and cable clamp 10 **4506**
Terminals will accept 2 x 10mm² cable

45A Cable Outlet with cable clamp 10 **4507**
Cable clamp will accept 1 x 16mm² through cable

20A CORD OUTLET

BS 5733

PACK QTY

20A Cord Outlet with cable clamp 10 **4075**

For technical information please see page 114

For dimensions please see page 140-141