



20/32



63/100



125/160/200



315/400

FUSE COMBINATION UNIT 20A-32A

20A	SP&N TP&N 4P	supplied with 20A fuses	190201NF 190203NF 190204F
32A	SP&N TP&N 4P	supplied with 32A fuses	190321NF 190323NF* 190324F
Accessories	Cable Spreader Box Copper Isolator Link Each		19032CSB 19LK32
Modular width	4		
Terminals	20A-32A	16mm ² Max	Cable Clamp
Spreading room	up to 10mm ² 4 Core *		

FUSE COMBINATION UNIT 63A-100A

63A	SP&N TP&N 4P	supplied with 63A fuses	190631NF 190633NF* 190634F
100A	SP&N TP&N 4P	supplied with 100A fuses	191001NF 191003NF* 191004F
Accessories	Cable Spreader Box Copper Isolator Link Each 63A Copper Isolator Link Each 100A Castell Lock (factory fitted)		19100CSB 19LK63 19LK200 Suffix CLK
Modular width	5		
Terminals	63A-100A	63A-Cable Clamp 25mm ² 100A- M8 Hole	
Spreading room	up to 70mm ² 4 Core *		
Cable lug palm copper size	20mm wide Maximum		

FUSE COMBINATION UNIT 125A-200A

125A	SP&N TP&N 4P	supplied with 125A fuses	191251NF 191253NF 191254F
160A	SP&N TP&N 4P	no fuses supplied	191601N 191603N* 191604
200A	SP&N TP&N 4P	no fuses supplied	192001N 192003N 192004
Accessories	Cable Spreader Box Copper Isolator Link Each Castell Lock (factory fitted)		19200CSB 19LK200 Suffix CLK
Modular width	6		
Terminals	125A-200A		M8
Spreading room	up to 150mm ² 4 Core *		
Cable lug palm copper size	20mm wide Maximum		

FUSE COMBINATION UNIT 315A-400A

315A	TP&N 4P	no fuses supplied	193153N* 193154
400A	TP&N 4P	no fuses supplied	194003N 194004
Accessories	Cable Spreader Box Copper Isolator Link Each Castell Lock (factory fitted)		19400CSB 19LK400 Suffix CLK
Modular width	8		
Terminals	315A-400A		M10
Spreading room	up to 300mm ² 4 Core *		
Cable lug palm copper size	45mm wide Maximum		

* Spreading Room is allowed for at one end only. To fit a 4 core cable at both ends an additional Cable spreader box will be required. 1 Module = 52.5mm