

Conventional Fire Systems



CFP

Activ

CFP STANDARD 2-8 ZONE CONVENTIONAL FIRE PANELS TO EN54-2/4

Order Code	Description
CFP702-4	CFP Standard 2 zone panel. Max. 2 x 3.2Ah batteries
CFP704-4	CFP Standard 4 zone panel. Max. 2 x 3.2Ah batteries
CFP708-4	CFP Standard 8 zone panel. Max. 2 x 3.2Ah batteries
CFP760	CFP 8 zone repeater. Max 8 per system. Max. 2 x 3.2Ah batteries
BF319	Fire alarm control panel Mains keyswitch
S-KEY	Spare key for use with CFP Main and Repeater panels
CFP761	CFP/XFP network driver card (1 per repeater system, fit at main)
CFP762	CFP Relay output card (reset, fault, aux & remote relay outputs)
CFP763	CFP Relay output card (as per CFP762 + 8 output per zone relays)
CFP764	CFP Relay output card (8 output per zone relays for CFP708-4)
CFP765	CFP Relay output card (4 output per zone relays for CFP704-4)
CFP766	CFP Relay output card (2 output per zone relays for CFP702-4)
BF362	Barrier interface unit (for use with intrinsically safe detectors)
BF354	EN54-13 Interface Board. Needs 2 BF355 monitoring modules
BF355	EN54-13 Sounder Circuit Fault Monitoring Module



CFP702-4 / CFP704-4 / CFP708-4

For details on our new Hush-Activ Domestic Fire Alarm Kits for residential dwellings, see page 20

CFP ECONOMY 2-8 ZONE CONVENTIONAL FIRE PANELS TO EN54-2/4

CFP Economy panels DO NOT include onboard relays, expansion connections, coincidence, zone delay or non-latching zone facilities.

Order Code	Description
CFP702E-4	CFP Economy 2 zone panel. Max. 2 x 3.2Ah batteries
CFP704E-4	CFP Economy 4 zone panel. Max. 2 x 3.2Ah batteries
CFP708E-4	CFP Economy 8 zone panel. Max. 2 x 3.2Ah batteries
BF319	Fire Alarm Control Panel Mains Keyswitch



CFP702E-4 / CFP704E-4 / CFP708E-4

MANUAL CALL POINTS TO EN54-5

Order Code	Description
BF370S	Sycall red surface mounting no break fire call point, 470/680Ω
BF370SFP	White flush mount plate for use with BF370S
BF370S/W	Sycall red IP66 surface mounting no break fire call point, 470/680Ω
BF370SC	Protective cover for Sycall fire call points
BF370SK	Test key for Sycall fire call points



BF370S

For Manual Call Point Stoppers, see page 13