Installation Sheet )

KSR1290-1292

Read these instructions before commencing installation. Please give these instructions to the owner/occupier after installation to retain for future reference/maintainence.







IP65 ⊕ 🖺 ( € ( 0.5m | 240VAC~50Hz 35W Max.

These fittings are Class I and must be Earthed

## Important Information

It is recommended that these luminaires are installed and fitted by a qualified electrician ensuring the installation complies with current IEE wiring regulations & local building control. These products are designed for connection to a 240V~50Hz supply.

Any faulty, broken or damaged luminaires should be replaced immediately.

KSR will not accept responsibility for any claims arising from a poor installation.

Please Note: The limited warranty shall be deemed null and void in the following circumstances: Failure by the installer, end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature, humidity conditions, fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts.

## Important User Advice

Always safely isolate mains supply before installing/servicing.

KSR recommends a cleaning schedule at least quarterly using non abrasive cleaners.

Also installing a water repellent grease on all serviceable screws.

When using third party connectors always ensure that they are installed as per the manufacturers instructions and are at least equal to the luminaires IP rating (KSR recommend IP68). Failure to install correctly can cause issues with moisture ingress and will invalidate the products warranty.

At the end of life the luminaire is classed as WEEE under directive 2014/30/EU and should be disposed of in accordance with local legislation.

## **Installation Procedure**

KSR1290 - Ensure mains supply is safely isolated. Locate luminaire. Remove base by loosening the three grub screws, secure the base in position using suitable fixings. Prepare and terminate the supply cable ensuring a watertight seal around the cable, this product is not suitable for loop-in, loop-out connections. Re-fit to base, unscrew the lamp cap (anti-clockwise) fit lamp and re-fit lamp cap ensuring that the seal is in place. Turn on mains supply and test luminaire.

KSR1291 - Ensure mains supply is safely isolated. Locate luminaire. Remove base by loosening the three grub screws, secure the base in position using suitable fixings. Prepare and terminate the supply cable ensuring a watertight seal around the cable, this product is not suitable for loop-in, loop-out connections. Re-fit to base, unscrew the lamp caps (anti-clockwise) fit lamps and re-fit lamp caps ensuring that the seals are in place. Turn on mains supply and test luminaire.

KSR1292 - Ensure mains supply is turned off. Locate luminaire. Installation of the spike version will require a suitable IP rated connector fitted as per the manufacturers instructions.

Please note the pre-wired cable is not suitable for in ground use.


Prepare and terminate the supply cable. Unscrew the lamp cap (anti-clockwise) fit lamp and re-fit lamp cap ensuring that the seal is in place. Turn on mains supply and test luminaire.



KSR1290

Available Finish: 316L Grade Stainless Steel

\_ 63mm 63mm

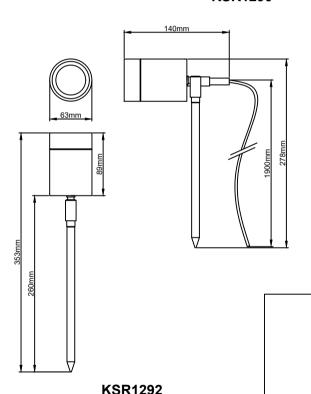

## **Lamp Details**

KSR1291

Lamp Cap: GU10 Max Wattage: 35W

KSR Lighting recommend only branded lamps For example: KSR, Sylvania, GE, Philips or Osram

KSR Lighting Aftersales: 023 92 674343 E-mail: aftersales@ksrlighting.com

