 


LUXTREME SL25R

LUXTREME SL25R

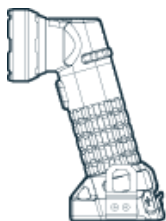


Our Luxtreme SL line of spotlights offer extraordinary beam distance and close range flood pattern in an ergonomic and rugged design.

LIGHT MODES


MODES	LUMENS	HOURS	METERS
SPOT	500	2	400
FLOOD	300	3.5	25
RED	30	6	12

FIRST USE

 Move battery to compartment one before operation! This unit ships with the battery in the Spare Battery Compartment (Compartment 2). Move the battery to the Main Battery Compartment (Compartment 1) before operation.

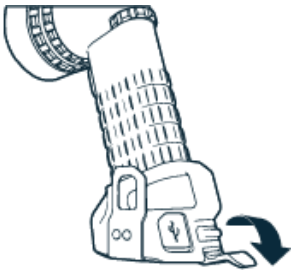

 
BATTERY COVER To remove the battery, unlatch the Battery Cover. **BATTERY** This unit has two battery compartments. The Main Battery Compartment (Compartment 1) is located towards the back of the unit. The Spare Battery Compartment (Compartment 2) is located on the trigger side of the unit. Before operation, move the battery from Compartment 2 to Compartment 1.

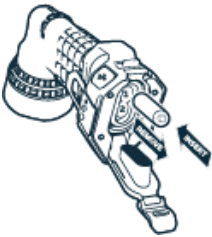

OPERATION

Rotate the Mode Select Dial to cycle through light modes: **Off** > **Red COB** > **White COB** > **Spot**

Press the trigger button to turn the unit **ON**. Press again to turn **OFF**.

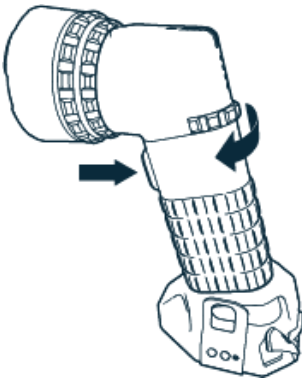


Smart Power Control seamlessly transitions through light modes.

POWER INDICATOR

This product uses 4 LED lights just above the Mode Select Dial.

- **100% battery:** 3 green, 1 red
- **75% battery:** 2 green, 1 red
-  English on, 1 red


- **25% battery:** 1 red

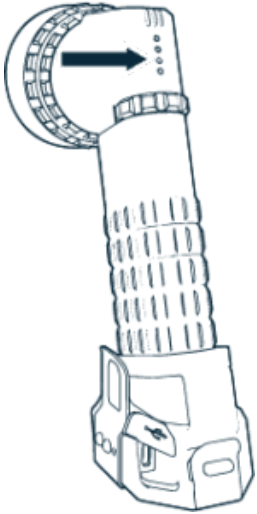

Press the trigger button while Mode Select Dial is in the **Off** position to show battery life.

CHARGING

Use the included charging cable to recharge the Luxtreme SL. The last indicator light will flash when the unit is charging. When charging is complete, all indicators will light continuously.

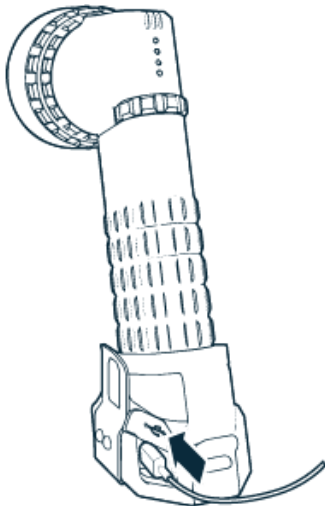

BELT CLIP

The Belt Clip is designed so that it can be mounted on either side of the base. Simply screw the Belt Clip in the desired position.