



CZ001

Auxiliary Interface

Indicates the position of the associated RCCB on, off or tripped. Also acts as RCCB interface with standard MCB auxiliaries MZ203-MZ206.

Description	Width (17.5mm)	Cat ref.
2 NO / 2NC 6A AC1 230V	1 Mod	CZ001



MZ203

Shunt Trip

Allows remote tripping of the associated device. Operation of the coil is indicated by a flag on the product fascia.

Description	Width (17.5mm)	Cat ref.
230Vac - 400Vac 110V - 130Vdc	1 Mod	MZ203
24 - 48Vac 12 - 48Vdc	1 Mod	MZ204



MZ206

Under Voltage Release

Allows RCCB to be closed, only when voltage is above 85% of U_n . RCCB will automatically trip when voltage falls to between 70-35% of U_n (230V). Operation of the release is indicated by a flag on the product fascia.

Description	Width (17.5mm)	Cat ref.
230Vac	1 Mod	MZ206
48Vac	1 Mod	MZ205