


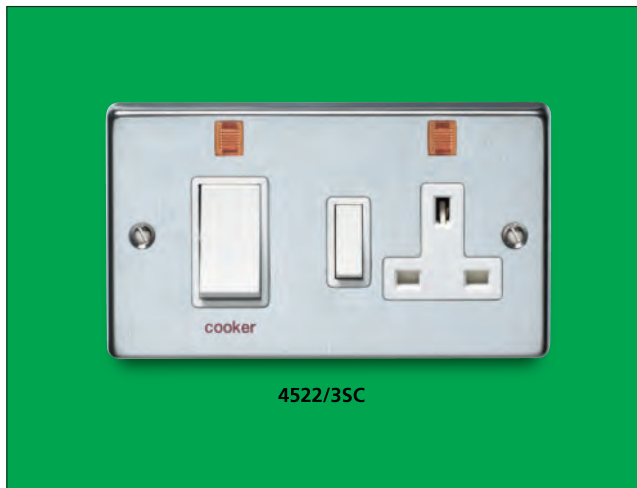

4522/3SC

45A DP SLIM LINE COOKER CONTROL UNIT

BS 4177 & BS 1363

PACK QTY

45A DP main switch and
13A Switched socket outlet
Faceplate marked 'COOKER'

1 **4522/3** _ _

For technical information please see page 113



4512/3PB

50A DP CONTROL SWITCHES

BS EN 60669-1

PACK QTY

DP switch

5 **4512/** _ _

DP switch with neon indicator

5 **4512/3** _ _

For dimensions please see page 143

For technical information please see page 113

Available in Satin Chrome (**SC**), Bronze (**BZ**), Highly Polished Chrome (**HPC**), Polished Brass (**PB**), Stainless Steel (**SS**), and Polished Stainless Steel (**PSS**).

Add suffix to List No. ie 4522/3 - Cooker Switch in Bronze = 4522/3**BZ**.

For Black interiors add suffix **BK** to List No. ie 4522/3SC - Cooker Control Switch in Satin Chrome with Black interior = 4522/3**SCBK**.



4506
4507

4506
rear view

45A CABLE OUTLETS

BS 5733

PACK QTY

With terminals and cable clamp
Terminals will accept 2 x 10mm² cable

10 **4506**

With cable clamp

10 **4507**

Cable clamp will accept 1 x 16mm² through cable

For dimensions please see page 140

For technical information please see page 114