

① Please leave these instructions with the end user for future reference.



RCDFSP 13A RCD Fuse Spur

① RCDFSP Technical specifications



- ✓ **Voltage Rating: 240V AC 50Hz**
- ✓ **Current Rating: 13A**
- ✓ **Rated Trip Speed: <40mS**
- ✓ **Terminal Capacity: 6mm² (max)**
- ✓ **Mechanical Latching RCD Contact Break: Double Pole**
- ✓ **Independently Tested to: BS5733 & BS7288**

① General Information:

- Added protection against the risk of electrocution
- The spur can be flush or surface mounted
- Integral cord outlet and cable clamp
- The fuse holder can be locked out for safety
- Does not need resetting after a power loss

This spur unit has been designed for storage and use between -5°C and +40°C and at an altitude of no greater than 2000 metres above sea level. Care should be taken not to subject the unit to misuse, such as abnormal pollution by smoke, chemical or flammable fumes, salt laden spray, prolonged periods of high humidity or other abnormal conditions.


① For Your Protection:

Electricity can be dangerous and the use of an RCD should not be regarded as a substitute for basic electrical safety precautions. Always switch off from supply when working on equipment. This device will protect against live and neutral leakage faults to earth, it will not protect against electric shock due to contact with both conductors, short circuits between live and neutral or a fault in the wiring supplying this device. Should the RCD spur unit repeatedly trip with an appliance connected or fail to trip when tested, in accordance with the instructions, return to the place of purchase.

NOTE: Remove this RCD from the circuit before performing any high voltage insulation tests.

① Installation:

Install the RCD spur and connect the wires as shown in the diagram below:

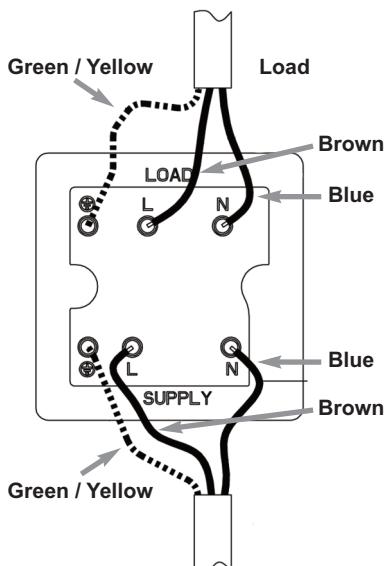

① Operation: The RCD socket should be tested each time before use!

Testing Procedure:

- 1.) Press the green RESET button.
- 2.) The window indicator will turn red.
- 3.) Press the blue TEST button.
- 4.) The window indicator will disappear - the RCD has tripped successfully*.
- 5.) To reset - press the green button and use as normal spur.

Fit a **BS1362** fuse in accordance with the equipment manufacturers specification.
* If an indicator fails to work, do not use and return the unit to the place of purchase.

Note:

If the red indicator disappears once the spur has been reset this may mean that the appliance or the cable lead is faulty, and should be checked by a qualified electrician.

Europa House
Airport Way

Luton, Beds, LU2 9NH

Tel: 01582 692 440 / Fax: 01582 692 450

e-mail: sales@europacomponents.com

website: <http://www.europacomponents.com>