


14" BOX FAN USER LEAFLET

Please read these instructions carefully before operating the fan

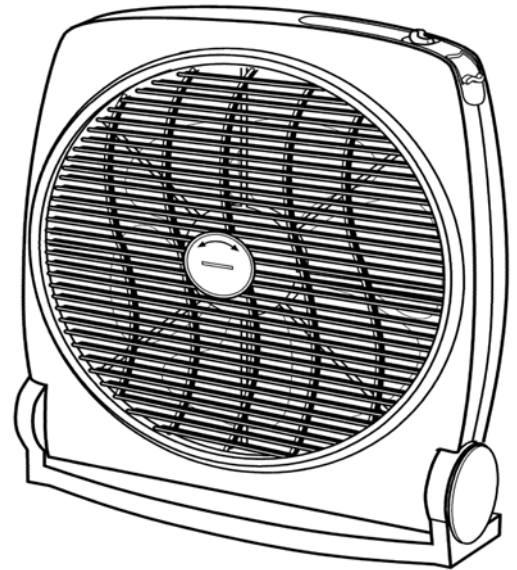

TECHNICAL SPEC

RATED VOLTAGE: - 220-240V AC

RATED FREQUENCY: - 50Hz

IMPORTANT

- ◆ Ensure that the voltage marked on the fan agrees with your mains voltage.
- ◆ This fan must **NOT** be used in a bathroom.
- ◆ Always ensure that a fuse approved to BS 1362 is fitted and that it is the correct rating for the appliance.
- ◆ **IF IN DOUBT CONSULT A QUALIFIED ELECTRICIAN**

OPERATING THE FAN

Fold out the two feet from the base of the fan (see diagram opposite)

To control the louver on the front of the fan select the following: -

OFF will stop the grille rotating (for a fixed direction of airflow)

ON will start the grille rotating (for a variable direction of airflow)

Fan speed control: -


0 = OFF

1 = LOW SPEED

2 = MEDIUM SPEED

3 = HIGH SPEED

The fan pitch can be adjusted from 3 to 20 degrees, by holding the fan base and then moving the fan body forwards or backwards. The fan will click into the desired position.

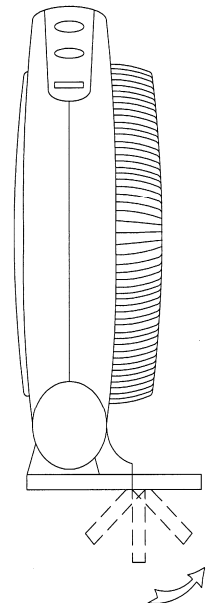

CLEANING

Plastic parts should only be cleaned with mild soap and a damp cloth or sponge. Never use solvent or abrasive cleaners.

NOTES FOR SAFE OPERATION

- ◆ Never insert any objects through the guard when the fan is running.
- ◆ Always disconnect the fan when removing the guard for cleaning.
- ◆ Make sure that the fan is on a stable surface when operating to avoid overturning.
- ◆ Do not use the fan near an open window or door. (Rain may create an electrical hazard).
- ◆ Do not use the fan in an area of high humidity, or a dusty environment.