 


Mini Tower Fan with Timer

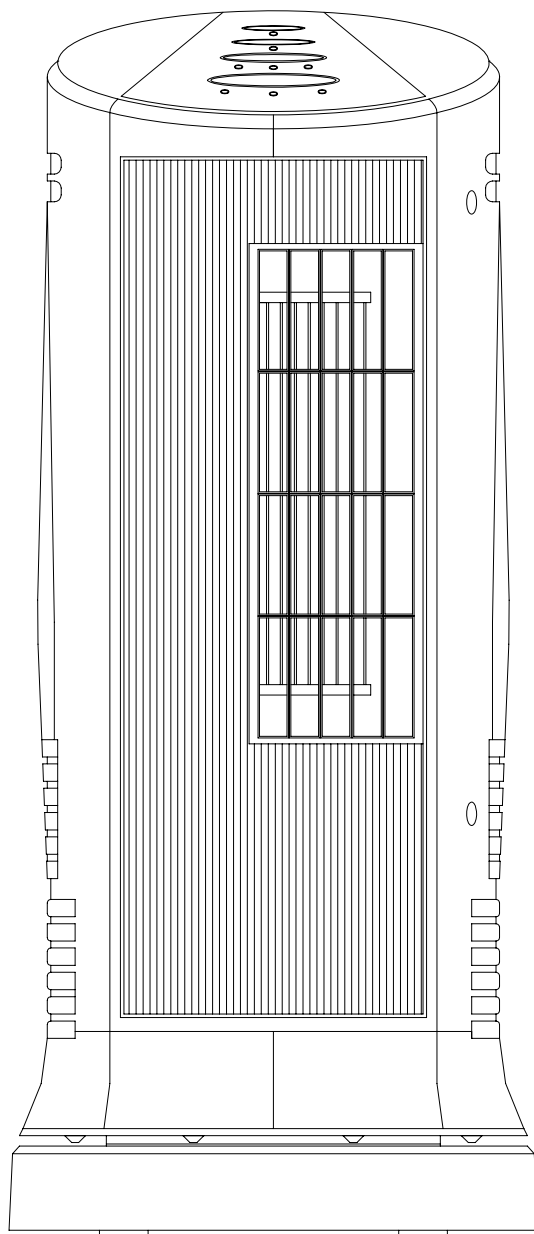

**PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE
OPERATING THE FAN**

Safety and Guidance notes


When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and injury to persons.

- Read all instructions carefully before using the fan
- Ensure that the voltage marked on the fan agrees with your mains voltage.
- This fan must not be used in a bathroom
- Always ensure that a fuse approved to BS 1362 is fitted and that it is the correct rating for the fan.
- Keep the unit away from heated surfaces and open flames
- Keep the supply cord out of heavy traffic areas. DO NOT let the cord hang over the edge of a desk, table or counter.
- Never put the cord under rugs, near radiators, stoves or heaters
- DO NOT immerse in water or other liquids.
- This appliance is not intended for use by young children or infirm persons without supervision.
- DO NOT operate the fan if it has a damaged cord/plug or has been dropped or damaged in any manner. (If this occurs consult a qualified electrician/service engineer)
- DO NOT operate in the presence of explosives and/or flammable fumes
- Use the fan only for interior household use as described in this manual.
- DO NOT use outdoors
- Always unplug the fan before moving it, cleaning or whenever the Electric fan is not in use.
- Always make sure that the fan is sited on a dry stable level surface.
- Never insert objects through the guard when the fan is running
- DO NOT use this fan with any solid-state speed control devices
- DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. (The inside of this unit contains no user serviceable parts).

If in doubt consult a qualified electrician

Operating instructions

1. Site the fan on a dry level surface.
2. Plug the cord into a standard 230V~50Hz electrical outlet
3. The speed is adjustable through low, medium and high speeds by pressing the “ON” button successively.

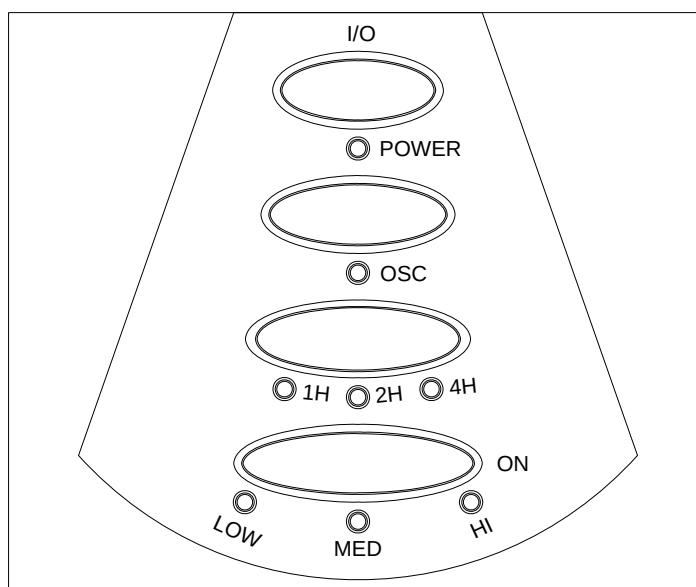


4. To start and stop the fan oscillation function, push the button Marked “OSC” push once to start and again to stop the function.
5. To start and stop the timer, press the “Timer” button. Press the button successively to move through the time settings (1hr,2hr,4hr).
6. The fan can be turned off by pressing the “I/O” POWER button on the panel.

Cleaning/Maintenance instructions

Follow these instructions correctly to care for your Mini Tower Fan.

- Always unplug the fan before cleaning or maintenance
- DO NOT allow water on or into the electrical motor housing
- We recommend the periodic cleaning of this fan by lightly running a vacuum cleaner nozzle over the grille of the fan to remove any dust or dirt that may have accumulated inside or on the fan.
- Using a soft, moist cloth, with a mild soap solution, carefully clean the fan housing. Please use caution around the grille. DO NOT allow the motor or other electrical components to be exposed to water.

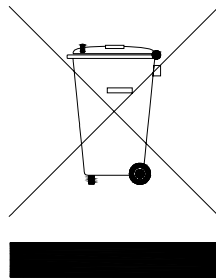

**This product should not be disposed of with household waste.
Please recycle where facilities exist.
Check with your local authority for recycling advice**

Supplied by APL