

# Vent-Axia®

## REMOTE VISUAL CONTROLLER

### Model:- RVC

**IMPORTANT- READ THESE INSTRUCTIONS FULLY BEFORE COMMENCING INSTALLATION. THIS IS AN EXTRA LOW VOLTAGE ELECTRONIC CONTROLLER. DO NOT CONNECT TO MAINS SUPPLY.**

1. This equipment is designed to be used with the Vent-Axia ITC or ITC-DS controllers only.
2. This equipment must not be used where it is liable to be subjected to water spray from hoses, etc., or where the ambient temperatures may exceed 40 C.

#### MOUNTING

The controller can be mounted on any surface or recessed single gang backbox.

#### GENERAL WIRING

#### WARNING - ISOLATE MAINS SUPPLY BEFORE MAKING CONNECTIONS

1. All electrical connections should be made by a properly qualified electrician.
2. The connections between the RVI and the ITC (and ITC-DS) are Extra Low Voltage data link (100M long max.). We recommend the use of 6 core 7/0.2mm signal cable. VA ref: 450290.
3. Please consult the ITC and ITC-DS installation instructions for wiring details.

#### OPERATING STATUS



