


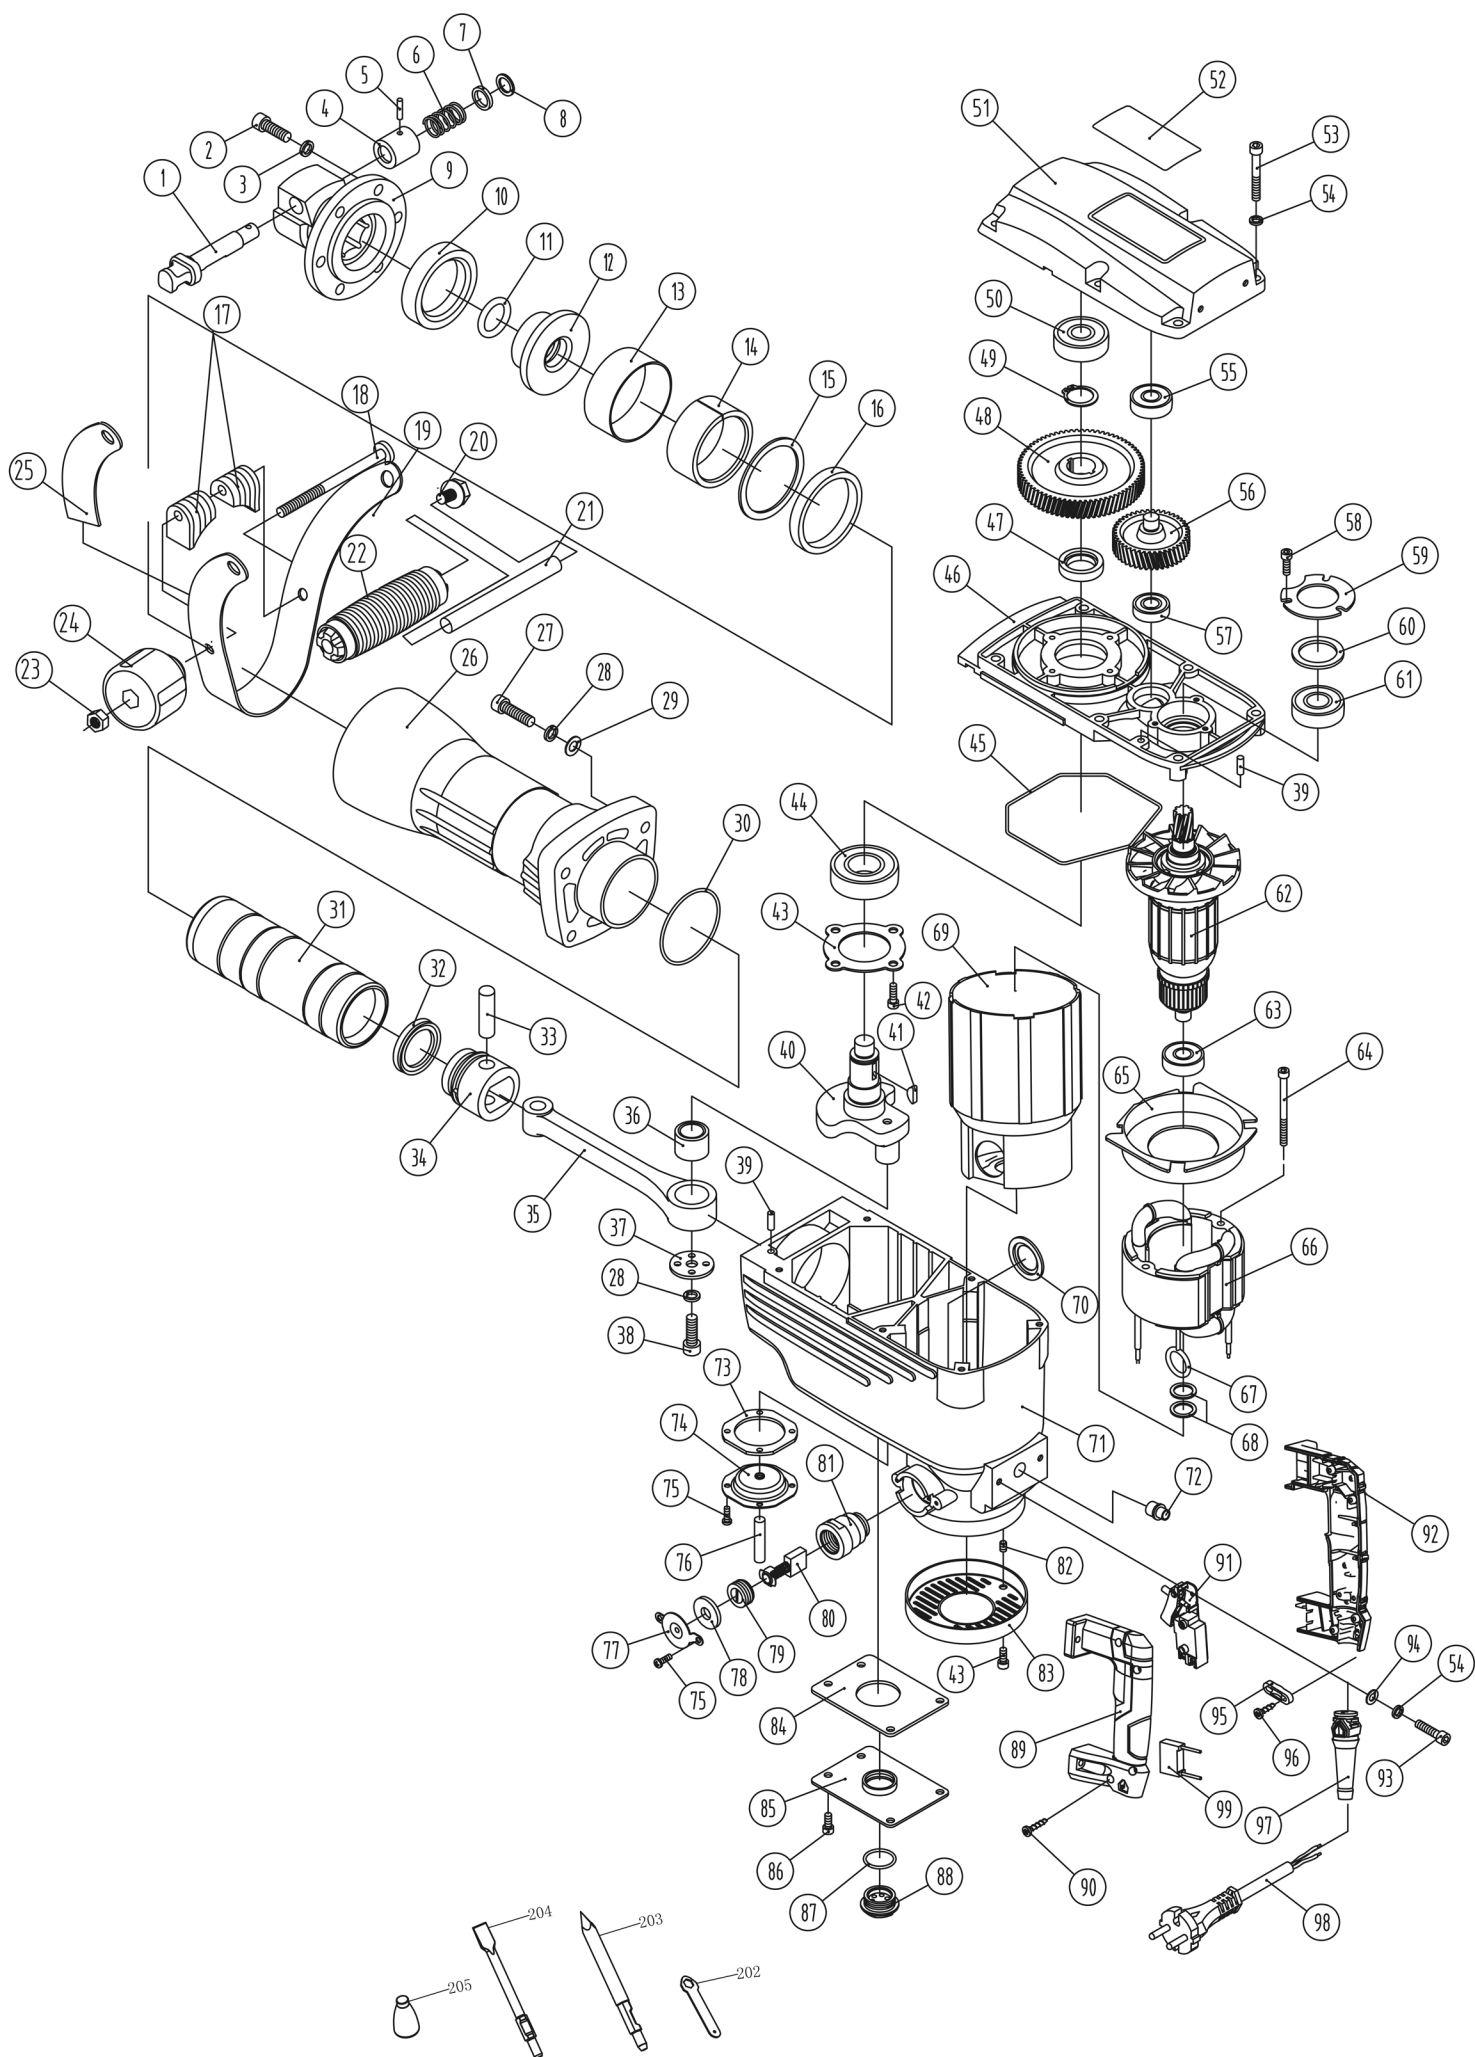



Ersatzteile / Spare parts

AB1700

**Abbruchhammer
Demolition Hammer**

5908201942 / 5908203901

0188

update:26.09.2019

Skizze	Art.Nr.	Benennung	description
A 01	5908201003	Arretierstift	Locking Stick
A 02	02091265	Zylinderschraube M10x35 12.9	screw
A 03	02012708	Federring A10	spring washer
A 04	3908201024	Federgehäuse	Spring Cover
A 05	3908201023	Stift	Locking Pin
A 06	3908201025	Feder	Locking Stick Spring
A 07	3908201026	Dämpfer	Locking Stick Spring Washer
A 08	5908201002	Scheibe	Locking Stick Washer
A 09	5908201001	Vordere Abdeckung	front Cover
A 10	5908201004	Dämpfer	Small Anti-Vibration Ring
A 11	3908201018	O-Ring	O ring
A 12	5908201005	Schafthülse	aluminium cover
A 13	3908201020	Einführung	opening sleeve ring
A 14	5908201006	Gehäuse	Opening Sleeve
A 15	3908201021	Führungsscheibe	big washer
A 16	5908201007	Röhrenring	opening sleeve anti-vibration ring
A 17-25	5908201065	Handgriff kpl.	handle assembled
A 26	5908201009	Zylindergehäuse	front placket
A 27	3908201031	Zylinderschraube M8x35 12.9	screw M8x35 12.9
A 28	02012707	Federring A8	Spring washer A8
A 29	02012506	Scheibe A8	Washer A8
A 30	3908201033	O-Ring	front placket seal
A 31	5908201010	Schlagbolzen	Impact Hammer
A 32	5908201066	Kolbenring	piston ring
A 33	3908201036	Kolbenbolzen	piston pin
A 34	5908201067	Kolben	piston
A 35	3908201038	Pleuel	Connecting Rod
A 38	02091249	Zylinderschraube M8x30	Screw M8x30
A 39	3908201042	Stift 5x14	straight pin
A 41	5908201018	Passfeder	semicircular key
A 43	02091222	Zylinderschraube M5x10	bearing cover
A 45	5908201015	Dichtung	seal ring
A 40	5908201019	Kurbelschaft	Spindle
A 46	5908201041	Innere Abdeckung	Middle Cover
A 47	5908201017	Distanzbuchse	spacer
A 48	5908201068	Zahnrad groß	big gear
A 49	01047119	Sicherungsring A22	Clip Ring A22
A 51	5908201014	Getriebegehäuse	Up Cover
A 53	02091242	Zylinderschraube M6x45	Screw M6x45
A 56	5908201069	Zahnrad klein	small gear
A 58	3908201063	Senkschraube M5x16	Screw M5x16
A 62	5908201070	Rotor	rotor
A 64	3901203257	Schraube 4.8x60	screw 4.80x60
A 66	5908201012	Stator	Stator
A 65	5908201064	Lüfterabdeckung	anti-wind ring
A 68	5908201008	Federscheibe	Front Placket inner Ring
A 71	5908201043	Gehäuse	Housing
A 73	5908201024	Dichtung	rubber washer
A 74	5908201071	Schmierdeckel	Grease
A 75	02798511	Linsenschraube M4x10	screw
A 76	5908201026	Ölfilz	Grease Stick Ø8x45
A 77	3908201094	Gehäusekappe	carbon brush holder gland
A 78	3908201093	Gummikappe	anti-vibration washer
A 79	3908201092	Kohlebürstenabdeckung	carbon brush holder cover
A 80	3908201091	Kohlebürste	Carbon brush
A 81	5908201042	Kohlebürstenhalter	Carbon Brush Holder
A 83	5908201023	Hintere Abdeckung	back cover
A 84	5908201027	Dichtung	seal washer
A 85	5908201028	Gehäuse-Schild	Grease Cover
A 87	3908201088	Dichtung Ölschauglas	Grease Hole Seal



Ersatzteile / Spare parts

AB1700

**Abbruchhammer
Demolition Hammer**

**5908201942
0188**

update:26.09.2019

Skizze	Art.Nr.	Benennung	description
A 88	3908201089	Ölschauglas	Grease Hole
A 89	5908201072	Handle Left	main handle Left
A 90	02798124	Linsenschraube 4x16	Screw ST4x16F
A 92	5908201073	Handle Right	main handle Right
A 93	02091239	Zylinderschraube M6x30	Screw M6x30
A 95	3908201099	Kabelklemme	cord clamp
A 98	3908201101	Kabel	cord&plug
A 98	3908201116	Kabel CH-Stecker	cord CH-Plug
A 99	3908201103	Kondensator 0.33µF	Capacitor 0.33µF
A 202	5908201039	Ringschlüssel	spanner
A 203	3908201109	Spitzmeißel	point chisel
A 204	3908201108	Flachmeißel	flat chisel
A 205	3906217043	Ölflasche	oil bottle
A o.Abb.	5908201038	Koffer Kunststoff	BMC
A o.Abb.	5908201040	Koffer Metall	Metal Case
A o.Abb.	5908201075	Koffer Kunststoff mit Rollen	BMC with Rolls