


OPPLE

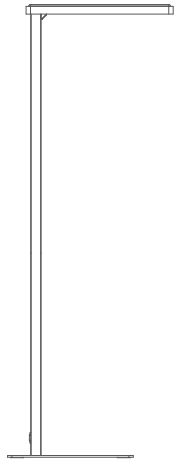


Free Floor Standing Falcon





Assemble

Warning:
Do not connect to power until assembly is complete.

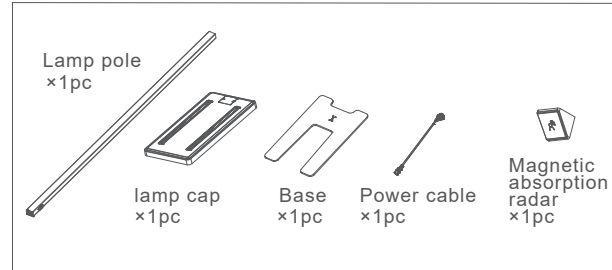Packing list


Part name:



Installation kit			
Connect the fixed lamp cap to the upper lamp pole	Connect the fixed base to the lower lamp pole	Fixed lamp cap	wrench
 ×5pcs	 ×3pcs	 ×1pc	
Hexagon socket head cap screw M4*16	Hexagon socket head cap screw M4*20 flat spring washer combination screw M4*20	Hexagon socket countersunk head screw-M5*12	allen key

Assemble Steps


1. Installation base and lamp pole (5pcs screws locked).
2. Remove the top cover of the lamp cap with a wrench.

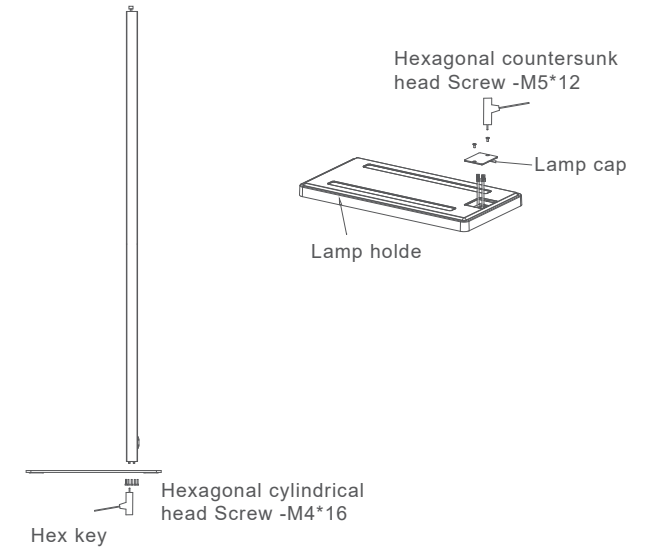



3. Insert the lamp pole into the lamp holder.

4. Lock the lamp pole and lamp cap with 3 screws; The wires between the lamp pole and the lamp head are connected through male and female terminals.

Hexagonal cylindrical head Screw flat spring washer set Screw -M4*20

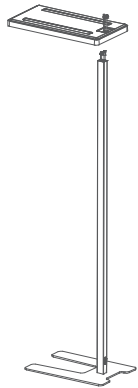


Hexagonal countersunk head Screw -M5*12

 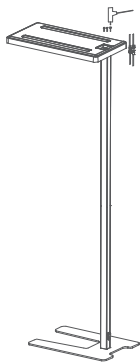


Male and female terminals are connected Locally enlarged image


5. Install the top cover of the lamp cap; Finally, use 2 screws to lock the top cover of the lamp.

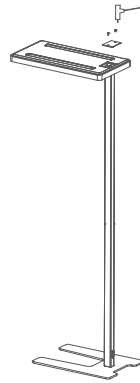


6. Installing magnetic absorption radar.

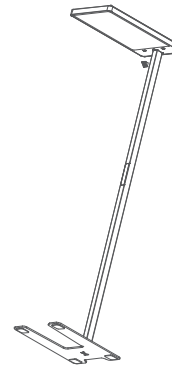

7. Installing the power plug.

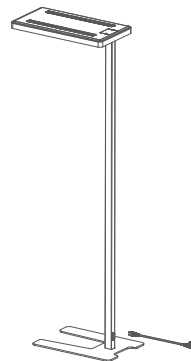

8. View after installation of the entire lamp.

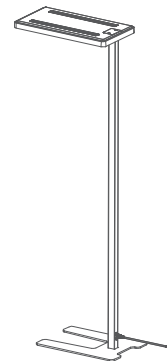

Instructions for use



Function operation instruction

Icon	Function	Function description
	ON/OFF	Short touch to turn on/off the light.
	Dim +	Short press: turn on; Long press: infinite dimming
	Dim -	Short press: dim; Long press: Unlimited dimming.
	Motion Sensor switch	Short press: turn on/off the human touch; 1. Turn on the human sensing switch when the power is on and the lights are off; 2. Actively turn off the lights when the human perception switch is turned on; The human perception indicator light flashes to indicate a 30 second waiting period, at which point Does not trigger human perception.
	Daylight switch	Short press: turn on/off light sensing; The light automatically adjusts its brightness according to the ambient light, making the desktop reach To constant illumination.

Product Parameters

Item Code: 523003011100

Luminaire Description: LEDFalcon-P 100W-BLE2-840

Rated Voltage: 220-240 V~ 50/60 Hz

Rated Wattage: 100 W

Rated Current: 0.5A

Power Factor: 0.9

CCT: 4000K





CRI: Ra95

Weight: 19 Kg

Light Source: LED

Dimension: 751×396×2055mm

Light Source

Product Code	Product Description	N	Light source code	QR Code	Energy Label
523003011100	LEDFalcon-P 100W -BLE2-840	2	LS077003315		
		5	LS077000615		

Safety Warning



In order to prevent accidents such as lamp damage, falling, electric shock, fire and so on, please install and use it in strict accordance with the instructions, and do not replace parts by non-professional persons.

- Don't employ the power supply exceeding rated voltage range (rated voltage: AC 220-240V±10%, frequency: 50/60Hz). (Long-time use of power supply exceeding rated voltage range may damage lamps).
- Do not use on slopes greater than 6°.
- Don't install lamp above the high temperature objects or in moisture area. (The lamp cannot be installed above oven, gas and exhaust funnel, etc., in order to avoid damage).
- Inspection and maintenance of lamps should be performed by professionals. Operation by non-professionals may cause danger.
- Immediately cut off power when abnormal conditions of lamps occur, and contact with the sales store. (It's necessary to show the corresponding model when maintaining, and refer to the label attached to the lamp).
- If the external flexible cable or cord of this lamp is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
- Note: If the lamp does not work after connecting the power, please check whether the installation and wiring of the lamp are correct, and whether the power switch is turned on.
- The light source of the lamp is not replaceable. When it needs replacement (e.g. the light source exceeds its durability), the whole luminaire should be replaced.
- Tip: The surface will generate a certain amount of heat when the lamp is working, this is a normal phenomenon. The lamp has been strictly tested before leaving the factory, please use it with confidence.

Care and Maintenance



Warning: Before servicing and maintaining the lamp, the power must be cut off to prevent electric shock.

In order to use this product safely and efficiently, please clean and inspect it regularly (once every six months). When cleaning the lamp, please cut off the power, use a soft wet cloth and then wipe it with a dry cloth. Do not clean with reagents, otherwise it will cause discoloration or damage to the lamp.

Note: the same product model appearance may be different, but the instructions for use the same (the appearance of the lamp body in kind shall prevail).



OPPLE

Opplé Lighting B.V.
Meerenakkerweg 1-07
5652 AR Eindhoven
The Netherlands
service@opple.com
www.opple.com

Opplé Lighting Electronic (Zhongshan) Co.,Ltd.
Building A, No.275 Dongan Bei Road, Haizhou District,
Guzhen Town, Zhongshan City, Guangdong Province,
P.R.China