

INSTRUCTION MANUAL LED INSECT KILLER

220-240V 50/60Hz

8w - 50M² Model

10w - 80M² Model

18w - 150M² Model

This insect killer has been designed to lure and kill a range of light sensitive flying insects. The insects are lured by the ultraviolet black light and then killed as they contact the electrically charged inner grid area. The insect killer is fitted with a Type G British 3 pin electrical plug for quick and easy installation.



Before use, please read the safety instructions in this document carefully

DANGER: High voltage! DO NOT touch the inner electric grid area.

IMPORTANT SAFETY INSTRUCTIONS

- **High voltage!** Disconnect power before repairing or cleaning.
- If the power cord or plug is damaged, it must be replaced by a qualified service engineer.
- Never put metal objects inside the grille while in operation.
- The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Before inserting the plug make sure that the voltage is within the range indicated on the rating label on the appliance.
- The insect killer cannot be used in barns, stables, or similar places.
- The insect killer is for **Indoor use only**.
- Disconnect the appliance from the electrical outlet before cleaning the unit or its components.
- When not in use, store out of reach of children.
- The insect killer is not to be used in locations where flammable vapour or explosive dust is likely to exist.
- Never immerse in water/other liquids or use in the immediate vicinity of water, such as bathtubs, washing bowls, swimming pools etc where the likelihood of immersion or splashing could occur.
- This appliance must be earthed.

Operation

- You must first decide on a safe and appropriate position to install the insect killer, make sure you have a socket outlet near enough to the unit. The unit can be wall mounted, suspended from a ceiling, or used free standing.
- Screw in a suitable fixing to enable you to hang the unit on a wall or from the ceiling. The fixing should be appropriate for the surface the unit is to be mounted to and strong enough to safely take the weight of the unit.
- Attach the chain provided to the unit by lifting up the 2 metal tabs positioned one on each side at the top of the insect killer. (Carefully turn the unit upside down and the tabs will drop down to enable you to gain access to the mounting holes).
- Hang the unit by its chain, plug in and switch on at the outlet socket and by the switch on the unit.
- The tubes should glow violet and start to attract any nearby insects.



Reminder: -

Waste electrical products must not be disposed of with household waste.

This product should be taken to your local recycling centre for safe treatment.



MAINTENANCE



Warning!

Before any cleaning or maintenance, Always disconnect the appliance from the wall socket.

Cleaning

We Recommend cleaning is carried out every 2 weeks or as needed. To clean your insect killer, firstly switch off the unit and disconnect from the power supply.

Take the unit down from its hook/fixings and remove the fly tray from the bottom of the unit and clean with soapy water, dry and replace.

If the outer casing and grilles need cleaning, remove the outer grilles completely after unscrewing the 8 retaining screws (Put the screws in a safe place). The grilles can be cleaned in warm soapy water, dried, and replaced.

The outer casing can be cleaned using a soft cloth dampened with a kitchen cleaner or degreaser but take care not to get too wet and make sure the unit is thoroughly dry before using.



Tube Replacement

The UV LED tubes supplied with your unit in normal working conditions will give you many years of operation, But if they do require replacing this can be done as follows:-




Important:- The LED tube has a single power input end. Follow the caution mark on the product to install the tubes in the correct direction.

To replace the tube, firstly make sure the unit is switched off and disconnected from the power supply. The rear outer grille section must be removed by unscrewing the 4 retaining screws. With the rear grille removed, take hold of the tube that needs replacing and carefully rotate **90° anti-clockwise**.

The tube can now be removed vertically out of the locating slot. Replace with new tube, carefully rotate tube **90° in a clockwise** direction to lock in place and replace rear grille with the 4 fixing screws.

If both tubes don't come on, it is unlikely that both have failed at the same time, and you need to check the fuse to see if it has blown for some reason.

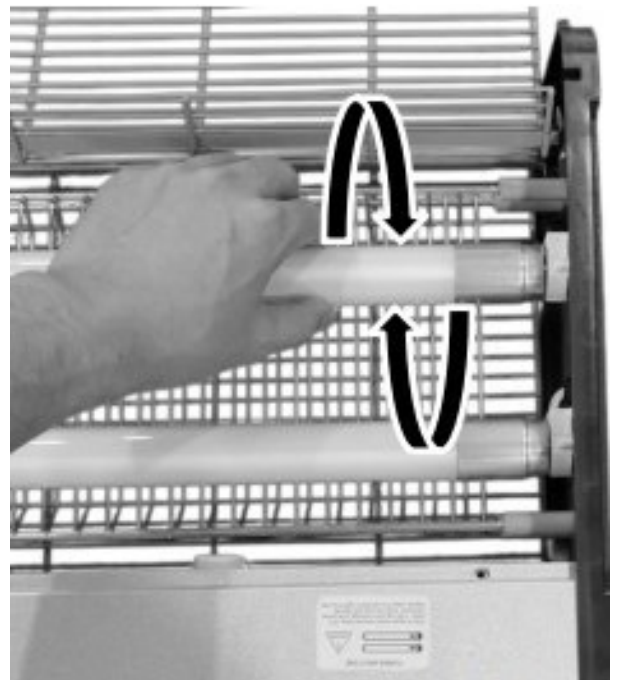

Anda Products, Crawley, England, RH10 9JA

EU Authorised Representative: Anda Products Sigarenmaker 5 - 5521DJ Eersel Nederland authorisedrep@andaproducts.nl