Acoustic Top Box & Enclosure

For Sentinel Kinetic Range

Fitting Instructions





TOP BOX

478071 - Kinetic BH 478072 - Kinetic FH 478073 - Kinetic PLUS 478074 - Kinetic HIGH FLOW

ENCLOSURE

478076 - Kinetic BH 478077 - Kinetic FH 478078 - Kinetic PLUS 478079 - Kinetic HIGH FLOW



READ IN CONJUNCTION WITH ILLUSTRATIONS PLEASE SAVE THESE INSTRUCTIONS These instructions should be read in conjunction with the Sentinel Kinetic MVHR Installation and Commissioning Manual (Vent-Axia part no. 439817).



Important: Check spigot configuration for LEFT or RIGHT HAND setup "These units are heavy and should only mounted on walls capable of bearing their weight i.e. a solid masonry wall or a stud wall that has been specially constructed with extra studs and boards."

Note: The use of sound attenuators on the ducting is recommended.

Acoustic Solution Options

Option A

Top Box only + MVHR unit Pages 3 – 15



Option B

Enclosure only + MVHR unit Pages 16 - 25



Option C

Top Box & Enclosure + MVHR unit Pages 26 - 28



Acoustic Bracket Kits

Top Box – <u>Option A</u> BH Acoustic Bracket Kit 1 – **478813** FH Acoustic Bracket Kit 1 – **478815** PLUS & HIGH FLOW Acoustic Bracket Kit 1 – **478816**

Top Box & Enclosure – <u>Option C</u> BH & FH Acoustic Bracket Kit 2 – **478814** PLUS & HIGH FLOW Acoustic Bracket Kit 2 – **478817**

Wired Remote Control Kit

Control Kit will be required with "<u>Option B & Option C</u>" setups Remote Controller – **443283**

Option A

Acoustic Top Box BH & FH + MVHR unit

SIZE & WEIGHT

BH & FH UNITS



FRONT







PLUS & HIGH FLOW UNITS

TOP



FRONT







BH & FH UNITS



SIDE FH











<u>WEIGHT</u>

BH & FH Top Box without unit 12kg BH Top Box with unit 27kg FH Top Box with unit 30kg BH unit 15kg FH unit 18kg



PLUS & HIGH FLOW UNITS

TOP









549





WEIGHT

PLUS & HIGH FLOW Top Box without unit 17kg PLUS Top Box with unit 41kg HIGH FLOW Top Box with unit 48kg PLUS Unit 24kg HIGH FLOW Unit 31kg



BH & FH BRACKET ASSEMBLY & MOUNTING BRACKETS

BH - Use Acoustic Bracket Kit 1 (478813) to mount Unit & Top Box.

FH - Use Acoustic Bracket Kit 1 (478815) to mount Unit & Top Box.

Use existing wall bracket supplied with unit, to complete mounting bracket setup.

BH & FH Bracket to be mounted to 405mm centres.

Fix the 4-off M5x16 screws to secure the existing bracket to the new Acoustic brackets, supplied in Bracket kit 1

Then fix the remaining 4-off M5X16 screws, only half way on the mount brackets.





bracket from unit

PLUS & HI FLOW BRACKET ASSEMBLY & MOUNTING BRACKETS

Use Acoustic Bracket Kit 1 (478816) to mount Unit & Top Box.

Use existing wall bracket supplied with unit, to complete mounting bracket setup.

Bracket to be mounted to 603mm centres.

Fix the 8-off M5x16 screws to secure the existing bracket to the new Acoustic brackets, supplied in Bracket kit 1

Then fix the remaining 4-off M5x16 screws, only half way on the mount brackets.





FIT STANDOFFS TO UNIT

Before mounting unit, the standoffs need to be replaced on the bottom corners. Use the new fixings supplied in Acoustic Mounting Bracket Kit 1. See images below for details.



PLUS & HIGH FLOW



STANDOFF SETUP FROM ACCESSORY PACK 1 RUBBER STANDOFFS FROM MVHR UNIT ACCESSORY PACK

PLUS & HIGH FLOW BASE PANEL SCREW ASSY



MOUNTING UNIT TO BRACKETS

Unit can be attached to hanging brackets (see view A) with the clips on the rear of the unit.

BH & FH UNIT



PLUS & HIGH FLOW UNIT







MOUNTING TOP BOX TO BRACKETS

1. Before mounting the Top Box, the front cover will need removed before install.



2. Then lift Top Box over the spigots and then line up the 4 screws on the mounting bracket with the key-hole slots on the rear of the Top Box (see view B). Once all fitted, tighten all screws.



3. Then lift Top Box over the spigots and then line up the 4 screws with the key-hole slots on the rear of the Top Box (see view B). Once all fitted, tighten all screws.



SPIGOT ATTACHMENT ON TOP BOX

Connect all spigots to the unit, then use duct tape to seal & secure them in place. Two foam pieces supplied with Top Box are to be used on "To Atmosphere" & "From Atmosphere" spigots, wrap each foam piece around base of spigots (see view C).





Image shows a Right Hand setup with foam insulation fitted on "To Atmosphere" & "From Atmosphere" spigots.

BH & FH – Right Hand



FITTING FRONT COVER TOP BOX



Once unit is installed and commissioned, as per Installation & Commissioning instructions, then secure front panel back onto Enclosure.

Option B

Acoustic Enclosure + MVHR unit

SIZE & WEIGHT

BH & FH UNITS

тор



FRONT







BASE



<u>WEIGHT</u>

BH Enclosure without unit 19.1kg FH Enclosure without unit 19.1kg BH Enclosure with unit 34kg FH Enclosure with unit 37kg BH Unit 15kg FH Unit 18kg



PLUS & HIGH FLOW UNITS





BASE



<u>WEIGHT</u>

PLUS & HIGH FLOW Enclosure without unit 33kg PLUS Enclosure with unit 57kg HIGH FLOW Enclosure with unit 64kg PLUS Unit 24kg HIGH FLOW Unit 31kg



FIX MOUNTING BRACKETS

Unpack mounting brackets from separate box and assemble and fix in accordance with the Instruction leaflet supplied with the brackets:-

BH & FH to 508mm centres.

PLUS & HIGH FLOW to 655mm centres.





ENCLOSURE PARTS

BH & FH UNITS



		ENCLOSURE PARTS
ITEM	QTY	DESCRIPTION
1	1	BASE PANEL
2	2	SIDE PANEL
3	1	TOP PANEL
4	1	FRONT PANEL
5	1	REAR PANEL
6	2	AV MOUNT
7	4	NUT M8
8	4	SPRING WASHER M8
9	16	WASHER M6
10	16	SCREW M6 X 16
11	8	SCREW NO6x1/2IN POZI PAN
12	2	RUBBER GROMMET

PLUS & HIGH FLOW UNITS



		ENCLOSURE PARTS
ITEM	QTY	DESCRIPTION
1	1	BASE PANEL
2	2	SIDE PANEL
3	1	TOP PANEL
4	1	FRONT PANEL
5	1	REAR PANEL
6	2	AV MOUNT
7	4	NUT M8
8	4	SPRING WASHER M8
9	16	WASHER M6
10	16	SCREW M6 X 16
11	16	SCREW NO6x1/2IN POZI PAN
12	2	RUBBER GROMMET

FIT AV MOUNTS

BH & FH UNITS



PLUS & HIGH FLOW UNITS



FIT BASE PANEL





BACK PANEL & UNIT MOUNT





IMPORTANT – ASSISTANCE WILL BE NEEDED AT THIS STAGE.

- 1. First fix the 4 anti-vibration washers (**ONLY**) to the mounting brackets. (Supplied in bracket kit)
- 2. Then fit 2-off grommets to the back panel and then place the back panel onto the mounting brackets, grommet ends to the bottom.
- 3. Lift the unit & base panel onto the mounting brackets.
- Line up the holes on the base panel with the anti-vibration washers and insert the washers & bolts. Do <u>NOT</u> over tighten, leave loose. (Supplied in bracket kit) <u>See</u> <u>view "A"</u>
- 5. Thread mains and control cables through grommets on back panel before panels are assembled.

Α







Thread mains and control cables through the grommets on rear.



FIT TOP AND SIDE PANELS



FIT BACK PANEL



Once back panel is fitted, push unit back towards the brackets and tighten the 4 bolts on the mounting brackets.

IMPORTANT

200mm minimum clearance must be left under the mounting brackets to allow access, for tightening the mounting bolts.

FIT FRONT PANEL



Option C

Acoustic Enclosure & Top Box Solution + MVHR unit

SIZE & WEIGHT

BH & FH UNITS



FRONT

SIDE













WEIGHT

BH & FH Top Box without unit 12 kg BH & FH Enclosure without unit 33kg BH Enclosure & Top Box with unit 45.5kg FH Enclosure & Top Box with unit 47kg BH Unit 15kg FH Unit 18kg



PLUS & HIGH FLOW UNITS

тор











BASE



<u>WEIGHT</u>

PLUS & HIGH FLOW Top Box without unit 17kg PLUS & HIGH FLOW Enclosure without unit 33kg PLUS Enclosure & Top Box with unit 75kg HIGH FLOW Enclosure & Top Box with unit 81kg PLUS Unit 24kg HIGH FLOW Unit 31kg



FULL SOLUTION BUILD

- 1. First start with mounting instructions for the Enclosures installation, see "Option B" Enclosure only Pages 15 25
- 2. Then remove the front panel of the Top Box, before placing it on top of the completed mounted Enclosure.
- 3. Fix attenuators onto the spigots; follow the ducting detail information in section "**Option A**" Top Box only Pages 13 14.
- 4. Then use Acoustic Bracket Kit 2 to secure the Top Box to the Enclosure. Use the existing screws on the Top Box & Enclosure. (See detail A)
- 5. Once unit is installed and commissioned, secure the front panel cover back onto Top Box.

FIX MOUNTING BRACKETS

BH & FH, use Acoustic Bracket Kit 2 (478814) to secure Top Box & Enclosure together.

PLUS & HIGH FLOW, use Acoustic Bracket Kit 2 (478817) to secure Top Box & Enclosure together.









FLOOR MOUNTING

For floor mounting a suitable cradle should be made to accommodate the condensate outlet and trap. Installer to ensure consideration of the condensate outlet and trap on bottom of unit.

Installer Notes:







Applica	able only to products installed and used in the United Kingdom. For details of guarantee outside the United Kingdom contact your local supplier.
Vent-Axia	a guarantees its products for two years from date of purchase against faulty material or workmanship. In the event of any part being found to be defective, the product will be repaired, or at the Company's option replaced, without charge, provided that the product:-
•	Has been installed and used in accordance with the instructions given with each unit. Has not been connected to an unsuitable electricity supply. (The correct electricity supply voltage is shown on the product rating label attached to the unit).
•	Has not been subjected to misuse, neglect or damage. Has not been modified or repaired by any person not authorised by the company.
	IF CLAIMING UNDER TERMS OF GUARANTEE
	return the complete product, carriage paid to your original supplier or nearest Vent-Axia Centre, by post or personal visit. Please ensure idequately packed and accompanied by a letter clearly marked "Guarantee Claim" stating the nature of the fault and providing evidence o date and source of purchase.
	return the complete product, carriage paid to your original supplier or nearest Vent-Axia Centre, by post or personal visit. Please er idequately packed and accompanied by a letter clearly marked "Guarantee Claim" stating the nature of the fault and providing evide

Vent-Axia

Head Office: Fleming Way, Crawley, West Sussex, RH10 9YX.

 UK NATIONAL CALL CENTRE, Newton Road, Crawley, West Sussex, RH10 9JA

 SALES ENQUIRIES:
 Tel: 0844 8560591
 Fax: 01293 534898

 TECHNICAL SUPPORT:
 Tel: 0344 8560595
 Fax: 01293 532814

 For details of the warranty and returns procedure please refer to www.vent-axia.com or write to Vent-Axia Ltd, Fleming Way, Crawley, RH10 9YX

479273 C