
Mita





Installation trunking 190x62


Ultimate 62

Schneider Electric


Installation

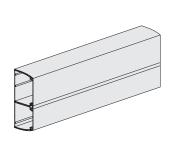


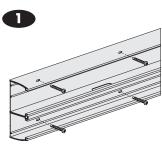


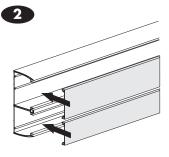

Installation of dividers

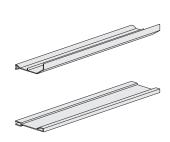


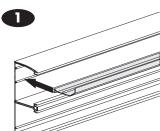


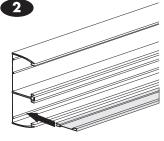






Installation of flat angle riser



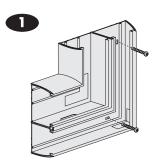


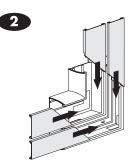


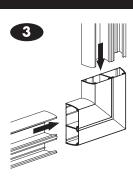

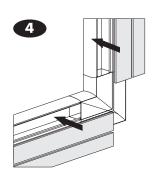



Installation of flat angle dropper

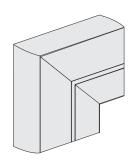

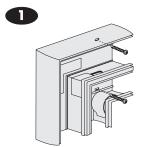





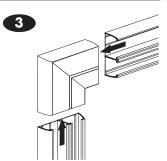


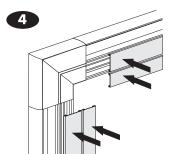


Installation of external corner

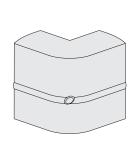

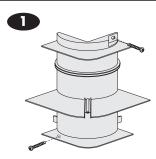


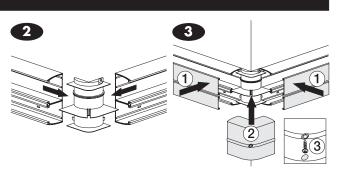


Installation of internal corner

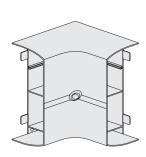





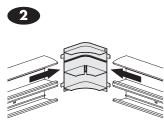

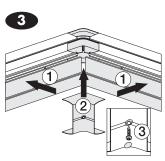


Installation of joint cover




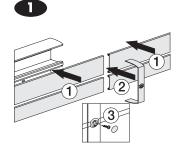


Installation of tee riser

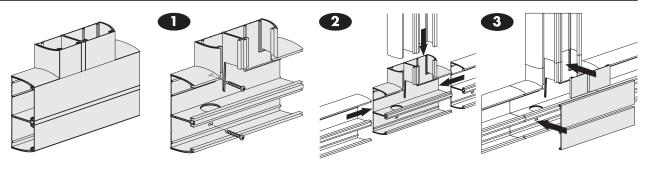

Installation of tee dropper

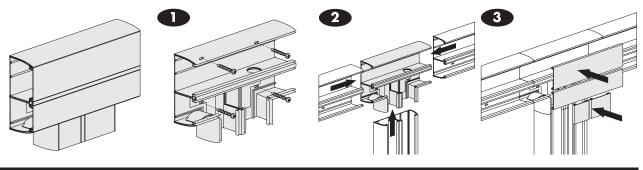

Installation of end cap

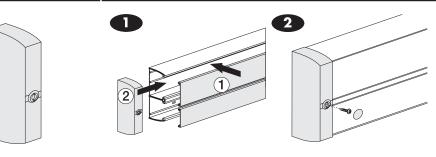

Installation of socket mounting box

