




Enclosed Switch Disconnects

NLSW204PE / NLSW324PE




- 20mm Knock-outs
- Easy Access & Switch Removal
- Flame Retardant Material
- Padlockable for Added Security
- 4 Pole Switch Ratings at AC-21

Approvals		CB, CE & SEMKO			
UL Standard		UL508			
International / European Standard		IEC & EN 60947-1 and 3			
				Switch Codes	
DATA		Range	Units	NLSW204PE	NLSW324PE
Rated Operational Voltage Ue					
IEC & EN		Volts	V	690	690
UL		Volts	V	600	600
Main switch: Isolating voltage up to		Volts	V	750	750
Rated impulse withstand voltage Uimp		Volts	kV	6	6
Rated uninterrupted current Iu		Amps	A	16	25
Rated Operational Current Ie					
IEC & EN	AC-22A	Up to 690V	A	16	25
	AC-21A	Up to 690V	A	20	32
	AC-1	Up to 690V	A	20	32
Rated Operational Power AC-23A (50-60Hz)					
IEC & EN	3 Phase	230(240)V	kW	7.5	11
		400(415)V	kW	11	15
		690V	kW	15	22
Rated Operational Power AC-3 (50-60Hz)					
IEC & EN	3 Phase	230(240)V	kW	4	7.5
		400(415)V	kW	5.5	11
		690V	kW	11	15
UL Power Rating					
DOL	3 Phase	120V	hp	1.5	3
		240V	hp	3	7.5
		480V	hp	7.5	15
		600V	hp	10	20
	1 Phase	120V	hp	0.5	1.5
		240V	hp	1.5	2
UL Short Circuit Ratings					
Fuse rating, class J		Amps	A	-	45
Fuse rating, class RK5		Amps	A	20	-
Rated Fused short circuit current		Amps	kA	10	10
Short Circuit Capacity (IEC)					
Max fuse size (Type gI)		Amps	A	20	32
Rated Fused short circuit current		Amps	kA	5	30
Terminal Specification					
Single/ Multiple strand wire			Min-mm²	2.5	2.5
			Max-mm²	10	10
Fine strand with sleeve			Min-mm²	0.75	0.75
			Max-mm²	6	6
American wire gauge			AWG	10	10
Recommended Tightening Torque			Nm	1.7	1.7



Terminal Configuration


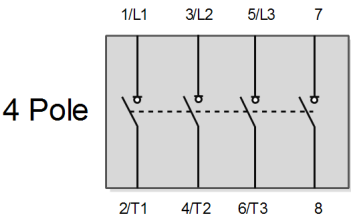


⚠ Important Safety Notice


It is the responsibility of the person installing the electrical equipment to ensure that the installation meets the requirements of the IET wiring regulations and is therefore 'fit for purpose'. Factors such as correct selection of components, cable sizing, protective devices and Earth bonding are all critical and should be checked prior to full testing and power-up. Any other regulations applicable to the equipment being installed such as the Machinery Directive and current health and safety legislation must also be adhered to.

Terminals, including factory fitted, should be checked periodically to ensure correct tightness.

DO NOT USE POWER TOOLS ON THESE PRODUCTS

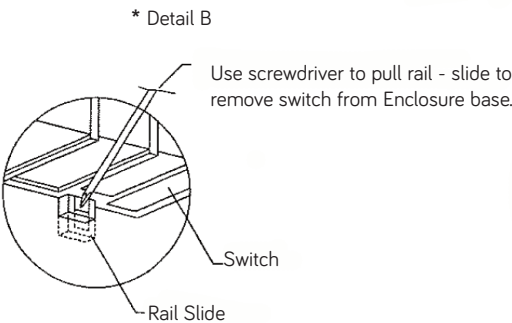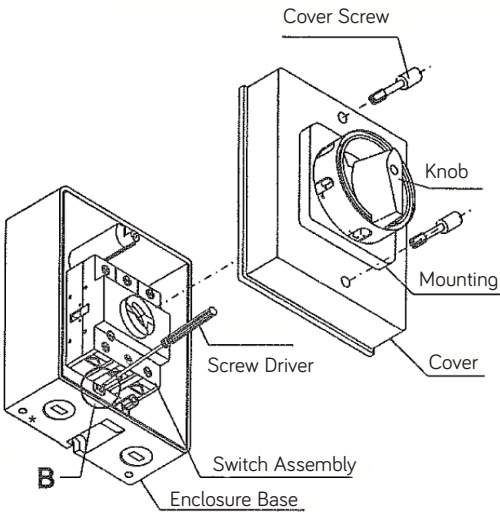

Mounting Details

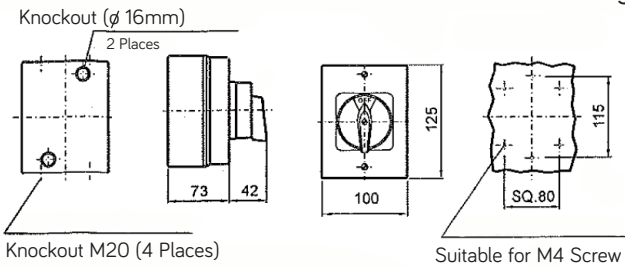

Procedure to dismantle the cover:

- Ensure the switch is in the OFF position
- Unscrew the cover screws & remove the cover
- For easy wiring the switch can be removed from the base & then clicked back into place once wiring is complete
- After wiring ensure the profile orientation of the actuating spindle & knob shaft are in the same position
- Replace the cover & take care not to overtighten the screws (recommended tightening torque 0.5 Nm)
- Do not install using power driven screwdrivers

Please Note: There is no need to remove the switch handle in order to remove the cover.

Height (mm)	Width (mm)	Depth (mm)	Depth (Including Switch) mm
125	100	70	115

12/05/2015