


Change faces

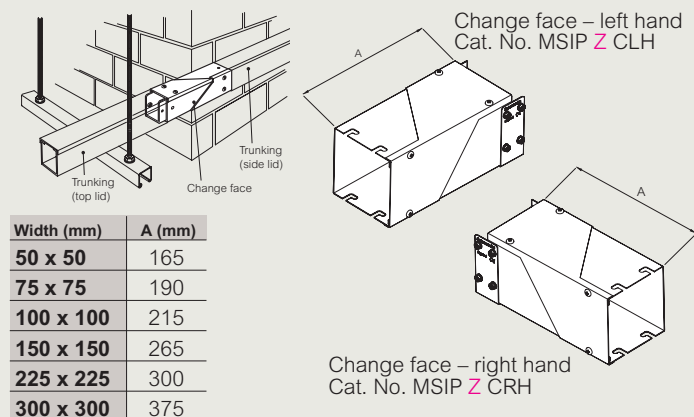


Width (mm)	A (mm)
50 x 50	165
75 x 75	190
100 x 100	215
150 x 150	265
225 x 225	300
300 x 300	375

Width refers to trunking sizes

For non-square trunking, change face units must be used in conjunction with reducers, couplers and cover straps

For example :


- for Cat. No. MGR62 (150 x 150 mm trunking lengths) use Cat. No. MSIP66CLH change face unit + Cat. No. MGR6662R x 2 reducers + Cat. No. MGR66C coupler + Cat. No. MGIP6CS cover strap x 4

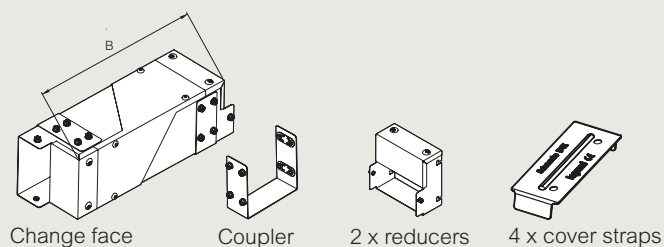

Overall length (mm)	B (mm)
Trunking size (mm)	
50 x 50	340
75 x 75	365
100 x 100	390
150 x 150	440
225 x 225	475
300 x 300	550


Tees

AGT top lid tee – gusset

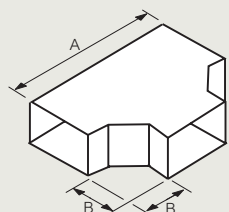

Width	A	B
50	157	53
75	182	53
100	207	53
150	257	53
225	332	53
300	407	53


AST inside lid tee – square

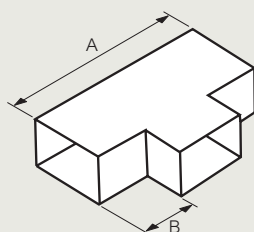

Width	A	B
50	157	53
75	182	53
100	207	53
150	257	53
225	332	53
300	407	53

Tees (continued)

BGT inside lid tee – gusset

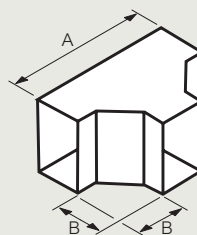


Up to 150 wide

Depth	A	B
50	157	53
75	182	53
100	207	53
150	257	53

225 and 300 wide

Depth	A	B
50	157	53
75	182	53
100	207	53
150	257	53
225	332	53
300	407	53

CGT outside lid tee – gusset

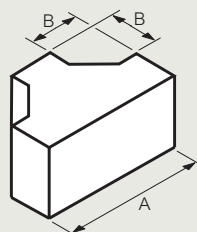

Up to 150 wide


Depth	A	B
50	157	53
75	182	53
100	207	53
150	257	53

225 and 300 wide

Depth	A	B
50	157	53
75	182	53
100	207	53
150	257	53
225	332	53
300	407	53

Crossovers



AGX crossover

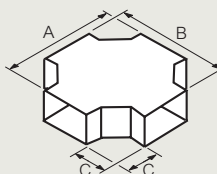

Width	A	B	C
50	157	157	53
75	182	182	53
100	207	207	53
150	257	257	53
225	332	332	53
300	407	407	53

Dimensions are identical for single and multi-compartment

Bellmouths

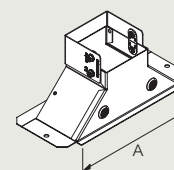
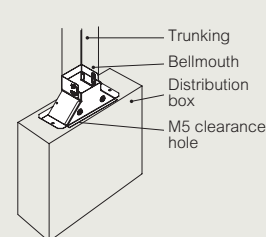


Width	A
50	165
75	190
100	215
150	265
225	340
300	415


Width refers to trunking sizes
Dimensions are identical for single and multi-compartment

End caps and flanges

Flange

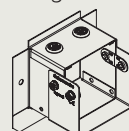

End cap



All dimensions (mm) are nominal