


Compact High-Speed Round
Hand Dryer



Installation and Operation Manual

IPX3

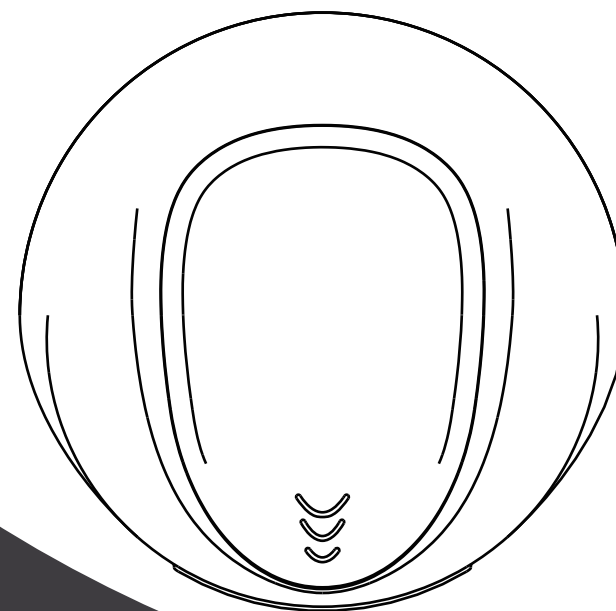

UK
CA



Note before installation:


⚠ Warning

- Do not install the unit in areas exposed to water, steam, or excessive moisture (such as bathrooms with heavy humidity), to avoid the risk of electric shock.
- Power connections must be installed by a qualified electrician. Improper wiring may cause electric shock hazards.
- Always disconnect the power supply before servicing or maintenance, and ensure the unit is not live.
- Power requirements: AC 220V–240V, 50/60Hz.
A leakage circuit breaker (RCD) or equivalent protective device must be installed to reduce the risk of fire and electrical hazards.
- Do not attempt to dismantle, repair, or modify the unit without authorization.
Unauthorized tampering may lead to electric shock, fire, or other accidents.
- This appliance is not intended for use by individuals (including children) with reduced physical, sensory, or mental abilities, or by those lacking experience or knowledge, unless they are supervised or instructed on its proper use by a person responsible for their safety. Young children must be supervised to ensure they do not play with the appliance.

⚠ Precautions

- Ensure there is at least 400 mm of clearance around the air outlet. Do not install the unit above reflective surfaces (e.g., stainless steel or artificial marble), as this may cause sensor malfunction.
- The dryer must be securely mounted to a flat, stable wall to prevent injury or damage from the unit falling.
- Do not install the unit in locations with corrosive or flammable gases or materials, as this may cause fire, malfunction, or product failure.
- Avoid installation in areas with excessive dust or high temperatures, which can damage the unit or reduce performance.


Components :

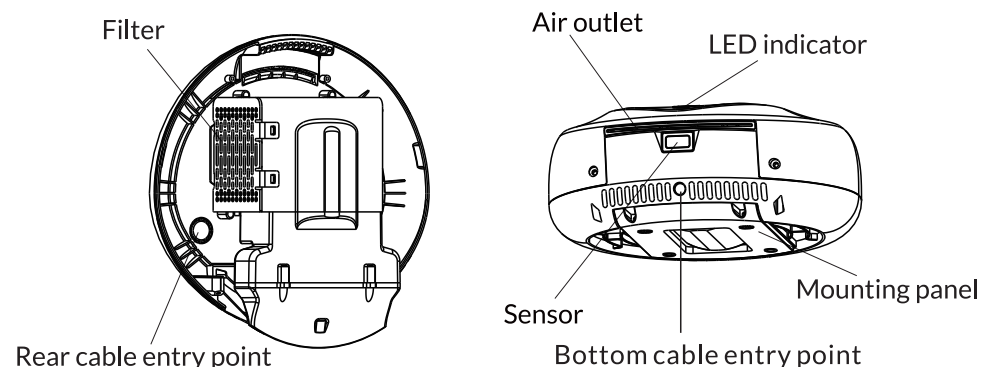

Technical parameters:


Rated Voltage	AC220-240V	IP Rating	IPX3
Rated Frequency	50Hz	Sensing Distance	12±3CM
Rated Power	950W	Wind Speed	85m/s
Motor Power	400W	Drying Time	10-15s
Ambient Temperature	0-40°C	Way of Heating	PTC

Cleaning of filter cartridge:

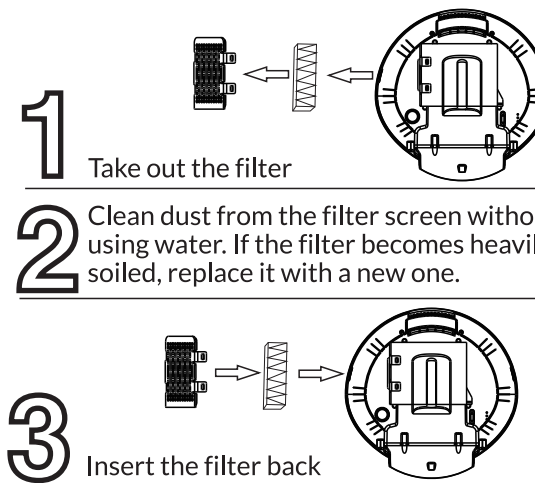


Attention


Attention: The filter should be inspected regularly, depending on the surrounding environment and the level of washroom usage where the hand dryer is installed. If the airflow from the dryer becomes weaker, clean the filter screen immediately. In general, the filter should be cleaned at least once a month. Do not use water to clean the filter screen.

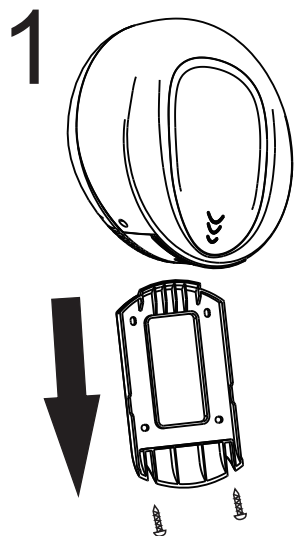


*For maintenance, simply loosen these two backplate screws; removal is not required. Use the supplied L-shaped wrench to access the screws.

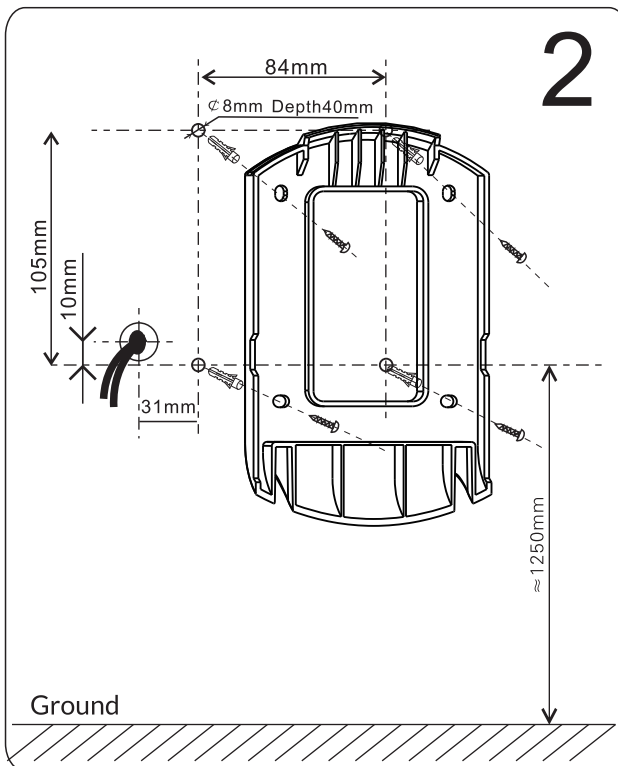


3

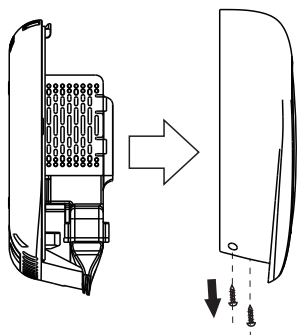


4

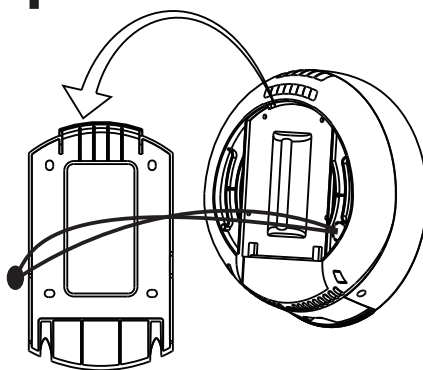


5

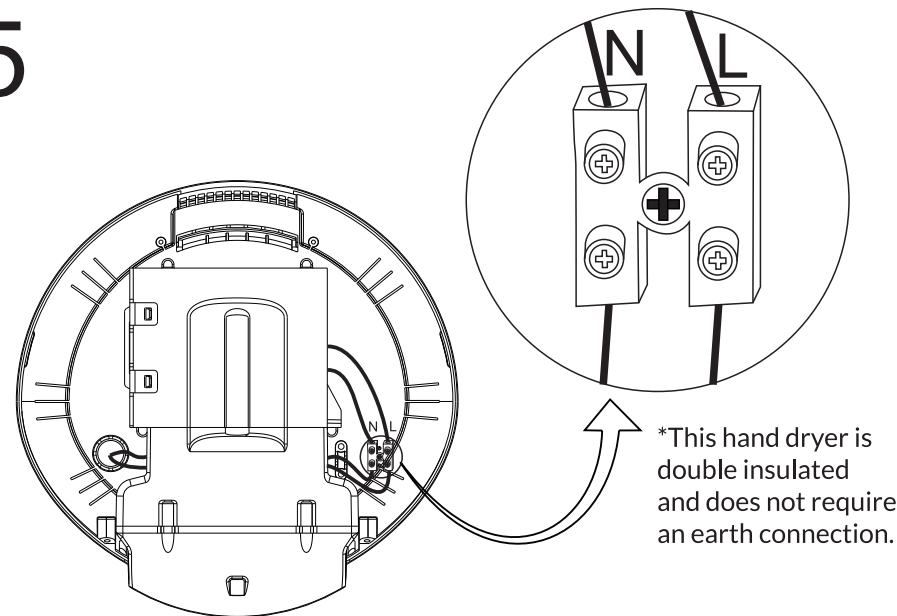

6

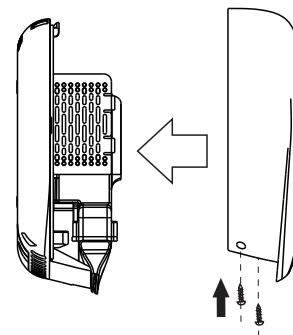

7

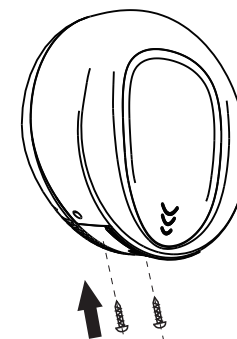

*For maintenance, simply loosen these two backplate screws; removal is not required. Use the supplied L-shaped wrench to access the screws.

Maintenance:

- **Cleaning the exterior:** Always disconnect the power before cleaning. Use a mild, neutral detergent to clean the outer shell. Do not use acidic or alkaline bathroom cleaners, benzene, lacquer thinner, abrasives, or nylon brushes, as these may damage or scratch the surface.
- **Prevent water ingress:** When cleaning, ensure no water enters the unit to avoid electric shock or short circuits.
- **Power off when idle:** It is recommended to disconnect the power when the dryer is not in use to extend its service life.
- **Damaged power cord:** If the power cord is damaged, replace it with a certified cord or purchase replacement components from the manufacturer or an authorized service provider.
- **Malfunction:** In case of a breakdown, immediately disconnect the power and stop using the unit. Repairs should only be carried out by qualified professionals.
- **Long-term storage:** If the unit will not be used for an extended period, disconnect the power, clean the unit, and store it indoors in a clean, dry, and sealed environment.



Disposal

This product should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.

Anda Products, Crawley, England, RH10 9JA

EU Authorised Representative. Anda Products Sigarenmaker 5 - 5521DJ Eersel Nederland
authorisedrep@andaproducts.nl

417173 A

1025