


## LED Panel Sydney BLE2


Item Code	Luminaire Description	kg
542004091900	LEDPanelRc-Sy Sq595-35W-BLE2-3000-WH-U19	3.4kg
542004092000	LEDPanelRc-Sy Sq595-35W-BLE2-4000-WH-U19	3.4kg
542004092100	LEDPanelRc-Sy Re295-35W-BLE2-3000-WH-U19	3.5kg
542004092200	LEDPanelRc-Sy Re295-35W-BLE2-4000-WH-U19	3.5kg

\*Accessories should be purchased separately.

140053150	LED PL-SI-E MT-SPRINGS	0.09kg
14005365	LED PL-SL-E-SP-KIT	0.13kg

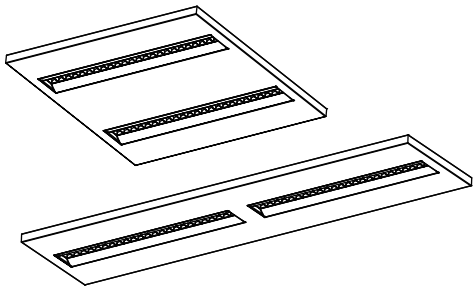

Model Name	A (mm)	B (mm)	C (mm)	D (mm)	Cut out (mm)	Rated Voltage(V~)	Frequency (Hz)	Current (A)	Rated Power(W)
LED PL-RC-P SQ595-35W BLE U19	595	595	26	47	585*585	220-240	50/60	0.16	35
LED PL-RC-P RE295-35W BLE U19	295	1195	26	47	285*1185				

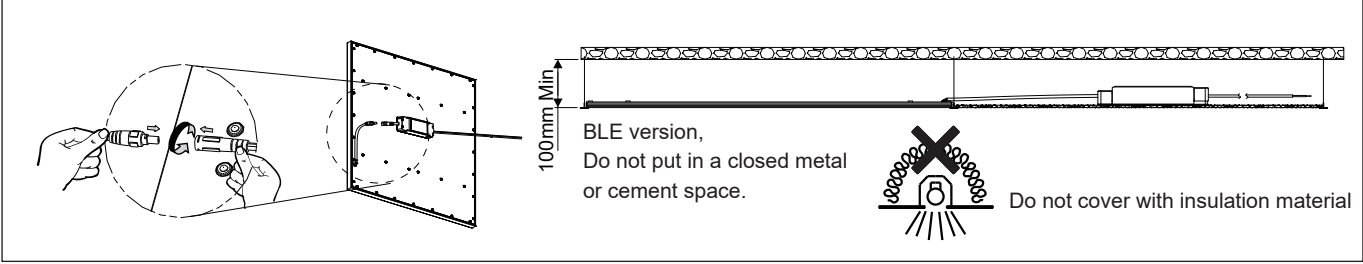

### Recessed Mounting (Lay-in)

- ① Tighten the screws on the panel.
- ② Connect the wires: DIM+/DA, DIM-/DA, N, NC, L.
- ③ Tighten the screws to 0.5-0.9 N·m.

Bluetooth Operating frequency: 2402-2480MHz  
Bluetooth Max. Transmission Power: <20dBm.

### Recessed Mounting (Clips)

Do not put in a closed metal or cement space.


- ① Insert the panel into the clips.
- ② Ensure the panel is seated correctly with a 9mm gap and 20mm max depth. A 30mm min gap is also indicated.

Cut Out Sizes		
Type	A (mm)	B (mm)
SQ595	585	585
RE295	285	1185


Clips should be purchased separately as accessory

## Suspended installation


①

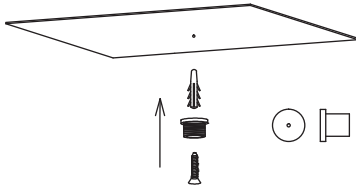


②

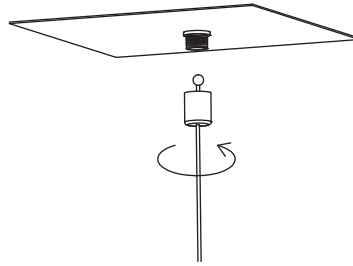


③

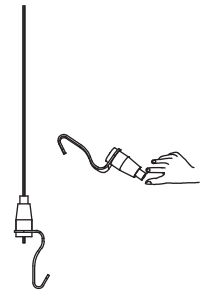


④

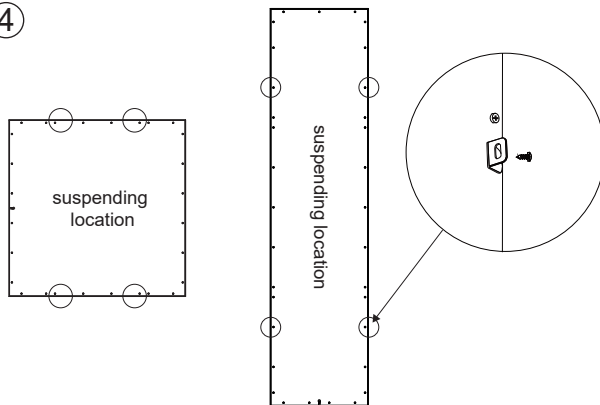


⑤

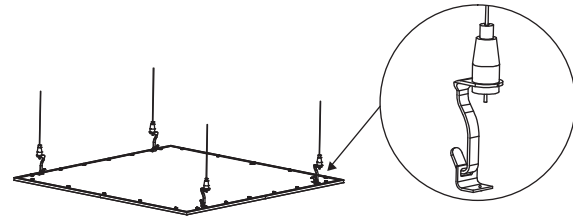

⑥

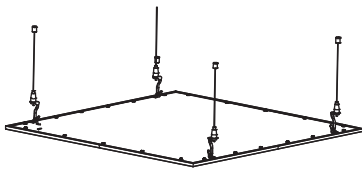

⑦

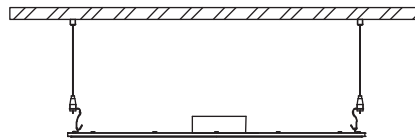

⑧

Same as Recessed Mounting Steps: Step 1.

1. Fix the installation frame with anchor into target place on the ceiling. (Picture 1)
2. Screw nut to the part installed on ceiling in step 1. (Picture 2)
3. Connect the other end of the lines with the hook. (Picture 3)
4. Remove the screws from the backplate circled in picture 4, fix the L shape hanger by the screws from suspension kit. (Suspension kit are accessory). (Picture 4)
5. Hang the panel in the hook at indicated locations circled in picture 4. (Picture 5)



Luminaires not suitable for covering with thermally insulating material.  
Leuchten sind nicht mit thermisch isolierenden Materialien abzudecken.

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

Wenn das externe flexible Kabel oder die Leitung dieser Leuchte beschädigt ist, darf es ausschließlich vom Hersteller oder dem Kundendienst oder einer ähnlich qualifizierten Person ersetzt werden, um Gefahren zu vermeiden.



For non-user replaceable light sources:

The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

Für nicht vom Benutzer austauschbare Lichtquellen:

Die in dieser Leuchte enthaltene Lichtquelle darf nur vom Hersteller oder seinem Servicevertreter oder einer ähnlich qualifizierten Person ausgetauscht werden.



Caution: Any operation on LED module is forbidden while power-on.




Zur Vermeidung von Risiken müssen defekte Leitungen ausschließlich vom Hersteller, Inverkehrbringer oder Fachmann ausgetauscht werden.

Achtung: In betrieb ist keine Arbeit am LED-Modul erlaubt.

Terminal block not included. Installation may require advice from a qualified person.

Only use suitable connection boxes with internal terminal blocks conform to EN60998-2-1 or EN60998-2-2

Terminal should be capable for at least 450V 16A, 0.75mm<sup>2</sup> wiring.



Data subject to change  
Les données sont sujettes à modifications  
Änderungen vorbehalten

Opplé Lighting Electronic (Zhongshan) Co., Ltd.  
Building A, No.275 Dongan Bei Road,  
Haizhou District, Guzhen Town, Zhongshan City,  
Guangdong Province, P.R.China

Opplé Lighting B.V.  
Meerenakkerweg 1-07  
5652 AR Eindhoven  
The Netherlands  
service@opple.com  
www.opple.com