



Fortress Circuit Protection

AFDD

This device must be installed by a qualified skilled person (electrically) in accordance with all relevant regulations including wiring regulations BS7671.

Insulation resistance test:

SWITCH OFF the device before an insulation resistance test between live conductors of the final load circuit as defined in the standard BS EN 62606. During commissioning the device must be tested using the test button, marked "T"; the device must trip immediately. This test must be repeated throughout the installed life of the device at intervals defined by relevant regulations including wiring regulations BS7671. This verifies the electrical and mechanical parts of the device only. Only for use within BG Consumer Units.

Test after installation

The interference transmission requirements as defined in the standards CISPR 14-1 and DIN EN 61000-6-3 (limit value class B) must be observed for the devices operated in the electrical installation (equipment). Non-compliant or defective devices (equipment) may cause interference which can influence the response sensitivity of the arc fault detection device.

Combined RCBO/AFDD

Electronic line voltage dependent device 1P + N (switch neutral) with flying lead insulated flexible copper wire.


Description

B or C	MCB tripping characteristics
	Type A RCD classification
30mA	Rated residual operating current I _{Δn}
~230V/240V	Rated voltage U _n 50/60 Hz
6000	Rated short circuit breaking capacity (A) / I _{cn} =6000A
	Energy limiting class
	Ambient temperature range -25°C to +40°C

LED Indication

LED Indication after tripping and reclosing	Fault description
steady red light	Normal operation after Overcurrent or Residual current fault has cleared
1 blink/sec (total 10 sec)	Series arcing fault or Parallel arcing fault
(continuous blinking) 2 blinks/sec (total 10 sec)	Overvoltage fault (U>275V)
5 blinks/sec (continuous blinking)	Internal self-test fault

Connection Diagram

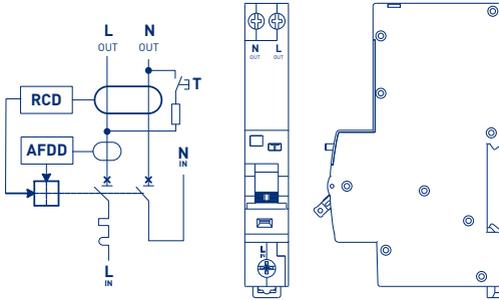

Torque Settings

	cross section	screw torque
Line terminal	16mm ²	2Nm
Load terminals	10mm ²	1.2Nm

Notes



ALWAYS SWITCH OFF THE MAINS POWER BEFORE INSTALLING THIS DEVICE INTO A CONSUMER UNIT



COMPLETE ALL CONNECTIONS, INCLUDING BLUE N FLYING LEAD, BEFORE RESTORING MAINS POWER

AFDD part operating criteria

Batch Code Explanation

Series Arcing Fault

Load current (A)	Maximum allowed tripping time (s)
2.5	1
5	0.5
10	0.25
16	0.15
32	0.12
40	0.12

Parallel Arcing Fault

Test current (A)	Maximum allowed number of arcing half-waves within 0.5s (N)
75	12
100	10
150	8
200	8
300	8
500	8

yyWxx Manufacturing date code, year of manufacture (yy) and week of manufacture (Wxx)

Address/Hotline

Luceco PLC
Stafford Park 1
Telford TF3 3BD
ENGLAND

(EU) Luceco SE
C/ Bobinadora 1-5
08302 Mataró
SPAIN

If you have further technical assistance you can get in touch with our

Technical Helpline on:

+44 (0)3300 249 279

technical.support@bgelectrical.co.uk

Environmental Protection



This symbol is known as the "Crossed-out Wheelie Bin Symbol". When this symbol is marked on a product or battery, it means that it should not be disposed of with your general household waste. Some chemicals contained within electrical/electronic products or batteries can be harmful to health and the environment. Only dispose of electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment.