

XV300



## Company information

All brand and product names are trademarks or registered trademarks of their respective owners.

### Service

For service and support, please contact your local sales team.

Contact info. [Eaton.com/contact](https://Eaton.com/contact)

Service page: [Eaton.com/aftersales](https://Eaton.com/aftersales)

### Original Operating Instructions

is the German-language edition of this document

Publication date

07/2023 Version 09

### Copyright

© 2015 by Eaton Industries GmbH, 53105 Bonn

Author/Editor: Antje Nonnen PMCC

Eaton Industries GmbH, Hein-Moeller-Straße 7-11, D-53115 Bonn

All rights, including those of translation, reserved.

No part of this manual may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, whether electronic, mechanical, photocopying, micro-filming, recording, or otherwise, without the prior written permission of Eaton Industries GmbH, Bonn.

Subject to alteration.



**GEFAHR!**

Gefährliche elektrische Spannung!

---

## **Before starting with the installation**

- Installation requires qualified electrician
  - Disconnect the power supply of the device.
  - Secure against retriggering
  - Verify isolation from the supply
  - Ground and short-circuit
  - Cover or enclose any neighboring live parts.
  - Follow the engineering instructions (IL) of the device concerned.
  - Only suitably qualified personnel in accordance with EN 50110-1/-2 (VDE 0105 part 100) may work on this device/system.
  - Before installation and before touching the device ensure that you are free of electrostatic charge.
  - The functional earth (FE) must be connected to the protective earth (PE) or to the equipotential bonding. The system installer is responsible for implementing this connection.
  - Connecting cables and signal lines should be installed so that inductive or capacitive interference does not impair the automation functions.
  - Install automation devices and related operating elements in such a way that they are well protected against unintentional operation.
  - Suitable safety hardware and software measures should be implemented for the I/O interface so that a line or wire breakage on the signal side does not result in undefined states in the automation devices.
  - Deviations of the mains voltage from the nominal value must not exceed the tolerance limits given in the specifications, otherwise this may result in malfunction and hazardous states.
  - Emergency-Stop devices complying with IEC/EN 60204-1 must be effective in all operating modes of the automation devices. Unlatching the emergency stop devices must not result in an automatic restart.
  - Built-in devices for enclosures or cabinets must only be run and operated in an installed state;
- desktop devices and portable devices only when the housing is closed.
- Measures should be taken to ensure the proper restarting of programs interrupted after a voltage dip or outage. This should not result in dangerous operating states even for a short time. If necessary, emergency stop devices should be implemented.
  - Wherever faults in the automation system may cause damage to persons or property, external measures must be implemented to ensure a safe operating state in the event of a fault or malfunction (for example, by means of separate limit switches, mechanical interlocks, etc.).



## Table of Contents

	<b>XV300 Manual</b> .....	<b>1</b>
	Company information .....	2
	Before starting with the installation .....	3
	Table of Contents .....	5
0.1	About this documentation .....	9
0.1.1	List of revisions .....	9
0.1.2	Target group .....	10
0.1.3	Legal disclaimer .....	11
0.1.4	Device designations and abbreviations .....	11
0.1.5	Writing conventions .....	12
0.1.5.1	Warning labels .....	12
0.1.5.2	Additional information for use .....	13
<b>1.</b>	<b>Description</b> .....	<b>14</b>
1.1	Function .....	14
1.1.1	Features .....	14
1.1.2	Options .....	14
1.1.3	Notes .....	15
1.1.3.1	SmartWire-DT .....	15
1.1.3.2	XN300 .....	15
1.2	Use as intended .....	16
1.3	Device models - versions and part nos. ....	17
1.3.1	Basic features .....	17
1.3.2	Device variants .....	17
1.3.3	Optional features .....	17
1.4	Operating and indication elements .....	20
1.5	Interfaces to peripheral devices .....	21
1.6	What the different parts of the part number mean .....	22
1.7	Accessory devices .....	24
1.8	Nameplate .....	25
1.9	Support .....	26
1.10	Conditions for Underwriters Laboratories Inc. (UL) listing .....	27

1.11	Marine approvals .....	28
<b>2.</b>	<b>Safety regulations .....</b>	<b>29</b>
2.1	Basics .....	29
2.2	Mandatory requirements, personnel requirements .....	30
2.2.1	Occupational safety .....	30
2.2.2	Personnel qualifications .....	30
2.2.3	Device documentation .....	30
2.2.4	Installation, maintenance, and disposal .....	30
2.2.5	Prerequisites for proper operation .....	31
2.3	Device-specific hazards .....	32
<b>3.</b>	<b>Installation .....</b>	<b>37</b>
3.1	Prerequisites for the location of use .....	37
3.1.1	Installation position .....	37
3.1.1.1	Temperatures .....	37
3.1.1.2	Aeration and de-aeration .....	38
3.1.1.3	Criteria for the Installation position .....	39
3.1.2	Technical conditions for acceptance by Underwriters Laboratories Inc. (UL) .....	41
3.1.3	Conditions for marine approval .....	42
3.1.3.1	Radio interference suppression filter for the 24-V-DC-supply .....	42
3.2	Unpacking and checking the equipment supplied .....	44
3.3	Mounting .....	45
3.3.1	Fixing and sealing .....	45
3.3.2	Front mounting XV-303 .....	46
3.3.3	Rear (wall) mounting XV-313 .....	48
3.4	Preparing the device for operation .....	50
3.4.1	Functional earthing XV300 .....	52
3.4.2	Power supply - electrical connection .....	53
<b>4.</b>	<b>Commissioning .....</b>	<b>55</b>
4.1	Initial commissioning .....	56
4.2	Running the XV300 .....	57
<b>5.</b>	<b>External connections .....</b>	<b>58</b>

5.1	Layout of interfaces .....	59
5.1.1	Optional interfaces .....	60
5.2	SD card .....	61
5.3	USB interfaces .....	62
5.3.1	USB host .....	62
5.3.2	USB device .....	62
5.4	Ethernet 1, Ethernet 2 .....	63
5.5	Serial interfaces for communication with PLCs or devices .....	64
5.5.1	COM1 RS-232 .....	64
5.5.1.1	Wiring topic .....	64
5.5.2	COM2 RS-485 .....	65
5.6	CAN1 interface for the CANopen protocol, J1939 protocol, etc. .....	67
5.7	Profibus Interfaces .....	69
5.8	XV300 multi-touch display as a SmartWire-DT coordinator .....	71
5.8.1	SmartWire-DT powered via POW/AUX .....	71
5.8.1.1	SWD power supply voltages .....	72
5.8.2	SmartWire-DT interface .....	74
5.8.2.1	Commissioning the SmartWire-DT network .....	75
<b>6.</b>	<b>Faults .....</b>	<b>78</b>
<b>7.</b>	<b>Maintenance .....</b>	<b>79</b>
7.1	Cleaning and maintenance .....	79
7.1.1	Capacitive multi-touch technology (PCT) .....	79
7.1.2	Battery .....	79
7.2	Repairs .....	80
7.3	Storage, transport and disposal .....	81
7.3.1	Storage and transport .....	81
7.3.2	Disposal .....	83
	<b>Appendix .....</b>	<b>84</b>
A.1	Technical data .....	85
A.1.1	Data sheets .....	85
A.1.2	Dimension and weight specifications .....	85
A.1.2.1	Mounting surrounds for rear (panel) mounting .....	92
A.1.3	General data .....	93

A.1.4	Port and interface specifications .....	95
A.1.4.1	Front mounting .....	95
A.1.4.2	Front mounting with SmartWire-DT connection .....	98
A.1.4.3	Rear (panel) mounting .....	101
A.1.4.4	Rear (panel) mounting with SmartWire-DT connection .....	103
A.1.5	Information on the power supply .....	105
A.1.6	Approvals and declarations .....	107
A.2	Further usage information .....	109
	Alphabetical index .....	110



### 0.1 About this documentation

This Manual contains all the information you will need in order to use the XV300 safely and effectively.

The Manual XV300 manual is considered an integral part of the devices and must always be readily available in the device's close proximity so that users have access to it.

This Manual describes all of the devices' lifecycle stages: transportation, installation, commissioning, operation, maintenance, storage, and disposal.

It assumes you have electrical engineering knowledge and skills.

It does not, however, go over the corresponding operating system or application software.

Make sure to always use the latest documentation for your device.



Manual XV300

MN048017EN

The latest version of this documentation, as well as additional references, is available for download on the Internet. → Section "Further usage information", page 109



[Eaton.com/documentation](https://www.eaton.com/documentation)

Please send any comments, recommendations, or suggestions regarding this document to: [DocumentationEGBonn@eaton.com](mailto:DocumentationEGBonn@eaton.com)

#### 0.1.1 List of revisions

The following significant amendments have been introduced since previous issues:

Publication date	Keyword	New	Modification
07/2015	New edition		
09/2015	ATEX accreditation, XV-313 expansions	✓	
12/2015	Information on UL and battery added	✓	
08/2016	Information on the shipping classification	✓	
04/2017	XV-303-15-.. expansions XV-313 added	✓	
06/2017	Gasket details corrected and specified	✓	✓
04/2019	new version XV-313-...-A11-.. implemented	✓	
07/2023	XV-303-15-.. Plastic version instead of aluminum housing, Eaton.com		✓

## 0.1 About this documentation

### 0.1.2 Target group

This Manual is intended for electricians and electrical engineers, as well as for the people who will be in charge of performing the electrical installation and people who will be using the XV300 as an operating and monitoring device or as an integrated operating and control device in their own applications.



#### **CAUTION**

Installation requires qualified electrician



#### **Follow the safety instructions for the XV300!**

The section on safety instructions must be read and understood by everyone who will be working with the XV300 before the actual work is performed HMI-PLC.



#### **WARNING**

##### **Incomplete operator manual copies**

Working with individual pages taken out from the operator manual may lead to bodily injury and property damage due to missing safety information.

- ▶ Always work with the latest and full document.

### 0.1.3 Legal disclaimer

All the information in this manual has been prepared to the best of our knowledge and in accordance with the state of the art. However, this does not exclude the possibility of there being errors or inaccuracies. We assume no liability for the correctness and completeness of this information. In particular, this information does not guarantee any particular properties.

Do not use the XV300 before reading and understanding this manual.

It is assumed that the user of this manual is thoroughly familiar with the information found in the manuals for incorporating the XV300 into automation processes.

Hazards posed by the XV300 cannot be eliminated if the safety instructions are not observed – especially if the XV300 is commissioned and maintained by unqualified personnel and/or the XV300 is used improperly. Eaton assumes no liability for any damages resulting from cases such as these.

### 0.1.4 Device designations and abbreviations

The following general terms are used throughout this manual:

Short designation	Explanation
XV300	Product family with function code
HMI-PLC	Family
XV300	Used to refer to all the devices in the product family
XV-303	Used to refer to all front mounting devices as a group
XV-313	Used to refer to all rear (panel) mounting devices as a group
SWD	SmartWire-DT



For the exact designation for your XV300, please refer to the → "Name-plate", page 25.

## 0.1 About this documentation


### 0.1.5 Writing conventions


Tab. 1: Format conventions used throughout this manual


<b>Award</b>	<b>Description</b>
<b>Bold text</b>	Used for all graphical user interface elements
Monospaced	Used for all elements at the file level
Font format code	
<code>Text</code>	Used for the button labels
<i>Menu path\submenu\...item</i>	Path information for software windows and menu pages
<i>Menu/command</i>	Used for commands found in the menu bar's menus
<name>	Angle brackets are used to indicate variable values that you must replace with your own values


#### 0.1.5.1 Warning labels

##### Risk of personal injury warning.

	<b>DANGER</b> Warns of hazardous situations that result in serious injury or death.
--	--

	<b>WARNING</b> Warns of the possibility of hazardous situations that could result in serious injury or even death.
---	---


	<b>DANGER!</b> Dangerous Electrical Voltage!
---	---

	<b>CAUTION</b> Warns of the possibility of hazardous situations that can cause injury.
---	---


##### Property damage warning

<i>NOTICE</i> Warns about the possibility of material damage.
--




### Prohibited use

	<b>Prohibited uses, actions, etc.</b> Explanation
---	--


### Bids

	<b>Bid</b> Explanation
---	---------------------------


### Notes


-  Indicates useful tips.
-  Indicates instructions to be followed
-  Additional information, background information, information worth knowing, useful additional information

### 0.1.5.2 Additional information for use

Documents (such as manuals) are listed after the  icon together with the corresponding name and Eaton number.

 Publication title For identifying the Eaton publication code

External Internet addresses. They will be shown after the  icon.

 Destination address

## **1. Description**

### **1.1 Function**

XV300 can be used as control and monitoring devices featuring PLC functionalities. HMI-PLC feature an industrial high-resolution display with capacitive multi-touch technology. This, combined with a highly precise and intuitive gesture-based user interface, enables operators to start working right away. Their unmatched system performance with a powerful graphics processing unit powers a state-of-the-art user interface.

With their compact and sleek design – featuring a heavy-duty, flat, anti-glare glass panel – XV300 multi-touch display are ideal for industrial applications in harsh environments.

#### **1.1.1 Features**

- Sleek design with capacitive multi-touch technology (PCT)
- Heavy-duty, anti-glare tempered glass; easy to clean
- Requires very little space; can also be used in portrait mode
- XV-303 model for front mounting and XV-313 model for rear (panel) mounting
- Display sizes 7.0" and 10.1" with a 1024 x 600 Pixel resolution, Display size 15.6" with a 1366 x 768 Pixel resolution
- Powerful CPU: 800 MHz ARM Cortex-A9
- 1 GB internal memory and 128 kB non-volatile data memory
- The unit's memory can be expanded with SD cards (accessories)  
SD card slot for SD / SDHC memory cards
- Windows Embedded Compact 7 operating system
- Comprehensive basic configuration with integrated interfaces

#### **1.1.2 Options**

- additional integrated interfaces:  
e.g.: 2. Ethernet, 1x Profibus and /or 1x SmartWire-DT

## 1. Description

### 1.1 Function

#### 1.1.3 Notes

##### 1.1.3.1 SmartWire-DT



XV-3.3-...-E.-...-...,,

Units featuring the optional SmartWire-DT interface can be used as SmartWire-DT coordinators for Lean Automation.



SmartWire-DT can prove to be invaluable when implementing the Lean Automation concept, which, as part of the company's Lean Solution approach, offers several significant advantages.

More specifically, SmartWire-DT integrates the I/O level directly into the switchgear being used, enabling a PLC to use SmartWire-DT to directly access digital and analog data from control circuit devices all the way to circuit-breakers.

This eliminates the need for a separate gateway and I/O layer, reducing the number of components and engineering work and enabling users to create flexible, yet streamlined automation solutions.

Eaton calls this concept "Lean Automation" and uses it to provide users in the machine building and plant engineering industries with unparalleled freedom so that they can design creative and profitable solutions.

##### 1.1.3.2 XN300



The ultra-compact XN300 modular slice card I/O system, which features a plug-in connection system, complements the XV series with application-oriented functions that are ideal for optimized system solutions.

## 1.2 Use as intended

XV300 are primarily intended for use in machine and system building applications. They are intended exclusively for monitoring, operating, and controlling machines and systems.

Any other use must be discussed and agreed upon with the manufacturer in advance.

The XV300 multi-touch display are approved for use in closed spaces.



**Bid**

The HMI-PLC must be used only in locations for which the XV300 is approved. Make sure to read and follow the information and labels on the nameplate for the HMI-PLC, as well as section Approvals and declarations in the appendix.



**Prohibited uses, actions, etc.**

It is strictly prohibited to use the device in order to implement safety-relevant functions (in the sense of personal and machine protection).



## 1. Description

### 1.3 Device models - versions and part nos.

### 1.3 Device models - versions and part nos.

#### 1.3.1 Basic features

All XV are equipped with:

- the operating system Windows Embedded Compact 7 pro
- an industrial capacitive multitouch display, PCT
- a SD/SDHC memory card slot.

Every HMI-PLC comes with the following integrated interfaces as standard:

- One Ethernet port (10/100 Mbit/s) for use as a communication or field bus interface
- One USB 2.0 host port for memory and other accessories, full power (500 mA)
- One USB device 2.0,
- One standard RS-232 (COM1) port for communicating with PLCs or devices
- One standard RS-485 (COM2) port for communicating with PLCs or devices
- One standard CAN interface for the CANopen protocol, J1939 protocol

#### 1.3.2 Device variants

One of the main differences between the various device models is the specific mounting method that must be used when installing the devices in an enclosure.

- Front mounting, in which the device is inserted into the enclosure from the front
- Rear mounting, which provides a flush alignment with the enclosure's surface

#### 1.3.3 Optional features

The following individual options are available in order to ensure that the unit will best meet the needs of the application at hand:

- Three widescreen display sizes: 7.0", 10.1" or 15.6" widescreen
- Device bundles with visualization software and/or control software licenses.

Additional integrated interfaces

- Second Ethernet port (10/100 Mbit/s) for use as a communication interface
- PROFIBUS-DP, universal field bus interface for all typical protocols
- SmartWire-DT for an efficient use of SmartWire-DT technology and its comprehensive features

# 1. Description

## 1.3 Device models - versions and part nos.

Tab. 2: Enclosure versions for front mounting



Fig. 1:  
Front with plastic bezel

XV-303-10-..



Fig. 2:  
Service side with optional interfaces

XV-303-10-CE2-A00-1C



Fig. 3: Front with plastic bezel

XV-303-70-..



Fig. 4: Service side with optional interfaces

XV-303-70-CE2-A00-1C



Front with plastic bezel

XV-303-15-..



Fig. 5: Service side with optional interfaces

XV-303-15-C00-A00-1C

# 1. Description

## 1.3 Device models - versions and part nos.

Tab. 3: Enclosure versions for rear (panel) mounting



Fig. 6: Front side with aluminum mounting frame  
XV-313-10-...



Fig. 7: Service side with optional interfaces  
XV-313-10-...

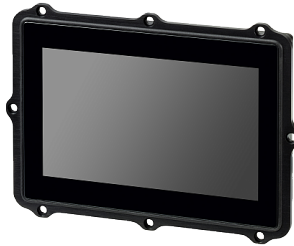
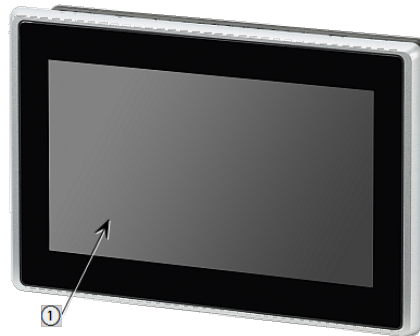


Fig. 8: Front side with aluminum mounting frame  
XV-313-70-...

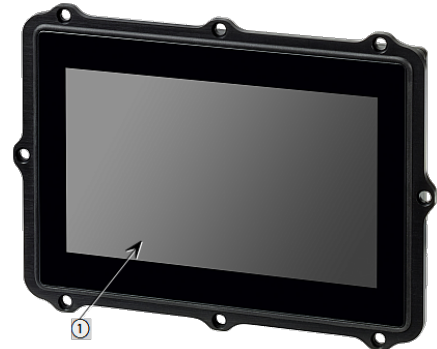


Fig. 9: Service side with optional interfaces  
XV-313-70-...

1.4 Operating and indication elements



Front XV-303



Front XV-313



Service side with optional interfaces XV-303



Service side with optional interfaces XV-313

- |  |  |
|--|--|
| <ul style="list-style-type: none"> <li>① Display, touch sensor</li> <li>② SD card slot</li> <li>③ CTRL button</li> </ul> | <p>Display of HMI device<br/>Detects when the controls shown on the display are being actuated.<br/>Operation based on touch gestures.</p> <p>Slot for SD card</p> <p>The specific function depends on the software being used</p> |
|--|--|

## 1. Description

### 1.5 Interfaces to peripheral devices

### 1.5 Interfaces to peripheral devices

The interfaces featured by your XV300 will depend on the XV version selected and cannot be modified.

The nameplate will indicate which specific interfaces are included with the unit.

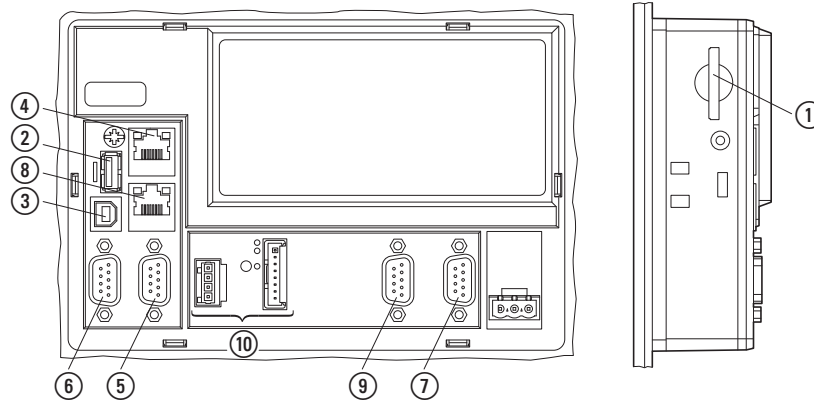


Fig. 10: Interfaces

#### Basic interfaces (found on all XV300)

Interface	Version
① SD card slot	SDSC or SDHC conforming to the SDA 2.0 specification
② USB host	USB 2.0, not galvanically isolated, plug type A, Full power (500 mA)
③ USB device	USB 2.0, not galvanically isolated, plug type B
④ Ethernet 1	RJ-45 socket, 8-pole, 2 LEDs (CAT5e/6), LAN1, 10/100 Mbps
⑤ COM2	RS-485, not galvanically isolated, SUB-D plug 9-pole, UNC nuts for interlocking
⑥ COM1	RS-232, not galvanically isolated, SUB-D plug 9-pole, UNC nuts for interlocking
⑦ CAN	CAN1, not galvanically isolated, SUB-D plug 9-pole, UNC nuts for interlocking

#### Optional interfaces

⑧ Ethernet 2	RJ-45 socket, 8-pole, 2 LEDs (CAT5e/6), LAN1, 10/100 Mbps
⑨ Profibus	Profibus DP, not galvanically isolated, SUB-D socket 9-pole, UNC nuts for interlocking
⑩ SmartWire-DT	4-pin WAGO connector (article no. 734-104) and 8-pin ribbon cable plug

1.6 What the different parts of the part number mean

1.6 What the different parts of the part number mean

The part number includes information that specifies the version and model of the specific device being used.

The nameplate on your XV300 multi-touch display will show the corresponding part number.

Tab. 4: Part number

<b>XV</b>	-	<b>3..</b>	-	..	-	...	-	...	-	..
		Type		Display size		Interfaces		Version		Visualization software

Tab. 5: Type

<b>3..</b>	
303	Front mounting
313	Rear (panel) mounting

Tab. 6: Display size

..	
70	7.0" screen diagonal
10	10.1" screen diagonal
15	15.6" screen diagonal

Tab. 7: Interfaces

..	
B00	Base (1xEthernet, 1xRS232, 1xRS485, 1xCAN, 1x USB host, 1xUSB device, 1xSD card slot)
C00	Base + 2. Ethernet
B02	Base + 1xProfibus
C02	Base + 2. Ethernet + 1x Profibus
BE0	Base + SmartWire-DT
CE0	Base + SmartWire-DT + 2. Ethernet
BE2	Base + SmartWire-DT + 1xProfibus
CE2	Base + SmartWire-DT + 2. Ethernet + 1xProfibus

Tab. 8: Version

...	
A00	Standard version, Type XV-313 sheet thickness of the installation panel $d = 1.5 \text{ mm } (0.059") \pm 0.1 \text{ mm } (0.004")$
A11	Type XV-313 sheet thickness of the installation panel $d = 2 \text{ mm } (0.08") \pm 0.1 \text{ mm } (0.004")$

## 1. Description

### 1.6 What the different parts of the part number mean

Tab. 9: Bundles with visualization software

..	
1B	WEC7P, PLC function can be added later on, runtime license for GALILEO visualization software
1C	WEC7P, integrated PLC function, runtime licenses for GALILEO visualization software and XSoft CoDeSys 2/3
1D	WEC7P, PLC function can be added later on, runtime license for Visual Designer visualization software
1E	WEC7P, integrated PLC function, runtime licenses for Visual Designer visualization software and XSoft CoDeSys 2/3

XV300 devices are available with various bundle options that include visualization software licenses and/or control software licenses. For more information, or to order, contact your supplier or use the Eaton online catalog.

Enter "XV300" into the search box and the catalog will take you directly to the corresponding product group in the Automation, Control and visualization section.

 [Eaton.com/ecat](https://Eaton.com/ecat)

## 1.7 Accessory devices

A variety of accessories are available for XV300 multi-touch displays.

- SD card
- Accessories

**NOTICE**

Only use original accessories.



Order accessories through your supplier or through the EATON online catalog [Eaton.eu/ecat](https://Eaton.eu/ecat)

Example:

article no.	Catalog Number
181638	MEMORY-SD-A2-S SD memory card with min. 1 GB
139807	MEMORY-SD-A1-S SD memory card with min. 256 MB
181585	LIC-PLC-A license product certificate PLC
181637	ACCESSORIES-TP-10-KG brackets for XV-303-70-../XV-303-10-..



# 1. Description

## 1.8 Nameplate

### 1.8 Nameplate

The device has a nameplate on rear.  
This nameplate includes the following information:

- Manufacturer
- Part number
- Part-No.
- Version
- Date of manufacture
- Required power supply
- Serial-No.
- Type approval and certification marks and information
- Layout of ports/interfaces and controls

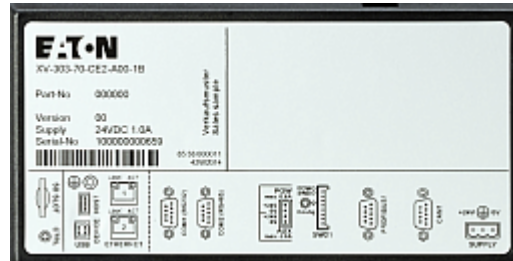


Fig. 11: Example for a nameplate

## **1.9 Support**

To get fast and effective support, make sure to always provide Customer Service with the following information from the nameplate:

- Part-No.
- Serial-No

## 1. Description

### 1.10 Conditions for Underwriters Laboratories Inc. (UL) listing

#### 1.10 Conditions for Underwriters Laboratories Inc. (UL) listing



The following conditions must be met in order for the certification of UL 61010-2-201 as per XV to apply:

Ambient temperature 0°C to 50°C

Mounting height up to 2000 m

Oversvoltage category II

Pollution Degree 2

Permissible voltage range 20%/+25% of rated operating voltage

Type rating

Use in type 4X or type 12 enclosures, use indoors only, at dry locations only

Maximum relative humidity of 95% for temperatures of up to 50 °C, derated linearly to a relative humidity of 50% at 40 °C.

Suitable power supply for class III (SELV or PELV)

The devices must be installed in a suitable fire protection enclosure that provides protection against the spread of fire.

The torque used to tighten the screw terminals on the plug-in connection for the supply voltage must not exceed 0.6 ... 0.8 Nm (5 ... 7 lb-in).

Required only for XV300 SmartWire-DT units with a XV-3.3-...-E-...-.. connection.

The supply voltage  $U_{Aux}$  of the SmartWire-DT master interface must be externally protected against overcurrent and short circuit by means of:

- Miniature circuit-breakers 24V<sub>DC</sub>, rated operational current 2 A, tripping characteristic Z
- Or a 2 A fuse

## 1.11 Marine approvals

### Type approval received



XV300 multi-touch display 7.0" und 10.1" have been granted the required shipping classification by Det Norsk Veritas / Germanischer Lloyd (DNV GL)

- DNVGL-CG-0339 type approval, November 2015 edition, "Environmental test specification for electrical, electronic and programmable equipment and systems"  
Certificate No.: TAA00000NC

### Location classes

Temperature	B - Ambient temperature: 0°C to +55°C
Humidity	B - Relative humidity up to 100 % at all relevant temperatures.
Vibration	A - Bulkheads, beams, deck, bridge, acceleration amplitude: 0.7 g
EMC	A* - All locations except bridge and open deck B* - All locations (including bridge and open deck)
Input	Required protection according to DNV-GL Rules shall be provided upon installation on board

\* Filters / Ferrites maybe required to fulfil. See installation restrictions

### Installation restrictions

1. Install and commission referring to manuals.
2. Screened communication cables improve EMC behavior
3. PE connection of communication cables improve EMC behavior (e.g. earth-connection kit: EATON ZB4-102-KS1)

Location class	interface	Installation
EMC B	Power supply	Place noise filter
EMC A		No additional installations

 **Please refer to the following as well** → Section "Conditions for marine approval", page 42

## 2. Safety regulations

### 2.1 Basics

The device has been designed according to the state of the art and all generally accepted safety rules and standards. However, this alone cannot eliminate all potential hazards, which is why it is necessary for you to be aware of all hazards and residual risks.

Do not run the device unless it is in perfect technical condition. Make sure to always operate it as specified in this document and for the intended purpose.



**Follow the safety instructions for the XV300!**

The section on safety instructions must be read and understood by everyone who will be working with the XV300 before the actual work is performed HMI-PLC.

**NOTICE**

Pay attention to the hazard severity levels used throughout this documentation whenever a hazard is indicated. The hazard symbol and signal word used and the corresponding text will provide information regarding the specific hazard and how to avoid or prevent it.

## 2. Safety regulations

### 2.2 Mandatory requirements, personnel requirements

## 2.2 Mandatory requirements, personnel requirements

### 2.2.1 Occupational safety

All generally accepted occupational health and safety rules and standards (internal and national) must be complied with, as must be all applicable laws and regulations in the relevant country.

### 2.2.2 Personnel qualifications

The personnel responsible for installation, operation, maintenance, and repairs must have the necessary qualifications for the work they will be performing. They must be appropriately trained and/or briefed and be informed of all hazards and risks associated with the device.

### 2.2.3 Device documentation

This manual is considered an integral part of the XV300 and must always be readily available in the device's close proximity so that users have access to it.

Make sure that every person who will be working with the XV300, regardless of the lifecycle stage involved, has read and understood the relevant parts of the documentation for the XV300.

Additional parts of the documentation and information for the XV300, including the installation instructions, can be found at the Eaton Download Center - Documentation and at the product pages on the Internet

 [Eaton.com/documentation](https://www.eaton.com/documentation)

 [Eaton.com/xv300](https://www.eaton.com/xv300)



#### **WARNING**

#### **Incomplete operator manual copies**

Working with individual pages taken out from the operator manual may lead to bodily injury and property damage due to missing safety information.

▶ Always work with the latest and full document.

### 2.2.4 Installation, maintenance, and disposal

Make sure that the XV300 is connected, installed, serviced, and disposed of professionally and in line with all relevant standards and safety rules.

## 2. Safety regulations

### 2.2 Mandatory requirements, personnel requirements



#### **CAUTION**

Installation requires qualified electrician



#### **Important!**

Dispose of recyclables as required by your local recycling regulations.

HMI-PLC XV300 no longer being used must be professionally disposed of as per local standards or returned to the manufacturer or relevant sales department.

### 2.2.5 Prerequisites for proper operation

In order for the device to be able to meet the contractually stipulated terms, the following must be observed:

- Only qualified personnel should be allowed to work with the XV300.
- The personnel working with the XV300 must have read the manual and must follow all the instructions in it.
- The required ambient conditions must be met.
- Maintenance work must be carried out correctly.



Make sure to read the → "Legal disclaimer", page 11.

We assume no liability for damages, consequential damages, and/or accidents caused by the following:

- Failure to follow any applicable occupational health and safety rules, standards, and/or regulations
- Device failures or function disturbances
- Improper use and/or handling
- Not following the instructions or observing the information in the documentation for the XV300
- Alterations, changes, and repairs to the XV300

## 2. Safety regulations

### 2.3 Device-specific hazards

#### 2.3 Device-specific hazards



##### **EXPLOSION HAZARD**

Death, serious injury, and property damage may occur if the device is being used in a potentially explosive (classified) location and, during operation, an electrical plug-in connection is disconnected or the device is exposed to dangerous impacts or other types of dangerous mechanical shock.

- ▶ Use the device in the following environments only:
  - Non-hazardous (non-explosive) areas
  - Zone 22 hazardous areas (as defined in the ATEX Directive)
- ▶ Make sure that the device is not exposed to dangerous impacts and other types of dangerous mechanical shock.
- ▶ Do not operate the device in hazardous (classified) locations unless it is mounted correctly.
- ▶ De-energize the device before disconnecting plug connections.



##### **EXPLOSION HAZARD LITHIUM BATTERY**

The lithium battery inside the XV300 may explode if handled incorrectly.

- ▶ Dispose of the XV300 unit professionally.



##### **CAUTION DESTRUCTION**

The XV300 should only be opened by the manufacturer or by an authorized center. Operate the XV300 until only with the enclosure fully closed and sealed.



##### **CAUTION ELECTROSTATIC DISCHARGE**

Do not touch components (e.g., connector pins) that are electrostatic-sensitive.

- ▶ Discharge any static electricity from your body before touching the HMI-PLC (e.g., by touching an earthed metal object).

Electrostatic discharges may damage or ruin assembly parts.

Because of this, it is necessary to take precautions whenever handling the cards.

Please refer to the guidelines for electrostatic-sensitive components for more information (ESD guidelines).





**CAUTION  
INTERFERENCES**

The values specified in the technical data, as well as the device's electromagnetic compatibility (EMC), cannot be guaranteed if the following are used: unsuitable cables, improperly assembled and terminated cables, and/or wiring that does not conform to the applicable standards.

Only use cables assembled and terminated by professionals.

The cables being used must be assembled and terminated as required by the port/interface description in this document.

When wiring the XV300 multi-touch display, follow all instructions regarding how to wire the corresponding port/interface.

All general Directives and standards must be complied with.



**CAUTION  
INTERFERENCES**

Screw all plug-in connections or lock them into place in order to improve screening.

Signal cables must not be routed in the same cable duct with power cables.

Before putting the system into operation, check all cable connections to make sure that everything has been wired properly.

Make sure that all voltages and signals have the required values as specified in the technical data.



**CAUTION  
SAFELY DIVERTING ELECTRICAL INTERFERENCE CURRENTS**

HMI-PLC The XV300 must be connected to a central earth point with a conductor that is as short and has as low a resistance as possible.

- Ground connection characteristics:

Wire cross-sectional area  $\geq 1.5 \text{ mm}^2$ , length  $\leq 350 \text{ mm}$

The XV300 needs to be connected to the conductive structure in, e.g., the control panel using the central earth point (earthing screw). This method of earthing is mandatory required for proper function.



**DANGER  
STRAY CURRENTS**

Large equalizing currents between the functional earthing system and the ground system of different devices may result in fire or in malfunctions due to signal interference.

- ▶ If necessary, route an equipotential bonding conductor, with a

## 2. Safety regulations

### 2.3 Device-specific hazards

cross-sectional area that is several times larger than that of the cable shielding, parallel to the cable.



#### CAUTION

##### NON-GALVANICALLY-ISOLATED INTERFACES

The XV300 may be damaged by potential differences.

- ▶ The GND terminals of all bus modules must be connected.
- ▶ Do not connect the connector to the XV300 or disconnect it without first de-energizing the system.



#### CAUTION

##### DATA LOSS

If the SD card is being written to and a voltage drop occurs or the card is removed, data may be lost or the SD card may be ruined.

- ▶ Insert the SD card only when the XV300 is de-energized.

Avoid writing to SD cards. Reasons:

- SD cards have a limited number of write cycles.
  - If there is a voltage drop while a write operation is in progress, data loss is highly likely to occur.
- ▶ Remove the SD card only when the XV300 is de-energized.
  - ▶ Before switching off the device, make sure that there are no programs writing to the SD card.



#### CAUTION

##### SHORT-CIRCUIT HAZARD

If the XV300 multi-touch display is or has been exposed to environmental fluctuations (ambient temperature, air humidity), condensation may form on or inside. As long as this condensation is present, there will be a short-circuit hazard.

Do not switch on the XV300 multi-touch display when it has condensation in or on it.

If the XV300 multi-touch display has condensation in or on it, or if the panel has been exposed to environmental fluctuations, let the panel settle into the existing ambient temperature before switching it on.

Do not expose the XV300 multi-touch display to direct thermal radiation from heating appliances.

## 2. Safety regulations

### 2.3 Device-specific hazards



#### **CAUTION UV LIGHT**

Plastics will become brittle when exposed to UV light. This artificial aging will reduce the XV300 unit's lifespan. Protect the XV300 unit from direct sunlight and other sources of UV radiation.



#### **CAUTION POINTY, SHARP OBJECTS AND CORROSIVE LIQUIDS**

When cleaning the XV300:

- Do not use any pointy or sharp objects (e.g., knives).
  - Do not use aggressive or abrasive cleaning products or solvents.
- Make sure that no liquids get into the XV300 unit (short-circuit hazard) and that the XV300 unit is not damaged in any way.



#### **CAUTION INSTALLATION CUT-OUT**

The mounting cutout must be located in a position that will not defeat the purpose of stabilizing webs or other reinforcing elements in the control panel. If necessary, reinforcing elements must be installed/added.

An IP65, Nema 4x and Nema 12 degrees of protection will only be ensured if there is sufficient stiffness, the device is properly mounted using the original fixing material, and the gasket has a proper seat

- Minimum sheet thickness of control panel panel where the device will be flush mounted:  
 $2 \text{ mm (0.08")} \leq d \leq 5 \text{ mm (0.2")}$



#### **CAUTION**

When using commercially available peripheral devices (e.g., with the USB port), it is important to keep in mind that their EMC interference immunity parameters may render them unsuitable for use in industrial environments.

The USB ports (USB host and USB device) on the XV300 multi-touch display are intended exclusively for maintenance work.



#### **WARNING**

The device should only be run with safety extra-low voltage (functional extra-low voltage with protective separation).

The power transformer must conform to the relevant standards.

## 2. Safety regulations

### 2.3 Device-specific hazards



#### CAUTION

##### FORCES ON THE ETHERNET INTERFACE

Communications may be affected, and the connection's mechanical components may be damaged, if the Ethernet interface is subjected to strong vibrations or the RJ45 plug-in connection is subjected to pulling.

- Protect the RJ45 plug-in connection from strong vibrations.
- Protect the RJ45 plug-in connection from tensile forces at the socket.



#### WARNING

XV300 units are products designed for use in industrial environments as defined in ICE/EN 6100–6-4. These products can cause radio interference in domestic environments. In this case, the party operating the products must implement appropriate radio interference suppression measures.



#### CAUTION

Installation requires qualified electrician




## 3. Installation

### 3.1 Prerequisites for the location of use

The XV300 must be used exclusively in locations for which HMI-PLC has been approved/certified.

A 24 VDC supply voltage must be ensured as per the specifications.

 **See also** Label on the → "Nameplate", page 25  
as well as the specifications in the appendix → Section "Technical data", page 85

#### 3.1.1 Installation position

The following must be taken into account when selecting the installation position:

- If you will be using the HMI-PLC in a hazardous (explosive) location, make sure it is not exposed to any dangerous impacts or other types of dangerous mechanical shock.
- The controls and connectors on the XV device's service side must remain accessible even after the device has been installed.



The SD card slot is located on the side of the XV300.  
Make sure to take the space required to remove the SD card into account.

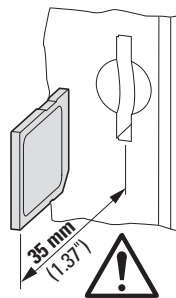


Fig. 12: Space required to remove the SD card

##### 3.1.1.1 Temperatures

Make sure that the HMI-PLC does not overheat.

Do not expose the HMI-PLC to direct sunlight or other sources of heat.

The minimum clearance to components emitting heat, such as transformers under heavy loads, is 15 cm.




**CAUTION  
UV LIGHT**

Plastics will become brittle when exposed to UV light. This artificial aging will reduce the XV300 unit's lifespan. Protect the XV300 unit from direct sunlight and other sources of UV radiation.

### 3. Installation

#### 3.1 Prerequisites for the location of use

The environmental ambient conditions for operation must not exceed the specified values:
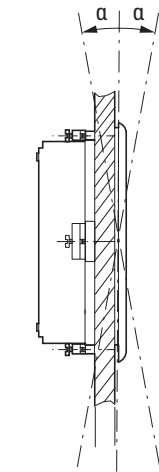
<b>Ambient climatic conditions</b>	
Air pressure (in operation)	795 - 1080 hPa Max. 2000 m above sea level
Temperature	<div style="display: flex; align-items: center;"> <div style="flex: 1;"> <p>Operation</p> <p>Mounting position</p>  </div> <div style="flex: 2;"> <p><math>\pm 0 - +50\text{ }^{\circ}\text{C}</math> (<math>+32 - +122\text{ }^{\circ}\text{F}</math>)</p> <p>XV-303-10-..., XV-303-70-... <math>\alpha \leq \pm 45^{\circ}</math>, <math>T \leq 50\text{ }^{\circ}\text{C}</math> (<math>122\text{ }^{\circ}\text{F}</math>)</p> <p>XV-303-15-.E-..., XV-303-15-.02-... <math>\alpha \leq \pm 10^{\circ}</math>, <math>T \leq 50\text{ }^{\circ}\text{C}</math> (<math>122\text{ }^{\circ}\text{F}</math>)</p> <p>XV-303-15-.00-... <math>\alpha \leq \pm 10^{\circ}</math>, <math>T \leq 50\text{ }^{\circ}\text{C}</math> (<math>122\text{ }^{\circ}\text{F}</math>) <math>\alpha \leq \pm 45^{\circ}</math>, <math>T \leq 45\text{ }^{\circ}\text{C}</math> (<math>113\text{ }^{\circ}\text{F}</math>) Inclination from vertical: <math>\alpha \leq \pm 45^{\circ}</math> at operating temperature <math>\leq 45^{\circ}\text{C}</math> (<math>113^{\circ}\text{F}</math>) possible (if using natural convection)</p> </div> </div>
Storage / Transport	$-20 - +60\text{ }^{\circ}\text{C}$ ( $-4 - +140\text{ }^{\circ}\text{F}$ )
Humidity	Relative humidity 10 - 95 %
Condensation	non-condensing

##### 3.1.1.2 Aeration and de-aeration

- Do not block the ventilation openings when mounting the device:  
They are designed to allow air to circulate in order to cool the HMI-PLC.
- The device uses natural convection-based passive cooling, i.e., it does not use fans.

### 3. Installation

#### 3.1 Prerequisites for the location of use

Ventilation diagram



Fig. 13: Cooling air circulation

Clear Zone

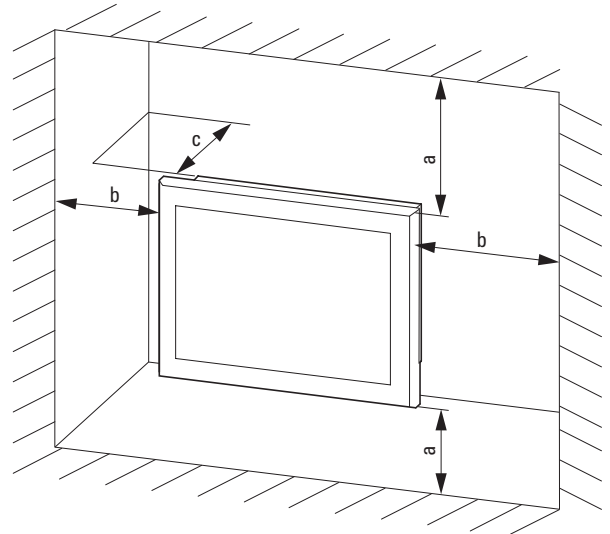


Fig. 14: Mounting distance

- Make sure that there will be enough volume for air changes inside the control panel, etc.  
The specified clearance around the XV300 is:  $a, b, c \geq 30 \text{ mm (1.18")}$
- If you will be installing the XV300 in complex systems together with other assemblies, you must ensure that there will be enough air circulation in order to prevent overheating.  
Ambient temperature with natural convection:  $\vartheta 0^{\circ}\text{C (32}^{\circ}\text{F)} \leq T \leq 50^{\circ}\text{C (122}^{\circ}\text{F)}$   
The panel builder is responsible for the temperature rise calculation. Eaton will provide heat dissipation data for the XV300 as necessary for design verification in accordance with IEC EN 61439.

#### XV-303-15-..

An inclination angle  $\alpha$  greater than  $10^{\circ}$  is only permissible for certain XV-303-15-... device models and only at a reduced max. ambient temperature of  $45^{\circ}\text{C}$ .

For XV-303-15-CE-..., XV-303-15-C02-..., the inclination angle  $\alpha$  is limited to  $\alpha \leq \pm 10^{\circ}$  in general.

#### 3.1.1.3 Criteria for the Installation position

The XV300 are intended to be flush mounted in control cabinets, control panels, or control consoles.

- The XV300 can be installed in landscape or portrait mode.  
If you are using your XV300 unit with an SD card, do not install it with the SD slot facing downwards, as the SD card may fall out otherwise.

### 3. Installation

#### 3.1 Prerequisites for the location of use

- If no forced ventilation is being used, the device must not be mounted at an angle  $\alpha$  exceeding  $\pm \alpha \leq 45^\circ$  relative to its fully vertical position.  
An inclination angle  $\alpha$  greater than  $10^\circ$  is only permissible for certain XV-303-15-... device models and only at a reduced max. ambient temperature of  $45^\circ\text{C}$ .  
For XV-303-15-CE-..., XV-303-15-C02-..., the inclination angle  $\alpha$  is limited to  $\alpha \leq \pm 10^\circ$  in general.
- The enclosure material must be thick enough  
XV-303-10-..., XV-303-70-..., XV-303-15-..  
For front mounting:  $2\text{ mm } (0.08") \leq d \leq 5\text{ mm } (0.2")$ ,  
XV-313-10-..., XV-313-70-..  
For rear (panel) mounting: XV-313-...-A00-..  $d = 1.5\text{ mm } (0.059") \pm 0.1\text{ mm } (0.004")$ ,  
XV-313-...-A11-..  $d = 2\text{ mm } (0.08") \pm 0.1\text{ mm } (0.004")$   
Flatness  $\square \leq 0.5\text{ mm } (0.02")$  at the mounting cutout with  $\checkmark$   $R_z \leq 120$ ; IP 65  $\rightarrow$  DIN ISO 2768-2 (K)
- Recommended mounting cutout  
for front mounting  
XV-303-70-...:  $e = 183\text{ mm } \pm 1 (7.20" \pm 0.04)$ ,  $f = 122\text{ mm } \pm 1 (4.80" \pm 0.04")$   
XV-303-10-...:  $e = 255.5\text{ mm } \pm 1 (10.06" \pm 0.04)$ ,  $f = 160.5\text{ mm } \pm 1 (6.32" \pm 0.04)$ ,  
XV-303-15-...:  $e = 387\text{ mm } \pm 1 (15.24" \pm 0.04)$ ,  $f = 238.5\text{ mm } (9.39") \pm 1\text{ mm } (0.04)$   
for rear (panel) mounting  
XV-313-70-...:  $e = 182.7\text{ mm } \pm 0.1 (7.193" \pm 0.004)$ ,  $f = 126.8\text{ mm } \pm 0.1 (4.992" \pm 0.004)$   
XV-313-10-...:  $e = 255.7\text{ mm } \pm 0.1 (10.07" \pm 0.004)$ ,  $f = 165.8\text{ mm } \pm 0.1 (6.528" \pm 0.004)$

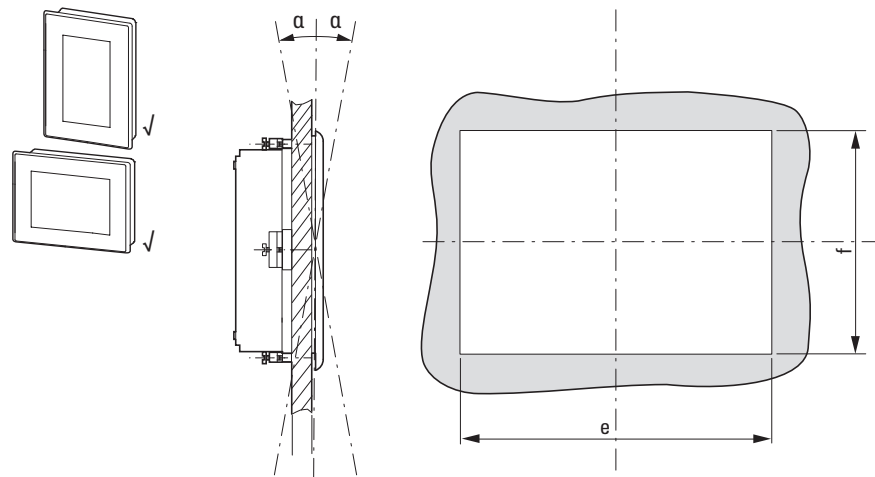


Fig. 15: Mounting position



### 3. Installation

#### 3.1 Prerequisites for the location of use

##### 3.1.2 Technical conditions for acceptance by Underwriters Laboratories Inc. (UL)



The following conditions must be met in order for the certification of UL 61010-2-201 as per XV to apply:

Ambient temperature 0°C to 50°C

Mounting height up to 2000 m

Overvoltage category II

Pollution Degree 2

Permissible voltage range 20%/+25% of rated operating voltage

Type rating

Use in type 4X or type 12 enclosures, use indoors only, at dry locations only

Maximum relative humidity of 95% for temperatures of up to 50 °C, derated linearly to a relative humidity of 50% at 40 °C.

Suitable power supply for class III (SELV or PELV)

The devices must be installed in a suitable fire protection enclosure that provides protection against the spread of fire.

The torque used to tighten the screw terminals on the plug-in connection for the supply voltage must not exceed 0.6 ... 0.8 Nm (5 ... 7 lb-in).

Required only for XV300 SmartWire-DT units with a XV-3.3-...-E-...-... connection.

The supply voltage  $U_{Aux}$  of the SmartWire-DT master interface must be externally protected against overcurrent and short circuit by means of:

- Miniature circuit-breakers 24V<sub>DC</sub>, rated operational current 2 A, tripping characteristic Z
- Or a 2 A fuse

### 3. Installation

#### 3.1 Prerequisites for the location of use

##### 3.1.3 Conditions for marine approval



The following DNV GL rules for shipping classification in accordance with DNVGL-CG-0339 type approvals must be observed:

1. Complete and proper installation and commissioning in accordance with DNV GL rules and Eaton requirements and specifications.
2. Installation of radio interference suppression filters for the 24 V DC supply.

##### 3.1.3.1 Radio interference suppression filter for the 24-V-DC-supply

Additional interference filters must be installed for the power supply in order to adhere to the EMC B provisions.

- ▶ Integrate a radio interference suppression filter into the wiring.

Depending on the output, the following filters can be used:

- XT-FIL-1 radio interference suppression filter for 24 V DC supply up to 2.2 A (Eaton article no. 285316)

or

- XT-FIL-2 radio interference suppression filter for 24 V DC supply up to 12 A (Eaton article no. 118980)

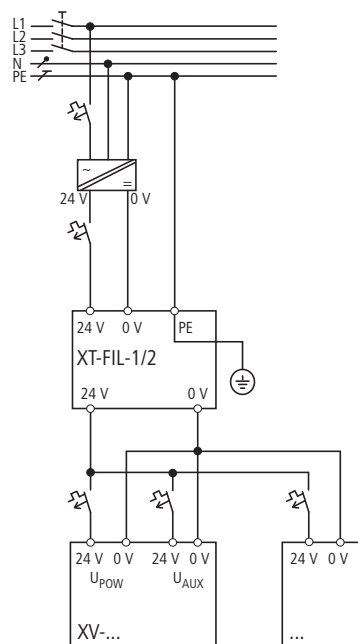


Fig. 16: Engineering example for integration of radio interference suppression filters

### 3. Installation

#### 3.1 Prerequisites for the location of use

Earthing is ensured either by using

- the filter's integrated contact fields onto a grounded metal plate

or using

- a separate line to the filter's PE connection.

Depending on the current consumption or configuration, several filters may be used as well.

### 3. Installation

#### 3.2 Unpacking and checking the equipment supplied

#### 3.2 Unpacking and checking the equipment supplied

- ▶ Check the HMI-PLC's packaging for transit damage.
- ▶ Carefully remove the packaging in order to avoid damaging the device.
- ▶ Check the package contents for visible transit damage.
- ▶ Use the information in Installation instructions IL048009ZU or IL048010ZU to make sure that the contents are complete.



Keep the original packaging so that you will be able to use it in the future if you need to transport or ship the HMI-PLC. Make sure to also keep the documents enclosed with the device and/or to give them to the end customer.

The package for the XV300 comes with:

Tab. 10: Std. pack

Unit	Description
1 x	XV300 or XV-303 XV-313
1 x	Plug connector MSTB 2.5/3-ST-5.08
1 x	Plug connector WAGO 734-104 Required only for XV300 SmartWire-DT units with a XV-3.3-...-E-...-... connection.
1 x	Installation instructions IL048009ZU or IL048010ZU
6 x / 10 x /12 x	Holding bracket with set screw Internal hexagon M 4 x 25 DIN 914 galvanized 6 x for XV-303-70-..., 10 x for XV-303-10-..., or 12 x for XV-303-15-...

The XV300 is sturdily built, but the components inside it are sensitive to excessively strong vibrations and/or mechanical shock.

Accordingly, make sure to protect the XV300 from mechanical loads that exceed the scope of the unit's intended use.

The XV300 should only be transported in its original packaging after being packed properly.

## 3.3 Mounting

*NOTICE*

Arrange for a professional technician to mount the device.



**CAUTION**  
**INSTALLATION CUT-OUT**

The mounting cutout must be located in a position that will not defeat the purpose of stabilizing webs or other reinforcing elements in the control panel. If necessary, reinforcing elements must be installed/added.

An IP65, Nema 4x and Nema 12 degrees of protection will only be ensured if there is sufficient stiffness, the device is properly mounted using the original fixing material, and the gasket has a proper seat

- Minimum sheet thickness of control panel where the device will be flush mounted:

$$2 \text{ mm (0.08")} \leq d \leq 5 \text{ mm (0.2")}$$

### 3.3.1 Fixing and sealing

- ▶ Make sure to check that the Installation are being met. → page 39
- ▶ Make sure that the mounting cutout has the right size.
- ▶ Check the gasket for damage and make sure it is resting correctly inside the enclosure groove.

#### **Missing parts or damage**

If you notice anything wrong, please contact your distributor or Eaton Service +49 (0) 180 5 223822 (de,en)

## 3. Installation

### 3.3 Mounting

#### 3.3.2 Front mounting XV-303

Securing the panel with Holding bracket with set screw

**List of tools:**

- 2.0 m Allen key
- PZ2 Pozidriv screwdriver
- Torque wrench with Newton meter scale

The required holding brackets are included in the right amount as accessories with the HMI-PLC. All the included holding brackets need to be installed!


Together with the gasket, this holding bracket is the main element involved in achieving an IP65 (at front) degree of protection.

The purpose of the holding brackets is to secure the XV300 onto a control panel, etc. To this end, the brackets must be hooked into the enclosure sideways and screwed against the control panel door, etc.

Make sure to position the holding brackets in such a way that they will push against the center of the peripheral gasket.

- ▶ Pre-install the holding brackets using the set screws.

*Check that the gasket is in its correct position and pre-install the holding brackets*

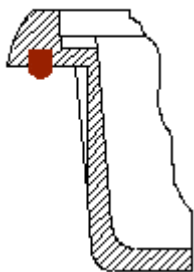

Peripheral gasket in the rim


Sponge rubber round cord, Material NBR/PVC Black, closed outer skin, diameter 3 mm (0.12")

### 3. Installation


#### 3.3 Mounting

*Pre-installing the holding brackets*

*Screw the set screws Internal hexagon M 4 x 25  
DIN 914 galvanized into the holding brackets*

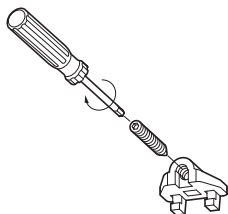

*Insert the holding brackets into the enclosure*

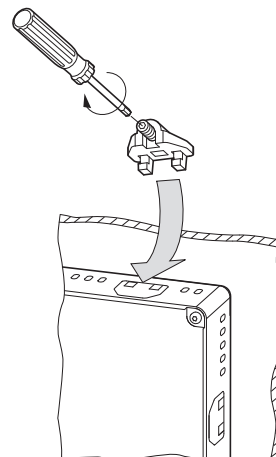

- ▶ 1. Insert the XV-303 into the mounting cutout.
- ▶ 2. Insert a holding bracket into the corresponding enclosure opening and tighten the set screw until it comes into contact with the surface of the control panel, etc.
- ▶ 3. Repeat on the opposite side.
- ▶ 4. Follow steps 3 and 4 to insert the next holding bracket at a 90° angle to the last one you inserted.
- ▶ 5. Repeat steps 3 and 4 until all holding brackets are installed.
- ▶ 6. Check that the device is in its correct, centered position and that the gasket is in contact all around; adjust if necessary.
- ▶ 7. Tighten the set screws in a criss-cross sequence:  
with a torque of  $\leq 0.1\text{Nm}$  (0.86 lb-in)

### 3. Installation

#### 3.3 Mounting

##### 3.3.3 Rear (wall) mounting XV-313

This mounting method is intended for use with sheet metal with a wall thickness of (including any coatings on the sheet metal)

**Version**

- A00 Standard version,  
sheet thickness of the installation panel  $d = 1.5 \text{ mm } (0.059") \pm 0.1 \text{ mm } (0.004")$
- A11 Sheet thickness of the installation panel  $d = 2 \text{ mm } (0.08") \pm 0.1 \text{ mm } (0.004")$

- ▶ Make the mounting cutout.
- ▶ Weld all the M4 x 12 weld studs onto the sheet as shown in the dimensional drawing for mounting

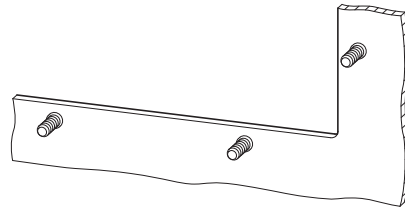


Fig. 17: M4 x 12 weld studs on sheet

*Not a true-to-scale template! If necessary, make your own template based on the dimensional drawing for mounting and the right scale.*

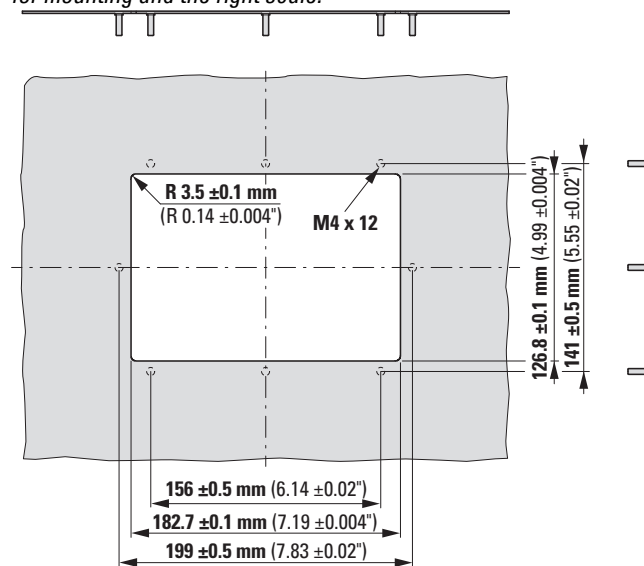


Fig. 18: Dimensional drawing for mounting XV-313-70..



### 3. Installation

#### 3.3 Mounting

*Not a true-to-scale template! If necessary, make your own template based on the dimensional drawing for mounting and the right scale.*

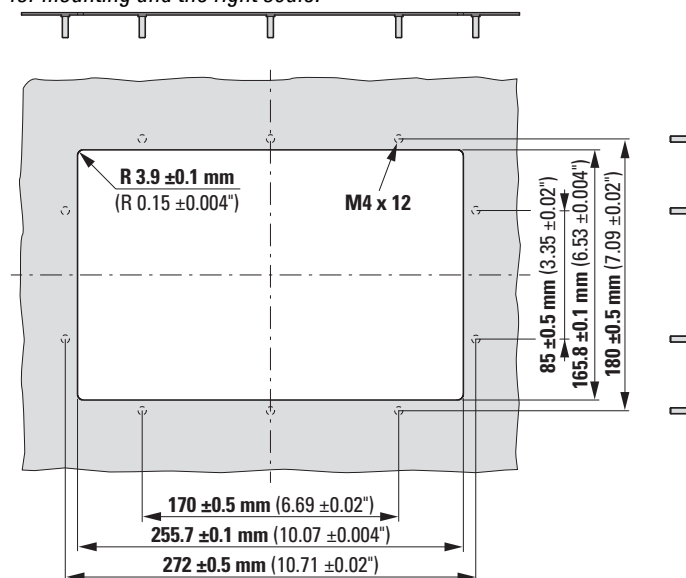


Fig. 19: Dimensional drawing for mounting XV-313-10-..

- ▶ 1. Carefully insert the XV-313 into the mounting cutout from behind.
- ▶ 2. Center the XV-313 in the mounting cutout.
- ▶ 3. Use washers and M4 nuts to fasten the XV-313 to all the weld studs on the sheet in such a way that there is zero clearance

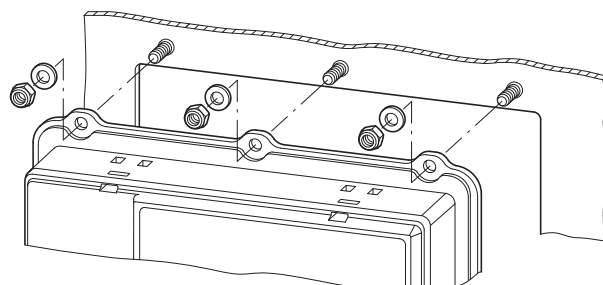


Fig. 20: Mounting XV-313

### 3. Installation

#### 3.4 Preparing the device for operation

#### 3.4 Preparing the device for operation



##### **CAUTION INTERFERENCES**

Screw all plug-in connections or lock them into place in order to improve screening.

Signal cables must not be routed in the same cable duct with power cables.

Before putting the system into operation, check all cable connections to make sure that everything has been wired properly.

Make sure that all voltages and signals have the required values as specified in the technical data.



##### **CAUTION SAFELY DIVERTING ELECTRICAL INTERFERENCE CURRENTS**

HMI-PLC The XV300 must be connected to a central earth point with a conductor that is as short and has as low a resistance as possible.

- Ground connection characteristics:

Wire cross-sectional area  $\geq 1.5 \text{ mm}^2$ , length  $\leq 350 \text{ mm}$

The XV300 needs to be connected to the conductive structure in, e.g., the control panel using the central earth point (earthing screw). This method of earthing is mandatory required for proper function.



##### **CAUTION SHORT-CIRCUIT HAZARD**

If the XV300 multi-touch display is or has been exposed to environmental fluctuations (ambient temperature, air humidity), condensation may form on or inside. As long as this condensation is present, there will be a short-circuit hazard.

Do not switch on the XV300 multi-touch display when it has condensation in or on it.

If the XV300 multi-touch display has condensation in or on it, or if the panel has been exposed to environmental fluctuations, let the panel settle into the existing ambient temperature before switching it on.

Do not expose the XV300 multi-touch display to direct thermal radiation from heating appliances.

### 3. Installation

#### 3.4 Preparing the device for operation

#### Before connecting the power supply



#### CAUTION

24 VDC power supply for integrated AC-to-DC converter.  
The voltage being applied must meet the requirements for safety extra-low voltages (SELV) set forth in IEC 60950 and the requirements for protected extra-low voltages (PELV) set forth in ICE/UL 61010-2-201.  
Pay attention to the polarity.

#### NOTICE

Arrange for an electrician to install the Plug connector MSTB 2.5/3-ST-5.08 and connect the power supply.

The XV300 multi-touch display has an internal fuse and protection against polarity reversal.

The power supply for the XV300 multi-touch display is not galvanically isolated.

The XV300 multi-touch display requires a rated operating voltage of 24 VDC from an AC-to-DC converter with safe isolation (SELV/PELV).

Power Supply			
Rated operating voltage	+ 24 VDC SELV (safety extra low voltage)/PELV (protective extra low voltage)		
Permissible Voltage range	Effective: 19.2-30.0 V DC (rated operating voltage -20%/+25%)		
	Absolute with ripple: 18.0-31.2 V DC		
	Battery powered: 18.0-31.2 V DC (rated operating voltage -25%/+30%); 35 V DC for a duration of < 100 ms		
Voltage dips	Ability to accommodate brief voltage dips ≤ 10 ms from rated operating voltage (24 V DC), ≤ 5 ms from undervoltage (19.2 V DC)		
Power consumption	XV-303-70-.., XV-313-70-..	max. 14.4W Current consumption at 24 V DC: 11.9 W for basic device + 2.5 W for USB module	
	XV-303-10-.., XV-313-10-..	max. 18 W Current consumption at 24 V DC: 15.5 W for basic device + 2.5 W for USB module	
	XV-303-15-..	max. 21.6 W Current consumption at 24 V DC: 19.1 W for basic device + 2.5 W for USB module	
Fuse	Yes (fuse not accessible)		
Potential isolation	No		
Electrical current	7.0" display	10.1" display	15.6" display
$I_e$	≤ 0.6 A	≤ 0.75 A	≤ 0.9 A
$I_{TH}$	1.0 A <sup>2</sup> s	1.0 A <sup>2</sup> s	1.0 A <sup>2</sup> s

### 3. Installation

#### 3.4 Preparing the device for operation

##### 3.4.1 Functional earthing XV300



#### CAUTION

#### SAFELY DIVERTING ELECTRICAL INTERFERENCE CURRENTS

HMI-PLC The XV300 must be connected to a central earth point with a conductor that is as short and has as low a resistance as possible.

- Ground connection characteristics:

Wire cross-sectional area  $\geq 1.5 \text{ mm}^2$ , length  $\leq 350 \text{ mm}$

The XV300 needs to be connected to the conductive structure in, e.g., the control panel using the central earth point (earthing screw). This method of earthing is mandatory required for proper function.

- ▶ Assemble and terminate the functional earth conductor in advance.
- ▶ Unscrew the earthing screw on the enclosure.
- ▶ Put the earthing connection cable's eyelet in position.
- ▶ Use a torque of 1.3 Nm (11.5 lb-in) to tighten the earthing screw on the enclosure.

Tab. 11: Functional earthing specifications

Functional earthing specifications	
Cross-section	$\geq 1.5 \text{ mm}^2$
	$\leq \text{AWG16}$
Earthing bolt	PZ2, M4 x 8
Ring-cable ferrule for M4	Internal diameter = 4.3 mm
	External diameter $\leq 8 \text{ mm}$
Conductor length	$\leq 350 \text{ mm}$
Tightening torque	1.3 Nm (11.5 lb-in)

#### Functional earth

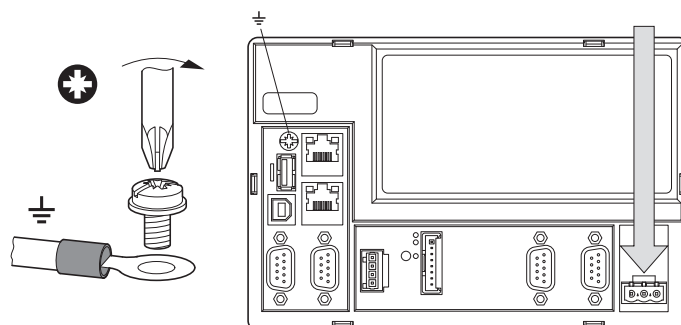


Fig. 21: Screwing the functional earth conductor onto the enclosure


### 3. Installation

#### 3.4 Preparing the device for operation

#### 3.4.2 Power supply - electrical connection

Tab. 12: Configuration Plug connector MSTB 2.5/3-ST-5.08

signal	Configuration
+	Specifications for connection to supply voltage + 24 VDC SELV (safety extra low voltage)/PELV (protective extra low voltage)
n.c.	not used
-	Supply voltage 0 V



Tab. 13: Specifications for connection to 24 VDC supply voltage

Specifications for connection to 24 VDC supply voltage	
Copper conductor	60° / 70°C
Cross-section	min. 0.75 mm <sup>2</sup> / max. 2.5 mm <sup>2</sup> (drain wire or conductor) min. AWG18 / max. AWG12
Tightening torque	0.6 ... 0.8 Nm (5 ... 7 lb-in) for the screws on the Plug connector MSTB 2.5/3-ST-5.08
Strip length	7 mm

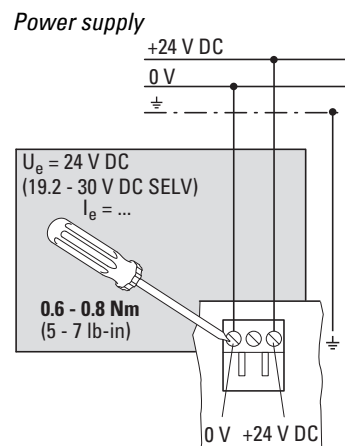


Fig. 22: Connecting the screw terminals on the Plug connector MSTB 2.5/3-ST-5.08

### 3. Installation

#### 3.4 Preparing the device for operation

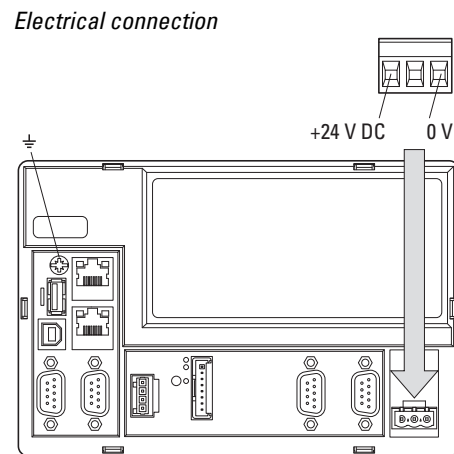


Fig. 23: Power supplied through Plug connector MSTB 2.5/3-ST-5.08

- ▶ Use the Plug connector MSTB 2.5/3-ST-5.08 to terminate the connection cable for the power supply in advance.
- ▶ Plug the pre-assembled plug into the socket on the enclosure.
- ▶ Pay attention to the polarity.
- ▶ Connect the power supply cable to a 24 VDC supply voltage that meets the requirements for safety extra-low voltages (SELV) set forth in IEC 60950 and – in connection with the UL listing – the requirements for a low-voltage source set forth in UL 61010-2-201.

The XV300 is now ready to run on 24 V<sub>DC</sub>.

## 4. Commissioning



### CAUTION

#### SHORT-CIRCUIT HAZARD

If the XV300 multi-touch display is or has been exposed to environmental fluctuations (ambient temperature, air humidity), condensation may form on or inside. As long as this condensation is present, there will be a short-circuit hazard.

Do not switch on the XV300 multi-touch display when it has condensation in or on it.

If the XV300 multi-touch display has condensation in or on it, or if the panel has been exposed to environmental fluctuations, let the panel settle into the existing ambient temperature before switching it on.

Do not expose the XV300 multi-touch display to direct thermal radiation from heating appliances.

- ▶ Apply a XV300 to the 24 VDC supply voltage unit

The XV300 unit will boot up.



The XV300 multi-touch display does not come with any runtime software for visualization or PLCs installed.

The corresponding software packages can be used to install the required runtime software on the XV300 unit.

## **4. Commissioning**

### **4.1 Initial commissioning**

#### **4.1 Initial commissioning**

Carry out the following steps once:

- ▶ Configure the XV300 unit's system settings as necessary.
- ▶ Install the required software packages.



## 4.2 Running the XV300

Once the XV300 has been initially commissioned, it will run whenever it is connected to the supply voltage.

In other words, it does not have to be separately switched on and off.



Reducing the level of brightness will increase the display back-light's lifespan.

### See also



System description Windows CE 7

mn050004en



Follow the instructions in the following section if your XV300 until will not boot up and/or if an error message appears: → Section "Faults", page 78

### 5. External connections

With their ports, Eaton's XV300 multi-touch display make it possible to connect a variety of peripheral devices and components.



#### **DANGER STRAY CURRENTS**

Large equalizing currents between the functional earthing system and the ground system of different devices may result in fire or in malfunctions due to signal interference.

- ▶ If necessary, route an equipotential bonding conductor, with a cross-sectional area that is several times larger than that of the cable shielding, parallel to the cable.



#### **CAUTION INTERFERENCES**

The values specified in the technical data, as well as the device's electromagnetic compatibility (EMC), cannot be guaranteed if the following are used: unsuitable cables, improperly assembled and terminated cables, and/or wiring that does not conform to the applicable standards.

Only use cables assembled and terminated by professionals.

The cables being used must be assembled and terminated as required by the port/interface description in this document.

When wiring the XV300 multi-touch display, follow all instructions regarding how to wire the corresponding port/interface.

All general Directives and standards must be complied with.

## 5. External connections

### 5.1 Layout of interfaces

### 5.1 Layout of interfaces



Fig. 24: Basic interfaces on all HMI-PLC units

	<b>Interface</b>	<b>Version</b>
①	SD card slot	SDSC or SDHC conforming to the SDA 2.0 specification
②	USB host	USB 2.0, not galvanically isolated, plug type A, Full power (500 mA)
③	USB device	USB 2.0, not galvanically isolated, plug type B
④	Ethernet 1	RJ-45 socket, 8-pole, 2 LEDs (CAT5e/6), LAN1, 10/100 Mbps
⑤	COM2	RS-485, not galvanically isolated, SUB-D plug 9-pole, UNC nuts for interlocking
⑥	COM1	RS-232, not galvanically isolated, SUB-D plug 9-pole, UNC nuts for interlocking
⑦	CAN	CAN1, not galvanically isolated, SUB-D plug 9-pole, UNC nuts for interlocking

5.1.1 Optional interfaces



Fig. 25: XV300 multi-touch display with all optional features

- |   |              |  |
|---|--------------|--|
| ⑧ | Ethernet 2   | RJ-45 socket, 8-pole, 2 LEDs (CAT5e/6), LAN1, 10/100 Mbps                              |
| ⑨ | Profibus     | Profibus DP, not galvanically isolated, SUB-D socket 9-pole, UNC nuts for interlocking |
| ⑩ | SmartWire-DT | 4-pin WAGO connector (article no. 734-104) and 8-pin ribbon cable plug                 |

## 5. External connections

### 5.2 SD card

#### 5.2 SD card

The slot for the SD card is on the side of the XV300 unit.



#### **CAUTION DATA LOSS**

If the SD card is being written to and a voltage drop occurs or the card is removed, data may be lost or the SD card may be ruined.

- ▶ Insert the SD card only when the XV300 is de-energized.

Avoid writing to SD cards. Reasons:

- SD cards have a limited number of write cycles.
  - If there is a voltage drop while a write operation is in progress, data loss is highly likely to occur.
- ▶ Remove the SD card only when the XV300 is de-energized.
  - ▶ Before switching off the device, make sure that there are no programs writing to the SD card.

#### **Inserting the SD card**



SD cards cannot be inserted the wrong way around.

Do not use force when inserting the card.

- ▶ Push the SD card into the SD card slot until you feel it lock into place.

#### **Removing the SD card**

- ▶ Push the SD card into the SD card slot all the way to the stop.
- ▶ Pull the SD card out of the SD card slot.
- ▶ Store the SD card in its case in order to protect it.

## 5.3 USB interfaces

Eaton's XV300 multi-touch display units feature ports that can be used to connect USB peripheral devices supported by the XV300 unit's hardware and operating system.



### CAUTION

When using commercially available peripheral devices (e.g., with the USB port), it is important to keep in mind that their EMC interference immunity parameters may render them unsuitable for use in industrial environments.

The USB ports (USB host and USB device) on the XV300 multi-touch display are intended exclusively for maintenance work.



Only use standard USB cables with a shield.  
Max. cable length: 5 m.

### 5.3.1 USB host



Fig. 26: USB 2.0, not galvanically isolated, plug type A, Full power (500 mA)

### 5.3.2 USB device

The USB device interface supports USB 2.0.



Fig. 27: USB 2.0, not galvanically isolated, plug type B

## 5. External connections

### 5.4 Ethernet 1, Ethernet 2

#### 5.4 Ethernet 1, Ethernet 2

The Ethernet 1 port on the XV300 can be used as a communication interface or as a real-time field bus interface.

The Ethernet 2 port on the XV300 multi-touch display XV-3.3-...-C...-...-.. can only be used as a communication interface without real-time requirements.

The Ethernet controllers support transfer rates of 10 Mbit/s and 100 Mbit/s.

When the green LED lights up, this means that there is a LINK, i.e., that an active network is connected and has been detected.

When the yellow LED flashes, this means that data is being transferred.



Fig. 28: RJ-45 socket, 8-pole, 2 LEDs (CAT5e/6), LAN1, 10/100 Mbps



For the network, use shielded twisted-pair (STP) cables only.

For connecting:

The XV300 to a device:

- Use a crossover cable.

The XV300 to a hub/switch:

- Use a patch cable (1:1).

Max. cable length: 100 m.



#### **CAUTION**

#### **FORCES ON THE ETHERNET INTERFACE**

Communications may be affected, and the connection's mechanical components may be damaged, if the Ethernet interface is subjected to strong vibrations or the RJ45 plug-in connection is subjected to pulling.

- Protect the RJ45 plug-in connection from strong vibrations.
- Protect the RJ45 plug-in connection from tensile forces at the socket.

To commission the communication between the XV300 and the device, follow the description for the connected device.


## 5. External connections

### 5.5 Serial interfaces for communication with PLCs or devices

## 5.5 Serial interfaces for communication with PLCs or devices


### 5.5.1 COM1 RS-232

The RS232-The interface is not electrically isolated.

	<p><b>CAUTION</b>  <b>NON-GALVANICALLY-ISOLATED INTERFACES</b></p> <p>The XV300 may be damaged by potential differences.</p> <ul style="list-style-type: none"> <li>▶ The GND terminals of all bus modules must be connected.</li> <li>▶ Do not connect the connector to the XV300 or disconnect it without first de-energizing the system.</li> </ul>
---	--

Tab. 14: Pin assignment COM1

RS-232, not galvanically isolated, SUB-D plug 9-pole, UNC nuts for interlocking

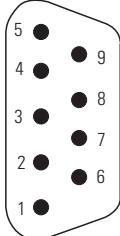SUB-D plug 9 pole	PIN	signal	Description
	1	DCD	Data Carrier Detect
	2	RXD	Receive Data
	3	TXD	Transmit Data
	4	DTR	Data Terminal Ready
	5	GND	Signal Ground
	6	DSR	Data Set Ready
	7	RTS	Request to Send
	8	CTS	Clear To Send
	9	RI	Ring Indicator
	Plug housings	GND	Functional earth

#### 5.5.1.1 Wiring topic

- Shielded cables must be used.
- The maximal baud rate depends on the cable length

Tab. 15: RS-232 cable length based on baud rate

Cable length	Max. baud rate
2.5 m	115200 Bit/s
5 m	57600 Bit/s
10 m	38400 Bit/s
15 m	19200 Bit/s
30 m	9600 Bit/s



When preparing connections, ensure that the cable shield has a low impedance connection with the connector housing.




## 5. External connections

### 5.5 Serial interfaces for communication with PLCs or devices


#### 5.5.2 COM2 RS-485

The RS485-The interface is not electrically isolated.

	<b>CAUTION</b>
	<b>NON-GALVANICALLY-ISOLATED INTERFACES</b>
	The XV300 may be damaged by potential differences.
	▶ The GND terminals of all bus modules must be connected.
	▶ Do not connect the connector to the XV300 or disconnect it without first de-energizing the system.

Tab. 16: Pin assignment COM2

RS-485, not galvanically isolated, SUB-D plug 9-pole, UNC nuts for interlocking

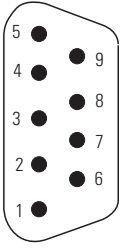SUB-D plug 9 pole	PIN	signal	Description
	1	n.c.	not used
	2	n.c.	not used
	3	B	Line B
	4	n.c.	not used
	5	GND	Ground
	6	5 V	Output for external bus termination
	7	A	A cable
	8	n.c.	not used
	9	n.c.	not used
Plug housings	GND	Functional earth	

➔ n.c.: PIN 1, 2, 4, 8 and 9 must not be connected.

➔ Pin 6 (5 V) must not be used as a power supply for external devices.

#### Wiring topic

- Screened twisted-pair cables must be used.
- The maximal baud rate depends on the cable length.

Tab. 17: Specifications for RS-485 wiring

Rated cable impedance	120 Ohm
Permissible impedance	108 ... 132 Ohm
Max. cable length	1200 m
Possible baud rates	9600 Bit/s
	19200 Bit/s
	38400 Bit/s
	57600 Bit/s
	115200 Bit/s

➔ When preparing connections, ensure that the cable shield has a low impedance connection with the connector housing.

## 5. External connections

### 5.5 Serial interfaces for communication with PLCs or devices

#### RS-485 topology

- A bus segment can interconnect up to 32 slaves.
- Several bus segments can be connected using repeaters (bi-directional amplifiers).



The use of repeaters enables the maximum cable length to be increased.

For more details, please consult the documentation provided by manufacturer.

A bus segment must be provided with cable termination (120 Ohm) at both ends.

These terminals must be connected in the plug directly between pin 3 and 7.



The bus segment must be terminated at both ends.

There must not be more than two terminations per bus segment.

Running the bus segment without the right termination may result in transmission errors.

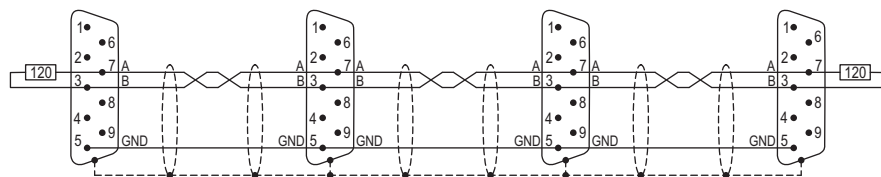



Fig. 29: Bus segment with four nodes

## 5. External connections

### 5.6 CAN1 interface for the CANopen protocol, J1939 protocol, etc.

#### 5.6 CAN1 interface for the CANopen protocol, J1939 protocol, etc.

The CAN1-The interface is not electrically isolated.




**CAUTION**  
**NON-GALVANICALLY-ISOLATED INTERFACES**

The XV300 may be damaged by potential differences.

- ▶ The GND terminals of all bus modules must be connected.
- ▶ Do not connect the connector to the XV300 or disconnect it without first de-energizing the system.

Tab. 18: PIN assignment for CAN interface as specified in CiA)

CAN1, not galvanically isolated, SUB-D plug 9-pole, UNC nuts for interlocking

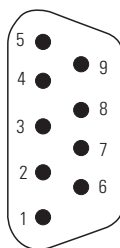SUB-D plug	PIN	signal	Description
9 pole 	1	n.c.	not used
	2	CAN-L	Bus line (dominant low)
	3	GND	Ground
	4	n.c.	not used
	5	n.c.	not used
	6	GND	Optional Ground
	7	CAN-H	Bus line (dominant high)
	8	n.c.	not used
	9	n.c.	not used



- nc: PIN 1, 4, 5, 8 and 9 must not be connected.
- PIN 3 (CAN-GND) and 6 (GND) are internally inter-connected.
- The power supply of the CAN bus drivers is implemented internally.
- A power supply for third party devices is not provided on the CAN connector.

#### Wiring topic

- Screened twisted-pair cables must be used.

Tab. 19: Specifications for CAN wiring

Rated cable impedance			120 Ohm
Permissible impedance			108 ... 132 Ohm
Capacitance per unit length			< 60 pF/m
Core cross-section	With a max. cable length of	100 m	0.25 mm <sup>2</sup>
		250 m	0.34 mm <sup>2</sup>
		500 m	0.75 mm <sup>2</sup>

## 5. External connections

### 5.6 CAN1 interface for the CANopen protocol, J1939 protocol, etc.

The maximal baud rate depends on the cable length.

Possible baud rates		25 m	1000 kBit/s
		50 m	800 kBit/s
		100 m	500 kBit/s
		250 m	250 kBit/s
	With a max. cable length of	500 m	125 kBit/s
		500 m	100 kBit/s (can be set through software)
		1000 m	50 kBit/s
		2500 m	20 kBit/s
		5000 m	10 kBit/s

➔ When preparing connections, ensure that the cable shield has a low impedance connection with the connector housing.

#### CAN-Bus-topology

- A bus segment can interconnect up to 32 slaves.
- Several bus segments can be connected using repeaters (bi-directional amplifiers).

➔ The use of repeaters enables the maximum cable length to be increased.  
Repeaters can also be used for galvanic isolation. For more details, please consult the documentation for repeaters provided by manufacturer.  
Make sure to follow the recommendations provided by CiA (CAN in Automation) at [can-cia.org](http://can-cia.org).

A bus segment must be provided with cable termination (120 Ohm) at both ends.

These terminals must be connected in the plug directly between pin 2 and 7.

➔ The bus segment must be terminated at both ends.  
There must not be more than two terminations per bus segment.  
Running the bus segment without the right termination may result in transmission errors.

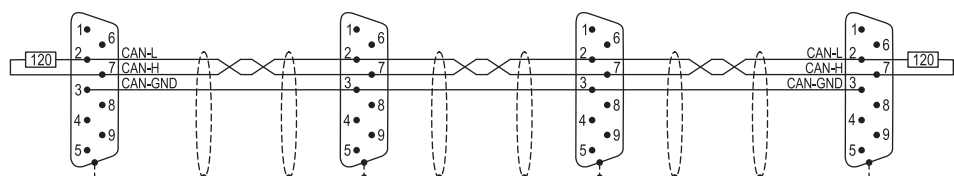



Fig. 30: CAN bus segment with four nodes

## 5. External connections

### 5.7 Profibus Interfaces

### 5.7 Profibus Interfaces

The Profibus-DP--The interface is not electrically isolated.




**CAUTION**  
**NON-GALVANICALLY-ISOLATED INTERFACES**

The XV300 may be damaged by potential differences.

- ▶ The GND terminals of all bus modules must be connected.
- ▶ Do not connect the connector to the XV300 or disconnect it without first de-energizing the system.

Tab. 20: Pin assignment for Profibus DP, not galvanically isolated, SUB-D socket 9-pole, UNC nuts for interlocking PROFIBUS interface

SUB-D socket	PIN	signal	Description
9 pole 	1	n.c.	not used
	2	n.c.	not used
	3	B	EIA RS 485 cable B
	4	RTSAS	Output for controlling a repeater
	5	M5EXT (GND)	Output 0 V for external termination (Ground)
	6	P5EXT	Output 5 V for external termination
	7	n.c.	not used
	8	A	EIA RS 485 cable A
	9	n.c.	not used



PIN 6 (5 V) must not be used as a power supply for external devices.  
 nc: PIN 1, 2, 7 and 9 must not be connected.

#### Wiring topic

- Screened twisted-pair cables must be used.
- Cable type A (as specified in Profibus standards IEC/EN 61158 and IEC/EN 61784)

Tab. 21: Specifications for Profibus wiring

Cable specifications			
Rated cable impedance			150 Ohm
Permissible impedance			135 ... 165 Ohm
Capacitance per unit length			< 30 pF/m
Loop resistance			< 100 Ohm/km
Core cross-section			≥ 0.34 mm <sup>2</sup> (22 AWG)
The maximal baud rate depends on the cable length.			
Possible baud rates	With a max. cable length of	100 m	12000 kBit/s (12MBit/s)
		200 m	1500 kBit/s
		400 m	500 kBit/s
		1000 m	187.5 kBit/s
		1200 m	≤ 93.75 kBit/s



When preparing connections, ensure that the cable shield has a low impedance connection with the connector housing.

**Profibus topology**

- A bus segment can interconnect up to 32 slaves.
- Several bus segments can be connected using repeaters (bi-directional amplifiers).



The use of repeaters enables the maximum cable length to be increased.

For more details, please consult the documentation for repeaters provided by manufacturer.

Only use bus connector plugs specified for use with PROFIBUS networks.

These plugs combine both bus cables on a single node and ensure that the cable shield has a low-impedance connection to the node's shield reference potential.

These bus terminal connectors contain the PROFIBUS cable termination that can be switched on as required.

A bus segment must be provided with cable termination at both ends. This termination is passive, but is fed from the node. It ensures a defined quiescent signal on the bus if no bus station is sending. These bus terminations are preferably implemented externally in the connector housing as per the PROFIBUS standard (and can be implemented using the aforementioned bus connector plugs).

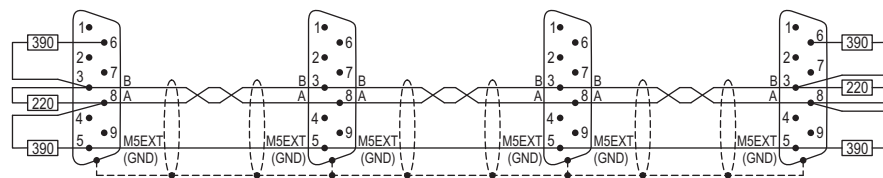


Fig. 31: Profibus bus segment with four nodes



- The bus segment must be terminated at both ends.
- No more than two terminations must be provided for each bus segment.
- At least one of the two terminations must be fed by the bus station.
- Operation without correct termination of the Profibus network can cause transfer errors.

## 5. External connections

### 5.8 XV300 multi-touch display as a SmartWire-DT coordinator

#### 5.8 XV300 multi-touch display as a SmartWire-DT coordinator



Applies only to XV300 SmartWire-DT units with a XV-3.3-...-E-...-... connection.

In addition to the information in this document, you will also need the information in the following documents in order to set up a SmartWire-DT network and install and operate it using the SmartWire-DT master:

System description, engineering, installation, commissioning, and diagnostics for a SWD network



SmartWire-DT The System Manual

MN05006002Z

Setup, engineering, installation, etc. for the individual SWD modules



Manual for SmartWire-DT IP20 modules

MN05006001Z



Manual for SmartWire-DT IP67 modules

MN120006

#### 5.8.1 SmartWire-DT powered via POW/AUX

The POW/AUX-The interface is not electrically isolated.



#### CAUTION

#### NON-GALVANICALLY-ISOLATED INTERFACES

The XV300 may be damaged by potential differences.

- ▶ The GND terminals of all bus modules must be connected.
- ▶ Do not connect the connector to the XV300 or disconnect it without first de-energizing the system.

*Electrical connection*



Power supply SmartWire-DT  
POW/AUX

Fig. 32: SmartWire-DT power connector

## 5. External connections

### 5.8 XV300 multi-touch display as a SmartWire-DT coordinator

#### Conditions for Underwriters Laboratories Inc. (UL) listing.



The supply voltage  $U_{AUX}$  of the SmartWire-DT master interface must be externally protected against overcurrent and short circuit by means of:

- Miniature circuit-breakers  $24V_{DC}$ , rated operational current 2 A, tripping characteristic Z
- Or a 2 A fuse

#### 5.8.1.1 SWD power supply voltages

The following supply voltages are required for a SmartWire-DT network:

- POW supply voltage:  
The device supply voltage for the electronics in the downstream SmartWire-DT modules (15 V DC) is generated using the 24 V DC supply voltage applied at the POW terminal.
- AUX supply voltage:  
If there are any contactors or motor starters in the SmartWire-DT topology, a 24 V DC AUX voltage must be additionally supplied as a control voltage for the contactor coils.

#### POW/AUX power supply interface

The Plug connector WAGO 734-104 plug connector is included with the device.

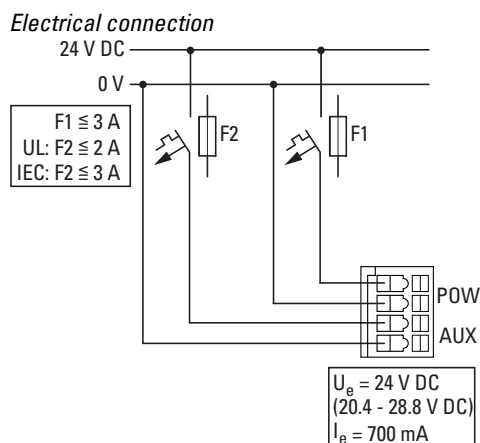



Fig. 33: WAGO plug connector (view from wiring side)

Tab. 22: Pin assignment WAGO plug connector

Plug connector	PIN	signal	Description
4 pole 	1	+24 V DC POW	Supply voltage $U_{POW}$ +24 V DC
	2	0 V POW	Supply voltage $U_{POW}$ 0 V
	3	+24 V DC AUX	Supply voltage $U_{AUX}$ +24 V DC
	4	0 V AUX	Supply voltage $U_{AUX}$ +0 V



## 5. External connections

### 5.8 XV300 multi-touch display as a SmartWire-DT coordinator

Observe the following when assembling and terminating the wiring for the plug connector:

Tab. 23: Wiring the plug connector

	Description/Value
Terminal type:	spring-cage terminal
Cross-section	0.2 - 1.5 mm <sup>2</sup> (connectable conductor, solid) AWG24 - AWG16
Strip length	6 -7 mm

External overcurrent and short-circuit protective device, implemented with a miniature circuit-breaker or a fuse, is required for  $U_{AUX}$ .

Tab. 24: Overcurrent and short-circuit protective device standards

Standard	Overcurrent and short-circuit protective device
DIN VDE 0641, part 11 and EC/EN 60898	Miniature circuit-breaker 24 V DC, rated operational current 3 A, trip type Z fuse 3 A, Utilization category gL/gG
UL 61010-2-201	Miniature circuit-breaker 24 V DC, rated operational current 2 A, trip type Z fuse 2 A

## 5. External connections

### 5.8 XV300 multi-touch display as a SmartWire-DT coordinator

#### 5.8.2 SmartWire-DT interface

The SmartWire-DT-The interface is not electrically isolated.



#### CAUTION


#### NON-GALVANICALLY-ISOLATED INTERFACES

The XV300 may be damaged by potential differences.

- ▶ The GND terminals of all bus modules must be connected.
- ▶ Do not connect the connector to the XV300 or disconnect it without first de-energizing the system.

SmartWire-DT uses an eight-conductor ribbon cable in control panels. In addition to communication wires, this ribbon cable carries the power supply for the SWD modules, the switchgear, as well as control wires for assigning addresses.

Tab. 25: Pin assignment for SmartWire-DT ribbon cable interface (pin header, 8-pin)

Plug connector	PIN	signal	Configuration
8 pole 	1	+24 V DC	Contactor control voltage
	2	Chassis ground	Contactor control voltage
	3	GND	for device supply voltage and data cable
	4	Data B	Data cable B
	5	Data A	Data cable A
	6	GND	for device supply voltage and data (Data A, Data B)
	7	SEL	Select cable for automatic addressing of the SWD slaves
	8	+15 V DC	Device supply voltage

#### Wiring topic

- When connecting the SmartWire-DT network to the SmartWire-DT interface, make sure to only use the following ribbon cables:  
 SWD4-100LF8-24 with the corresponding SWD4-8MF2 blade terminals OR  
 SWD4-(3/5/10)F8-24-2S (prefabricated cable)

## 5. External connections

### 5.8 XV300 multi-touch display as a SmartWire-DT coordinator

#### 5.8.2.1 Commissioning the SmartWire-DT network

The following requirements must be met before switching on the network after initial commissioning, replacement, or modifying the SmartWire-DT configuration:

- All SWD modules must be connected to each other via SmartWire-DT cables.
- The SmartWire-DT network must be connected to the SmartWire-DT interface.
- The power supply for the device and for SmartWire-DT must be on and connected.
- The SmartWire-DT master's POW LED must be lit up with a solid light.
- The status LEDs of the connected SWD modules must be flashing or showing a solid light.
- There must be a PLC project in which the SmartWire-DT master is configured (project configuration).
- The PLC runtime system must be installed on the device.

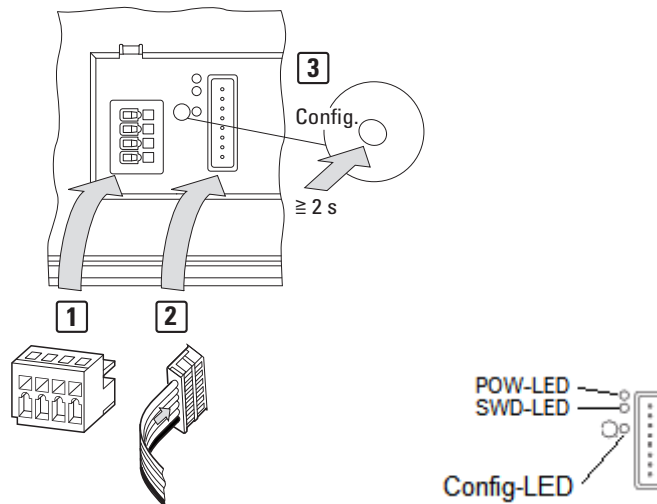


Fig. 34: Commissioning SmartWire-DT sequence

Perform the following instructions :

- ▶ Press and hold down the Config button for at least 2 seconds.

The SmartWire-DT master interface's SWD LED will start flashing with an orange light.

The status LEDs on the connected SmartWire-DT modules will flash.

The SWD LED on the SmartWire-DT master interface will start to flash green.

Addresses will be assigned to all SmartWire-DT modules.

The SmartWire-DT network's physical configuration must be stored in the 's retentive HMI-PLC as a target configuration.

The SWD LED on the SmartWire-DT master interface must light up with a solid green light.

- ▶ Load the PLC project onto the XV300 multi-touch display.

## 5. External connections

### 5.8 XV300 multi-touch display as a SmartWire-DT coordinator

#### Configuration tests

The configurations are compared every time the power supply is switched on.

- The modules that are actually on the network will be compared with the target configuration stored on the device:  
If the SmartWire-DT network's physical configuration matches the target configuration, the SmartWire-DT network will be ready to start transferring data.
- The target configuration stored in the device will be compared with the project configuration defined in the PLC:  
If the target configuration matches the project configuration, the Config LED will light up with a solid green light.

Tab. 26: SWD-LED

#### **SWD-LED**

Indicates whether the physical configuration of the SWD network matches the target configuration stored in the XV300.

State	Description
AUS	No target configuration present
Red continuous light	<ul style="list-style-type: none"> <li>• Short-circuit on the 15 V DC power supply.</li> <li>• No SmartWire-DT module found.</li> </ul>
Red flashing	The modules found in the SmartWire-DT network do not match the target configuration. A SmartWire-DT module configured as necessary is missing.
Flashing with an orange light	The SmartWire-DT network's physical configuration is being imported and stored as a new target configuration in the device.
Green flashing	<ul style="list-style-type: none"> <li>• The physical configuration of the SmartWire-DT network is compared with the target configuration.</li> <li>• The SmartWire-DT modules are addressed.</li> </ul>
Green continuous light	<ul style="list-style-type: none"> <li>• The modules found in the SmartWire-DT network match the target configuration.</li> <li>• The SmartWire-DT network is ready for data exchange.</li> </ul>

## 5. External connections

### 5.8 XV300 multi-touch display as a SmartWire-DT coordinator

Tab. 27: Config-LED

#### **Config-LED**

Indicates whether the SWD master project configuration defined in the PLC matches the SWD network target configuration stored in the . XV300

<b>State</b>	<b>Description</b>
AUS	<ul style="list-style-type: none"><li>• No project configuration present.</li><li>• Incorrect target configuration (see LED SWD).</li></ul>
Red continuous light	The project configuration and the stored target configuration are not compatible with each other.
Green flashing	The project configuration is compatible with the stored target configuration.
Green continuous light	The project configuration matches the stored target configuration

## 6. Faults

This section provides troubleshooting information for your XV300 in case it does not behave as expected.

<b>Fault</b>	<b>Cause</b>	<b>Remedy</b>
XV300 will not boot up	No 24 VDC supply voltage	Check the input wiring. Switch on XV300.
The display stays or turns dark.	The backlight is deactivated.	Switch the backlight on; please refer to the Windows Embedded Compact 7 pro system description or to the corresponding function in the visualization software.
The Capacitive multi-touch technology (PCT) is not responding or is responding incorrectly when used.	The functional earthing has not been connected properly.	The XV300 needs to be connected to the conductive structure in, e.g., the control panel using the central earth point (earthing screw). Ground connection characteristics: Wire cross-sectional area $\geq 1.5$ mm <sup>2</sup> , length $\leq 350$ mm
	The touch is not calibrated correctly.	Switch on XV300. Calibrate the touch functionality; please refer to the Windows Embedded Compact 7 pro system description
	The touch is disabled.	Switch on XV300. Enable the touch functionality; please refer to the Windows Embedded Compact 7 pro system description

## 7. Maintenance

### 7.1 Cleaning and maintenance

The XV300 are maintenance-free.

However, the following work may need to be carried out:

- Cleaning the Capacitive multi-touch technology (PCT) when soiled.
- Recalibrating the Capacitive multi-touch technology (PCT) if it stops responding correctly to touch.

#### 7.1.1 Capacitive multi-touch technology (PCT)

When soiled:



**CAUTION**

**POINTY, SHARP OBJECTS AND CORROSIVE LIQUIDS**

When cleaning the XV300:

- Do not use any pointy or sharp objects (e.g., knives).
- Do not use aggressive or abrasive cleaning products or solvents.

Make sure that no liquids get into the XV300 unit (short-circuit hazard) and that the XV300 unit is not damaged in any way.

- ▶ Clean the Capacitive multi-touch technology (PCT) with a clean, soft, damp cloth.

#### 7.1.2 Battery

The internal battery used to back up the real-time clock is maintenance-free and is sized for a backup time of normally 10 years at 25° C (77°F) when de-energized, provided the corresponding ambient conditions are met.

## 7. Maintenance

### 7.2 Repairs

### 7.2 Repairs

For repairs, please contact your vendor or Eaton's Technical Support.



**CAUTION  
DESTRUCTION**

The XV300 should only be opened by the manufacturer or by an authorized center. Operate the XV300 until only with the enclosure fully closed and sealed.

Use the original packaging to ship the device.



## 7.3 Storage, transport and disposal

### 7.3.1 Storage and transport



**CAUTION  
UV LIGHT**

Plastics will become brittle when exposed to UV light. This artificial aging will reduce the XV300 unit's lifespan. Protect the XV300 unit from direct sunlight and other sources of UV radiation.



**CAUTION  
SHORT-CIRCUIT HAZARD**

If the XV300 multi-touch display is or has been exposed to environmental fluctuations (ambient temperature, air humidity), condensation may form on or inside. As long as this condensation is present, there will be a short-circuit hazard.

Do not switch on the XV300 multi-touch display when it has condensation in or on it.

If the XV300 multi-touch display has condensation in or on it, or if the panel has been exposed to environmental fluctuations, let the panel settle into the existing ambient temperature before switching it on.

Do not expose the XV300 multi-touch display to direct thermal radiation from heating appliances.


The ambient conditions must be met when transporting and storing the XV300.

The ambient air temperature for storage and transportation must not exceed the maximum specified limit:

<b>Ambient climatic conditions</b>	
Air pressure (in operation)	795 - 1080 hPa Max. 2000 m above sea level
Temperature	
Operation	$\pm 0 - +50\text{ °C}$ ( $+32 - +122\text{ °F}$ )
Mounting position	XV-303-10-..., XV-303-70-... $\alpha \leq \pm 45^\circ$ , $T \leq 50\text{ °C}$ ( $122\text{ °F}$ )
	XV-303-15-.E-..., XV-303-15-.02-.. $\alpha \leq \pm 10^\circ$ , $T \leq 50\text{ °C}$ ( $122\text{ °F}$ )
	XV-303-15-.00-... $\alpha \leq \pm 10^\circ$ , $T \leq 50\text{ °C}$ ( $122\text{ °F}$ ) $\alpha \leq \pm 45^\circ$ , $T \leq 45\text{ °C}$ ( $113\text{ °F}$ ) Inclination from vertical: $\alpha \leq \pm 45^\circ$ at operating temperature $\leq 45\text{ °C}$ ( $113\text{ °F}$ ) possible (if using natural convection)

## 7. Maintenance

### 7.3 Storage, transport and disposal

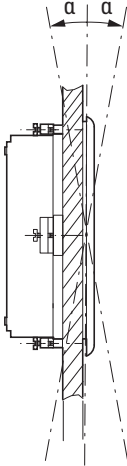Ambient climatic conditions	
	
Storage / Transport	-20 – + 60 °C (-4 – +140 °F)
Humidity	Relative humidity 10 - 95 %
Condensation	non-condensing



#### Before commissioning

If storing/transporting the device in cold weather conditions or in such a way that it will be exposed to extreme differences in temperature, make sure that no condensation forms on or inside the device.

If there is condensation in or on the device, do not switch on the HMI-PLC until it is completely dry.


Use the original packaging to ship the device.


The XV300 is sturdily built, but the components inside it are sensitive to excessively strong vibrations and/or mechanical shock.

Accordingly, make sure to protect the XV300 from mechanical loads that exceed the scope of the unit's intended use.

The XV300 should only be transported in its original packaging after being packed properly.

**7.3.2 Disposal**

	<p><b>EXPLOSION HAZARD</b>  <b>LITHIUM BATTERY</b></p> <p>The lithium battery inside the XV300 may explode if handled incorrectly.</p> <p>▶ Dispose of the XV300 unit professionally.</p>
---	---

	<p><b>Important!</b></p> <p>Dispose of recyclables as required by your local recycling regulations.</p>
---	---

XV300 no longer being used must be professionally disposed of as per local standards or returned to the manufacturer or relevant sales department.

Tab. 28: Materials used XV300

Assembly part		Material
Display	XV-303	Anti-glare tempered glass in plastic bezel
	XV-313	Anti-glare tempered glass without bezel, Front side with aluminum frame
Enclosure material		Insulated material black
Battery	Panasonic	Lithium BR-2330/GNU, 3V, 255 mAh, Weight (g): 3.7 SVHC Substance: ethylene glycol dimethyl ether Substance weight (%): 2-4

**Materials used in the packaging**

Packaging	Material
Outer packaging	Cardboard
Inner packaging	Cardboard
	Plastic bag: polyethylene (PE)

## Appendix

---

<b><u>A.1 Technical data</u></b> .....	<b>85</b>
A.1.1 Data sheets .....	85
A.1.2 Dimension and weight specifications .....	85
A.1.3 General data .....	93
A.1.4 Port and interface specifications .....	95
A.1.5 Information on the power supply .....	105
A.1.6 Approvals and declarations .....	107
<b><u>A.2 Further usage information</u></b> .....	<b>109</b>

## Appendix A.1 Technical data

### A.1 Technical data

#### A.1.1 Data sheets

The current specifications for the device can be found in the corresponding data sheet at [Eaton.com/ecat](http://Eaton.com/ecat)

#### A.1.2 Dimension and weight specifications

##### XV-303-70-.. Front mounting

##### 7.0" Display

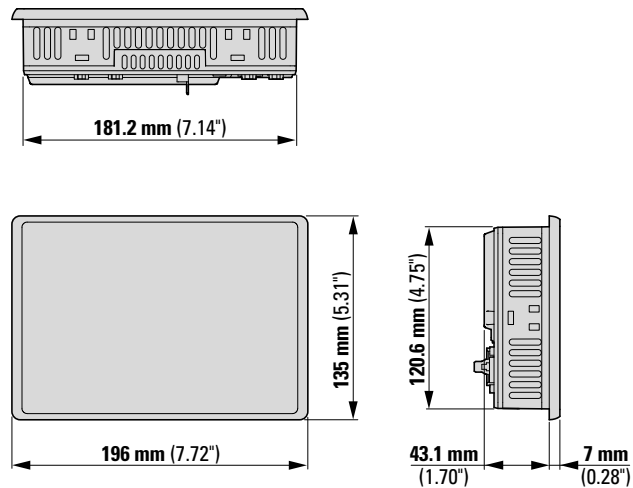


Fig. 35: Dimensions for 7.0" front mounting devices in mm (inches)

Width x Height x Depth 196 mm x 135 mm x 51 mm (7.72" x 5.31" x 2.01")  
(without plug)

Weight 0.74 kg (1.63 lbs)

**XV-303-10... Front mounting**

**10.1" Display**

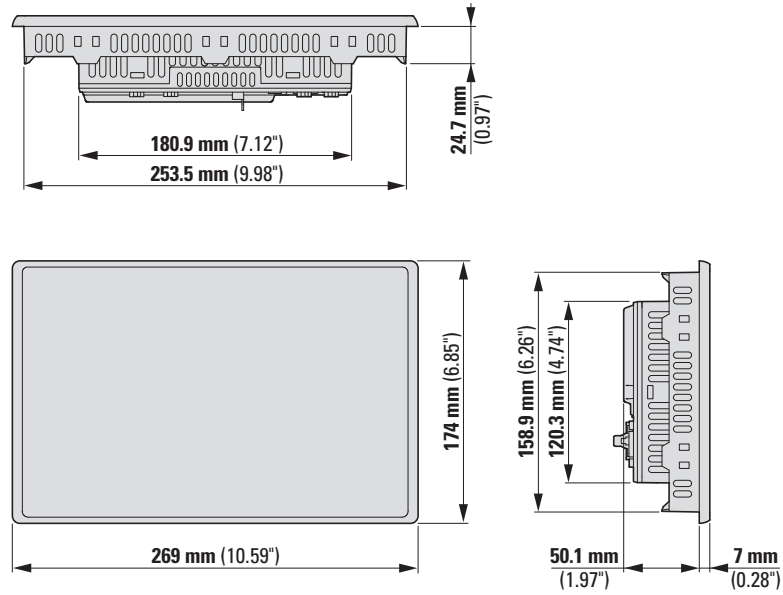


Fig. 36: Dimensions for 10.1" front mounting devices in mm (inches)

Width x Height x Depth 269 mm x 174 mm x 58 mm (10.59" x 6.85" x 2.28")  
(without plug)

Weight 1.13 kg (2.49 lbs)

**Appendix  
A.1 Technical data**

**XV-303-15-.. Front mounting  
15.6" Display**

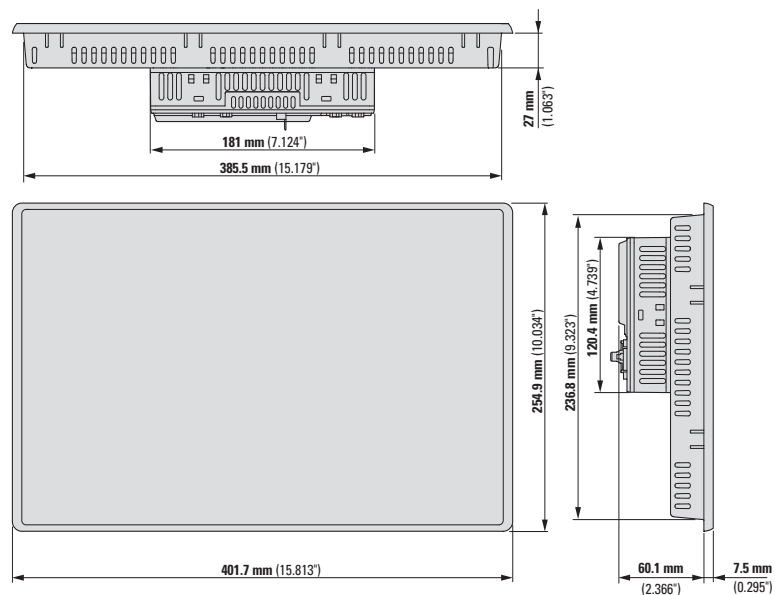


Fig. 37: Dimensions for 15.6" front mounting devices in mm (inches)

Width x Height x Depth 401.7 mm x 254.9 mm x 67.6 mm  $\pm 0.2$  (15.9" x 10.04" x 2.661"  $\pm 0.008$ )  
(without plug)

Weight 3.25 kg (7.17 lbs)

Rear (panel) mounting XV-313-70-..

7.0" Display XV-313-...-A00-..

Sheet thickness of the installation panel  $d = 1.5 \text{ mm (0.059")} \pm 0.1 \text{ mm (0.004")}$

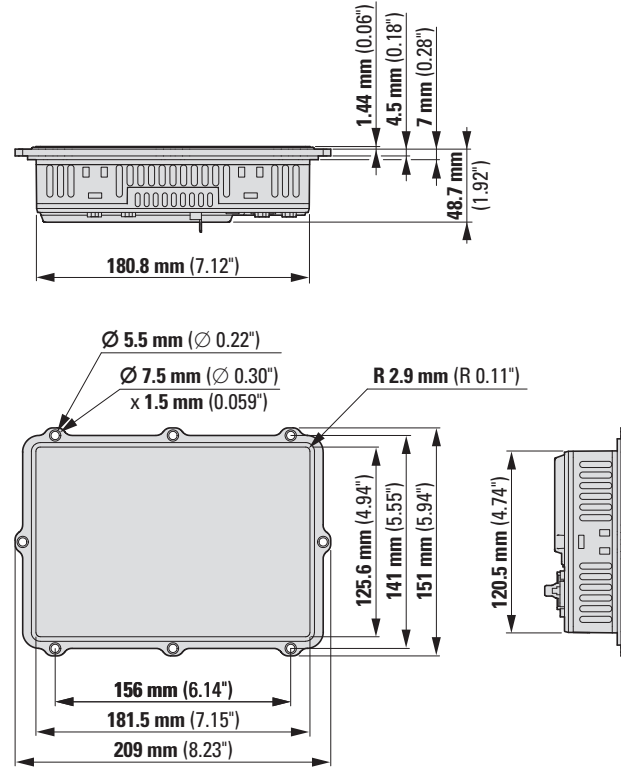


Fig. 38: Dimensions for 7.0" rear (panel) mounting devices in mm (inches) XV-313-...-A00-..



**Appendix**  
**A.1 Technical data**

**7.0" Display XV-313-...-A11-..**

Sheet thickness of the installation panel  $d = 2 \text{ mm } (0.08") \pm 0.1 \text{ mm } (0.004")$

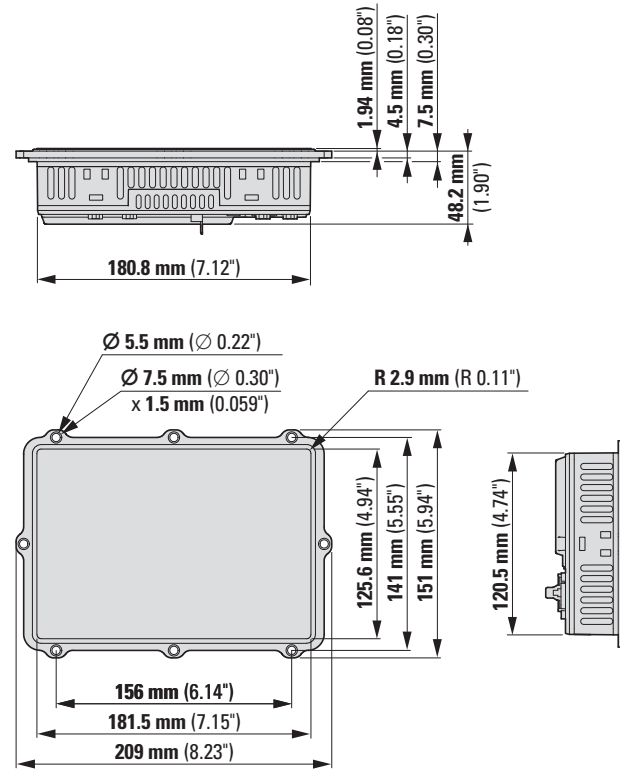


Fig. 39: Dimensions for 7.0" rear (panel) mounting devices in mm (inches) XV-313-...-A11-..

Width x Height x Depth 209 mm x 151 mm x 51 mm (8.23" x 5.94" x 2.01")  
 (without plug)

Weight 0.8 kg (1.76 lbs)

**Rear (panel) mounting XV-313-10-..**

**10.1" Display XV-313-...-A00-..**

Sheet thickness of the installation panel  $d = 1.5 \text{ mm (0.059")} \pm 0.1 \text{ mm (0.004")}$

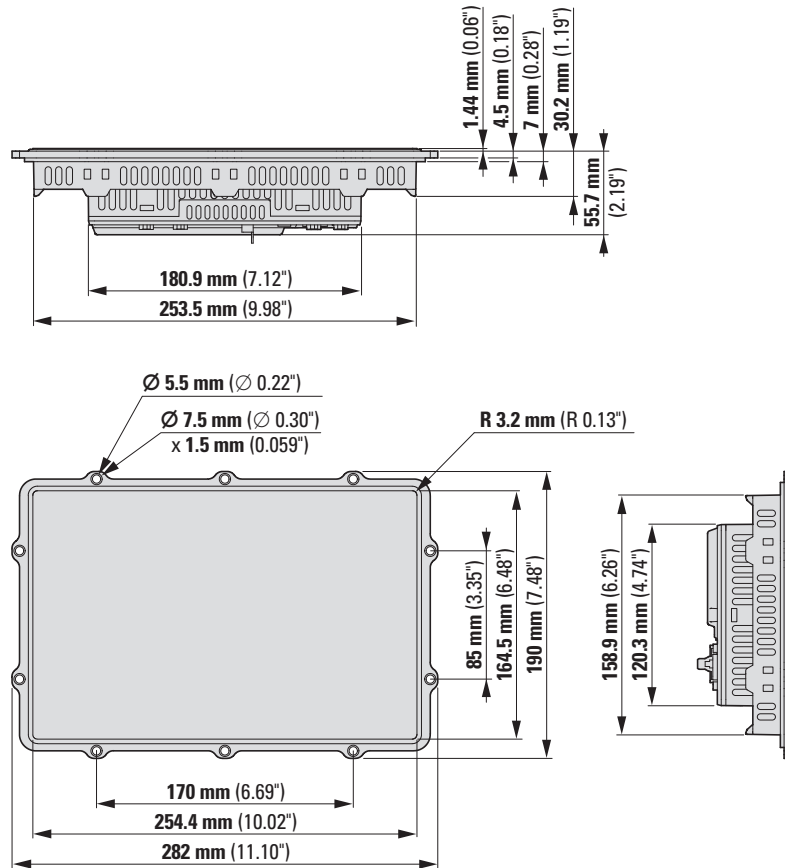


Fig. 40: Dimensions for 10.1" rear (panel) mounting devices in mm (inches)XV-313-...-A00-..

**Appendix  
A.1 Technical data**

**10.1" Display XV-313-...-A11-..**

Sheet thickness of the installation panel  $d = 2 \text{ mm } (0.08") \pm 0.1 \text{ mm } (0.004")$

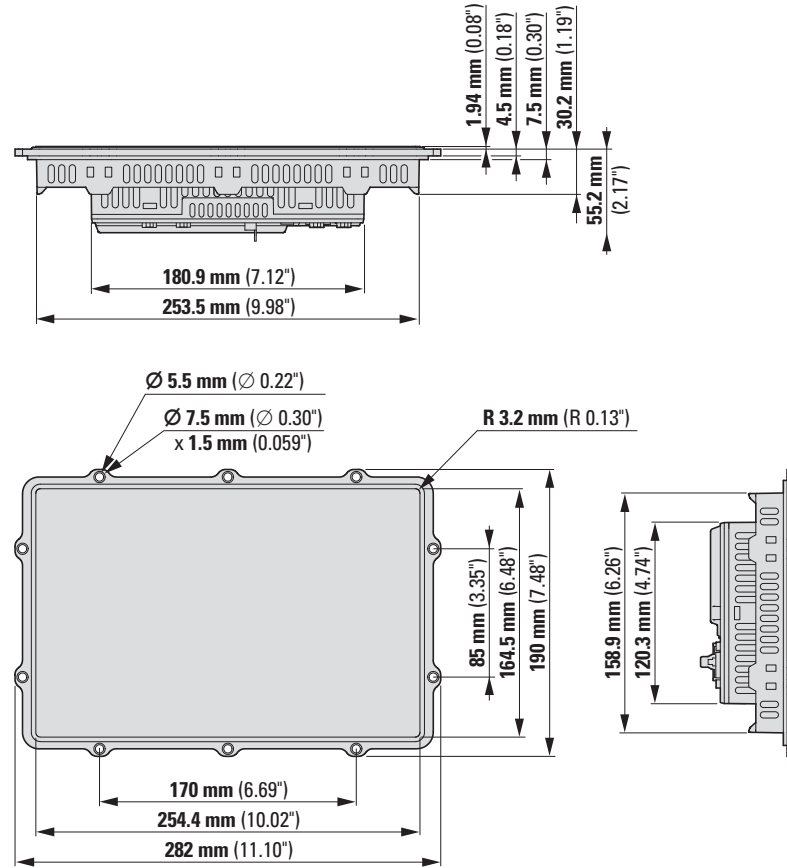


Fig. 41: Dimensions for 10.1" rear (panel) mounting devices in mm (inches) XV-313-...-A11-..

Width x Height x Depth 282 mm x 190 mm x 58 mm (11.10" x 7.48" x 2.28")  
(without plug)

Weight 1.21 kg (2.67 lbs)

A.1.2.1 Mounting surrounds for rear (panel) mounting

*Not a true-to-scale template! If necessary, make your own template based on the dimensional drawing for mounting and the right scale.*

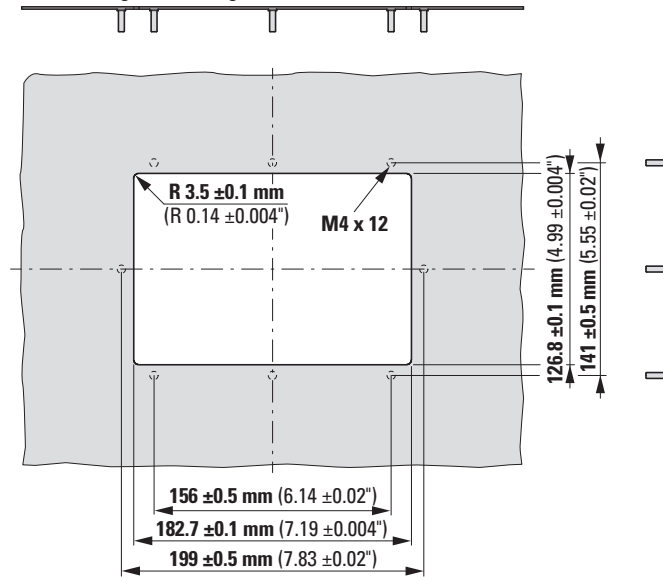


Fig. 42: Installation panel for XV-313-70-..

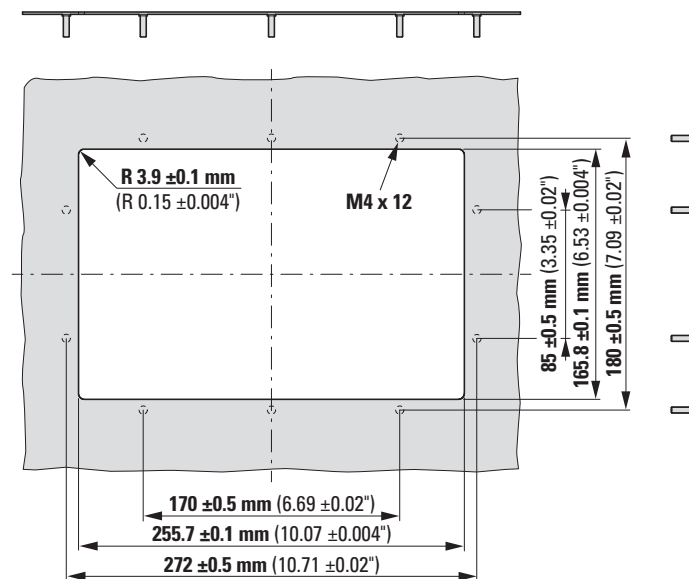


Fig. 43: Installation panel for XV-313-10-..

## Appendix

### A.1 Technical data

#### A.1.3 General data

The following specifications apply to all XV300 units or to the specified part nos. where applicable.

<b>General</b>		
Type		
	XV-303	Plastic enclosure and glass panel in plastic frame
	XV-313	Plastic enclosure and glass panel in aluminum mounting frame
Degree of protection	IP65 (at front), IP20 (at rear) NEMA 4X, NEMA 12 (as per NEMA 250-2003)	
<b>Operation</b>		
Technology	Projected Capacitive Touch (PCT)	
Touch sensor	Multi-touch touch panel	
System		
	Processor	ARM Cortex-A9 800 MHz
	Internal memory	512 MB RAM, 1GB SLC, 128kB Retain
SD card slots	One SDSC or SDHC conforming to the SDA 2.0 specification – use genuine accessories only!	
Cooling	Fanless CPU and system cooling, natural convection-based passive cooling	
Back-up of real-time clock		
	Battery (lifespan)	Non-maintained
	Backup (time at zero voltage)	normally 10 years at 25° C (77°F)
Operating System	Windows Embedded Compact 7 pro	
<b>Display</b>		
Display - Type	Color display, TFT, anti-glare	
Number of Colors	≈ 16.7 mill. (color depth 24 bit)	
Resolution		
	, XV-303-70-..., XV-313-70-.. XV-303-10-..., XV-313-10-..	WSVGA   1024 x 600 pixels
	XV-303-15-..	WXGA   1366 x 768 pixels
Screen diagonal		
	XV-303-70-..., XV-313-70-..	7.0" widescreen
	XV-303-10-..., XV-313-10-..	10.1" widescreen
	XV-303-15-..	15.6" widescreen
Screen area visible		
	XV-303-70-..., XV-313-70-..	153.6 mm x 90.0 mm
	XV-303-10-..., XV-313-10-..	222.72 mm x 125.28 mm
	XV-303-15-..	344.23 mm x 193.54 mm
Contrast ratio (Normally)		
	XV-303-70-..., XV-313-70-..	normally 850:1

<b>Display</b>	
XV-303-10-..., XV-313-10-..., XV-303-15-...	normally 500:1
Brightness	Normally 400 cd/m <sup>2</sup>
Backlight	LED dimnable via software
Lifespan of backlight	Normally 50000 h at 25 °C

## Appendix

### A.1 Technical data

#### A.1.4 Port and interface specifications

##### A.1.4.1 Front mounting

### 7.0" Display

Tab. 29: Communication ports and interfaces for front mounting XV-303-70-...

Catalog Number	XV-303-70-B00-...	XV-303-70-C00-...	XV-303-70-B02-...	XV-303-70-C02-...
<b>Qty.</b>				
Ethernet	1	2	1	2
RS-232	1	1	1	1
RS-485	1	1	1	1
CAN	1	1	1	1
USB host 2.0	1	1	1	1
USB device 2.0	1	1	1	1
Profibus	–	–	1	1
SWD	–	–	–	–
<b>Type</b>				
Ethernet	10/100 Mbps			
USB host	USB 2.0, not galvanically isolated			
USB device	USB 2.0, not galvanically isolated			
RS-232	not galvanically isolated, SUB-D plug, 9-pole, UNC			
RS-485	not galvanically isolated, SUB-D plug, 9-pole, UNC			
CAN	not galvanically isolated, SUB-D plug, 9-pole, UNC			
Profibus DP	–	–	not galvanically isolated, D-Sub bus 9-pole, UNC	
SmartWire-DT master	–	–	–	–

### 10.1" Display

Tab. 30: Communication ports and interfaces for front mounting XV-303-10-...

Catalog Number	XV-303-10- B00-...	XV-303-10- C00-...	XV-303-10- B02-...	XV-303-10- C02...
<b>Qty.</b>				
Ethernet	1	2	1	2
RS-232	1	1	1	1
RS-485	1	1	1	1
CAN	1	1	1	1
USB host 2.0	1	1	1	1
USB device 2.0	1	1	1	1
Profibus	–	–	1	1
SWD	–	–	–	–
<b>Type</b>				
Ethernet	10/100 Mbps			
USB host	USB 2.0, not galvanically isolated			
1 x USB device,	USB 2.0, not galvanically isolated			
RS-232	not galvanically isolated, SUB-D plug, 9-pole, UNC			
RS-485	not galvanically isolated, SUB-D plug, 9-pole, UNC			
CAN	not galvanically isolated, SUB-D plug, 9-pole, UNC			
Profibus DP	–	–	not galvanically isolated, D-Sub bus 9-pole, UNC	
SmartWire-DT master	–	–	–	–



## Appendix

### A.1 Technical data

#### 15.6" Display

Tab. 31: Communication ports and interfaces for front mounting XV-303-15-...

Catalog Number	XV-303-15-B00-...	XV-303-15-C00-...	XV-303-15-B02-...	XV-303-15-C02-...
<b>Qty.</b>				
Ethernet	1	2	1	2
RS-232	1	1	1	1
RS-485	1	1	1	1
CAN	1	1	1	1
USB host 2.0	1	1	1	1
USB device 2.0	1	1	1	1
Profibus	–	–	1	1
SWD	–	–	–	–
<b>Type</b>				
Ethernet	10/100 Mbps			
USB host	USB 2.0, not galvanically isolated			
1 x USB device,	USB 2.0, not galvanically isolated			
RS-232	not galvanically isolated, SUB-D plug, 9-pole, UNC			
RS-485	not galvanically isolated, SUB-D plug, 9-pole, UNC			
CAN	not galvanically isolated, SUB-D plug, 9-pole, UNC			
Profibus DP	–	–	not galvanically isolated, D-Sub bus 9-pole, UNC	
SmartWire-DT master	–	–	–	–

**A.1.4.2 Front mounting with SmartWire-DT connection**

**7.0" Display**

Tab. 32: Communication ports and interfaces for front mounting XV-303-70-.. with SmartWire-DT connection

Catalog Number	XV-303-70- BE0-...	XV-303-70- CE0-...	XV-303-70- BE2-...	XV-303-70- CE2-...
<b>Qty.</b>				
Ethernet	1	2	1	2
RS-232	1	1	1	1
RS-485	1	1	1	1
CAN	1	1	1	1
USB host 2.0	1	1	1	1
USB device 2.0	1	1	1	1
Profibus	–	–	1	1
SWD	1	1	1	1
<b>Type</b>				
Ethernet	10/100 Mbps			
USB host	USB 2.0, not galvanically isolated			
1 x USB device,	USB 2.0, not galvanically isolated			
RS-232	not galvanically isolated, SUB-D plug, 9-pole, UNC			
RS-485	not galvanically isolated, SUB-D plug, 9-pole, UNC			
CAN	not galvanically isolated, SUB-D plug, 9-pole, UNC			
Profibus DP	–	–	not galvanically isolated, D-Sub bus 9-pole, UNC	
SmartWire-DT master	Yes	Yes	Yes	Yes

## Appendix

### A.1 Technical data

#### 10.1" Display

Tab. 33: Communication ports and interfaces for front mounting XV-303-10-.. with SmartWire-DT connection

Catalog Number	XV-303-10- BE0-...	XV-303-10-CE0-...	XV-303-10- BE2-...	XV-303-10- CE2-...
<b>Qty.</b>				
Ethernet	1	2	1	2
RS-232	1	1	1	1
RS-485	1	1	1	1
CAN	1	1	1	1
USB host 2.0	1	1	1	1
USB device 2.0	1	1	1	1
Profibus	–	–	1	1
SWD	1	1	1	1
<b>Type</b>				
Ethernet	10/100 Mbps			
USB host	USB 2.0, not galvanically isolated			
1 x USB device,	USB 2.0, not galvanically isolated			
RS-232	not galvanically isolated, SUB-D plug, 9-pole, UNC			
RS-485	not galvanically isolated, SUB-D plug, 9-pole, UNC			
CAN	not galvanically isolated, SUB-D plug, 9-pole, UNC			
Profibus DP	–	–	not galvanically isolated, D-Sub bus 9-pole, UNC	
SmartWire-DT master	Yes	Yes	Yes	Yes

**15.6" Display**

Tab. 34: Communication ports and interfaces for front mounting XV-303-15-... with SmartWire-DT connection

Catalog Number	XV-303-15- BE0-...	XV-303-15-CE0-...	XV-303-15- BE2-...	XV-303-15- CE2-...
<b>Qty.</b>				
Ethernet	1	2	1	2
RS-232	1	1	1	1
RS-485	1	1	1	1
CAN	1	1	1	1
USB host 2.0	1	1	1	1
USB device 2.0	1	1	1	1
Profibus	–	–	1	1
SWD	1	1	1	1
<b>Type</b>				
Ethernet	10/100 Mbps			
USB host	USB 2.0, not galvanically isolated			
1 x USB device,	USB 2.0, not galvanically isolated			
RS-232	not galvanically isolated, SUB-D plug, 9-pole, UNC			
RS-485	not galvanically isolated, SUB-D plug, 9-pole, UNC			
CAN	not galvanically isolated, SUB-D plug, 9-pole, UNC			
Profibus DP	–	–	not galvanically isolated, D-Sub bus 9-pole, UNC	
SmartWire-DT master	Yes	Yes	Yes	Yes

## Appendix

### A.1 Technical data

#### A.1.4.3 Rear (panel) mounting

##### 7.0" Display

Tab. 35: Communication ports and interfaces for rear (panel) mounting XV-313-70-..

Catalog Number	XV-313-70-B00-...	XV-313-70-C00-...
Qty.		
Ethernet	1	2
RS-232	1	1
RS-485	1	1
CAN	1	1
USB host 2.0	1	1
USB device 2.0	1	1
Profibus	–	–
SWD	–	–
Type		
Ethernet	10/100 Mbps	
USB host	USB 2.0, not galvanically isolated	
1 x USB device,	USB 2.0, not galvanically isolated	
RS-232	not galvanically isolated, SUB-D plug, 9-pole, UNC	
RS-485	not galvanically isolated, SUB-D plug, 9-pole, UNC	
CAN	not galvanically isolated, SUB-D plug, 9-pole, UNC	
Profibus DP	–	
SmartWire-DT master	–	

### 10.1" Display

Tab. 36: Communication ports and interfaces for rear (panel) mounting XV-313-10-..

Catalog Number	XV-313-10-B00-...	XV-313-10-C00-...
<b>Qty.</b>		
Ethernet	1	2
RS-232	1	1
RS-485	1	1
CAN	1	1
USB host 2.0	1	1
USB device 2.0	1	1
Profibus	–	–
SWD	–	–
<b>Type</b>		
Ethernet	10/100 Mbps	
USB host	USB 2.0, not galvanically isolated	
1 x USB device,	USB 2.0, not galvanically isolated	
RS-232	not galvanically isolated, SUB-D plug, 9-pole, UNC	
RS-485	not galvanically isolated, SUB-D plug, 9-pole, UNC	
CAN	not galvanically isolated, SUB-D plug, 9-pole, UNC	
Profibus DP	–	
SmartWire-DT master	–	

## Appendix

### A.1 Technical data

#### A.1.4.4 Rear (panel) mounting with SmartWire-DT connection

##### 7.0" Display

Tab. 37: Communication ports and interfaces for front mounting XV-313-70-.. with SmartWire-DT connection

Catalog Number	XV-313-70-CE0-...
Qty.	
Ethernet	2
RS-232	1
RS-485	1
CAN	1
USB host 2.0	1
USB device 2.0	1
Profibus	–
SWD	1
Type	
Ethernet	10/100 Mbps
USB host	USB 2.0, not galvanically isolated
1 x USB device,	USB 2.0, not galvanically isolated
RS-232	not galvanically isolated, SUB-D plug, 9-pole, UNC
RS-485	not galvanically isolated, SUB-D plug, 9-pole, UNC
CAN	not galvanically isolated, SUB-D plug, 9-pole, UNC
Profibus DP	–
SmartWire-DT master	Yes

### 10.1" Display

Tab. 38: Communication ports and interfaces for front mounting XV-313-10-... with SmartWire-DT connection

Catalog Number	XV-313-10-CEO-...
<b>Qty.</b>	
Ethernet	2
RS-232	1
RS-485	1
CAN	1
USB host 2.0	1
USB device 2.0	1
Profibus	–
SWD	1
<b>Type</b>	
Ethernet	10/100 Mbps
USB host	USB 2.0, not galvanically isolated
1 x USB device,	USB 2.0, not galvanically isolated
RS-232	not galvanically isolated, SUB-D plug, 9-pole, UNC
RS-485	not galvanically isolated, SUB-D plug, 9-pole, UNC
CAN	not galvanically isolated, SUB-D plug, 9-pole, UNC
Profibus DP	–
SmartWire-DT master	Yes



## Appendix

### A.1 Technical data

#### A.1.5 Information on the power supply

The following specifications apply to all XV300 units.

<b>Power Supply</b>			
Rated operating voltage	+ 24 VDC SELV (safety extra low voltage)/PELV (protective extra low voltage)		
Permissible Voltage range	Effective: 19.2-30.0 V DC (rated operating voltage -20%/+25%)		
	Absolute with ripple: 18.0-31.2 V DC		
	Battery powered: 18.0-31.2 V DC (rated operating voltage -25%/+30%); 35 V DC for a duration of < 100 ms		
Voltage dips	Ability to accommodate brief voltage dips $\leq 10$ ms from rated operating voltage (24 V DC), $\leq 5$ ms from undervoltage (19.2 V DC)		
Power consumption			
XV-303-70-..., XV-313-70-..	max. 14.4W Current consumption at 24 V DC: 11.9 W for basic device + 2.5 W for USB module		
XV-303-10-..., XV-313-10-..	max. 18 W Current consumption at 24 V DC: 15.5 W for basic device + 2.5 W for USB module		
XV-303-15-..	max. 21.6 W Current consumption at 24 V DC: 19.1 W for basic device + 2.5 W for USB module		
Fuse	Yes (fuse not accessible)		
Potential isolation	No		
Electrical current	7.0" display	10.1" display	15.6" display
$I_e$	$\leq 0.6$ A	$\leq 0.75$ A	$\leq 0.9$ A
$I_{TH}$	1.0 A <sup>2</sup> s	1.0 A <sup>2</sup> s	1.0 A <sup>2</sup> s

Applies only to XV300 units with a XV-3.3-...-E-...-... SmartWire-DT connection.

<b>Supply voltage <math>U_{Aux}</math></b>	
Rated operating voltage	24 V DC Effective: 20.4-28.8 V DC (rated operating voltage -15/+20%)
Residual ripple of input voltage	max. 5%
Protection against polarity reversal	Yes
Max. current	max. 3A
	<b>Note</b> If contactors with a total current consumption > 3 A (for acceptance by UL: 2 A) are connected, a power feeder module EU5C-SWD-PF1 or EU5C-SWD-PF2 has to be used.
Short-circuit rating	No, external protection using FAZ Z3 is required
Potential isolation	No
Heat dissipation	Normally 1.0 W
Rated operating voltage of 24-V-DC modules	Normally $U_{Aux} - 0.2$ V

<b>SmartWire-DT supply voltage <math>U_{Pow}</math></b>	
Specifications for connection to supply voltage	24 V DC Effective: 20.4-28.8 V DC (rated operating voltage -15/+20%)
Residual ripple of input voltage	max. 5%
Protection against polarity reversal	Yes
Rated operational current	max. 0.7 A
Overload proof	Yes
Inrush current and duration	12.5 A/6 ms
Heat dissipation at 24 V DC	1.0 W
Bridging voltage dips	10 ms
Repetition rate	1s
Status display	LED

<b>SmartWire-DT interface</b>	
Potential isolation between $U_{Pow}$ and 15 V SmartWire-DT supply voltage	No
Rated operating voltage $U_e$	$14.5 \text{ V} \pm 3 \% (14.0 \dots 15.0 \text{ V}_{DC})$
Max. current	0.7 A
	<b>Note</b> If SWD modules with a total power consumption > 0.7 A are connected, a power feeder module EU5C-SWD-PF2 has to be used.
Short-circuit rating	Yes
Module type	SWD master, coordinator
Number of SWD stations	Max. 99
Baud Rate	125 kBd   250 kBd
Address allocation	Automatic
Status display	SWD master LED: green   Configurations LED: red
Porting	Plug, 8-pole
Plug connector	Blade terminal SWD4-8MF2

## Appendix

### A.1 Technical data

#### A.1.6 Approvals and declarations

The following specifications apply to all XV300 units.


<b>Approvals and declarations</b>	
cUL	UL 61010-2-201, UL File No. E205091
CE	XV300 units comply with all applicable European Union (EU) Directives and feature the CE marking.
NEMA	XV300 devices comply with the applicable guidelines in North America
Explosion protection	<p>II 3D Ex tc IIIC T70°C IP6x: zone 22, category 3D</p> <ul style="list-style-type: none"> <li>• IP5x for group IIIB devices (nonconductive dust)</li> <li>• IP6x for group IIIC devices (conductive dust)</li> </ul> <p>For front mounting: fixing material that must be installed as specified without fail  -XV-303-70-...: on each 6 x Holding bracket with set screw  -XV-303-10-...: Ten (10) Holding bracket with set screw  -XV-303-15-...: Twelve (12) Holding bracket with set screw  For rear (wall) mounting: fastened as specified at all mounting points without fail.  -XV-313-70-...: on each 8 x  -XV-313-10-...: on each 10 x</p>
Marine approval (shipping classification)	Type approval for the XV300 7.0" and 10.1" – provided that a radio interference suppression filter for the device is installed in the wiring DNVGL-CG-0039, from 11/2015 DNV GL Type Approval Certificate No: TAA00000NC
<b>Applied standards and directives</b>	
EMC (relevant for CE)	2004/108/EEC 2014/30/EU
	IEC/EN 61000-6-2 Interference immunity for industrial environments
	IEC/EN 61000-6-4 Emitted interference for industrial environments
Explosion protection (relevant for CE)	ATEX directive 94/9/EG 2014/34/EG
	IEC/EN 60079-0 Explosive atmospheres: Equipment - General requirements
	IEC/EN 60079-31 Explosive atmospheres: Equipment dust ignition protection by enclosure "t"
Security	
	IEC/EN 60950 Safety of Information Technology Equipment
	UL 61010-2-201 Industrial Control Equipment → Section "Technical conditions for acceptance by Underwriters Laboratories Inc. (UL)", page 41
	DIN EN 60529 Degrees of protection provided by enclosures
	NEMA 250-2003 Enclosures for electrical equipment (1000 Volts maximum)
Product standards	
	DIN EN 60898-1:2006-03 Electrical accessories - Circuit-breakers for overcurrent protection for household and similar installations
	EN 50178_x Electronic equipment for use in power installations
	IEC/EN 61131-2 Programmable controllers: Equipment requirements and tests
Mechanical shock resistance	15g /11ms IEC/EN 60068-2-27

<b>Applied standards and directives</b>		
Vibration	IEC/EN 60068-2-6	Displacement amplitude: 5–9 Hz: 3.5 mm; 9–60 Hz: 0.15 mm Acceleration amplitude: 60–150 Hz: 2 g
Free fall, packaged	IEC/EN 60068-2-31	
RoHS	Directive 2011/65/EG	conform
Climatic proofing	Cold to IEC 60068-2-1	
	Damp heat as per EN 60068-2-3	
	Dry heat to IEC60068-2-2	

Tab. 39: Overcurrent and short-circuit protective device standards

<b>Standard</b>	<b>Overcurrent and short-circuit protective device</b>
DIN VDE 0641, part 11 and EC/EN 60898	Miniature circuit-breaker 24 V DC, rated operational current 3 A, trip type Z fuse 3 A, Utilization category gL/gG
UL 61010-2-201	Miniature circuit-breaker 24 V DC, rated operational current 2 A, trip type Z fuse 2 A

<b>Ambient climatic conditions</b>	
Air pressure (in operation)	795 - 1080 hPa Max. 2000 m above sea level
Temperature	<p><b>Operation</b> <math>\pm 0 - +50</math> °C (+32 - +122 °F)</p> <p><b>Mounting position</b></p> <p>XV-303-10-..., XV-303-70-... <math>\alpha \leq \pm 45^\circ</math>, <math>T \leq 50</math> °C (122 °F)</p> <p>XV-303-15-E-..., XV-303-15-02-... <math>\alpha \leq \pm 10^\circ</math>, <math>T \leq 50</math> °C (122 °F)</p> <p>XV-303-15-00-... <math>\alpha \leq \pm 10^\circ</math>, <math>T \leq 50</math> °C (122 °F) <math>\alpha \leq \pm 45^\circ</math>, <math>T \leq 45</math> °C (113 °F) Inclination from vertical: <math>\alpha \leq \pm 45^\circ</math> at operating temperature <math>\leq 45^\circ</math>C (113°F) possible (if using natural convection)</p> <p><b>Storage / Transport</b> <math>-20 - +60</math> °C (-4 - +140 °F)</p>
Humidity	Relative humidity 10 - 95 %
Condensation	non-condensing

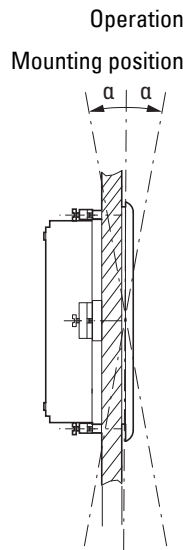



## Appendix

### A.2 Further usage information

## A.2 Further usage information

### Hardware

For more information on additional devices and modules, please refer to the following documentation:

-  XV-303-70-..., XV-303-10-... installation instructions IL048009ZU
-  XV-313-70-..., XV-313-10-... installation instructions IL048010ZU

### Software

For more information, please refer to the following manuals:

-  GALILEO 10 mn048018en
-  System description Windows CE 7 mn050004en




### Communication

HMI-PLCs are able to communicate with a variety of PLCs. In order to integrate your XV300 into your system, additional settings will need to be configured as appropriate for the PLC being used.

The following documents, together with other documentation, explain what needs to be taken into account and configured:



-  Networks in Brief MN05010009Z

### SmartWire-DT

-  SmartWire-DT The System Manual MN05006002Z
-  Manual for SmartWire-DT IP20 modules MN05006001Z
-  Manual for SmartWire-DT IP67 modules MN120006

### Download Center,Eaton Online Catalog

Enter "XV300" into the search box and the catalog will take you directly to the corresponding product group in the Automation, Control and visualization section.

-  [Eaton.com/documentation](http://Eaton.com/documentation)
-  [Eaton.com/ecat](http://Eaton.com/ecat)

### Product information

For up-to-date information, please consult the product page on the Internet.

-  [Eaton.com/xv300](http://Eaton.com/xv300)

## Alphabetical index

### A

Accessory devices .....	24
Aeration and de-aeration .....	38
After Sales Service .....	2
Ambient climatic conditions .....	38, 81, 108
Approvals .....	107

### B

Basic equipment .....	17
Battery .....	79
Brand names	
Product names .....	2
Bundle .....	23

### C

CAN .....	21, 59
CAN1 .....	67
CANopen .....	67
Capacitive multitouch .....	79
Cleaning .....	79
COM1 .....	21, 59
COM2 .....	21, 59
Commissioning .....	55
SmartWire-DT .....	75
Company information .....	2
Connections	
External .....	58
Cooling .....	93
Copy-protected .....	2
Copyright .....	2
CTRL button .....	20
Current .....	51, 105

### D

Damage .....	45
Declarations .....	107
Degree of protection .....	93
Description .....	14
Device variants .....	17
Dimension	
10.1" Display front mounting .....	86
10.1" Display rear (panel) mounting .....	90-91
15.6" Display front mounting .....	87
7.0" Display front mounting .....	85
7.0" Display rear (panel) mounting .....	88-89
Dimensional drawing for mounting .....	92
Dimensions .....	85
Directives .....	107
Display .....	20, 93
Disposal	
Recycling .....	83
Download Center .....	109

### E

Earthing .....	52
ecat .....	109
Enclosure material .....	93
Equipment supplied .....	44
Ethernet .....	63
Ethernet 1 .....	21, 59
Ethernet 2 .....	21, 60

### F

Faults .....	78
Features .....	14
Front .....	20

Front mounting .....	46	Optional .....	60
Function .....	14	Profibus .....	69
Functional earthing		RS-232 .....	64
Specifications .....	52	RS-485 .....	65
Further reading .....	109	SD card .....	61
<b>G</b>		Serial .....	64
General data .....	93	SmartWire-DT .....	74
<b>H</b>		Type .....	21, 59
Hazards		USB device .....	62
Device-specific .....	32	USB host .....	62
Hole diameter built-in .....	40	USB peripheral devices .....	62
<b>I</b>		<b>J</b>	
Initial commissioning .....	56	J1939 .....	67
Installation .....	37	<b>L</b>	
Installation position		Label .....	25
Clearances .....	39	Lifespan .....	94
Selection .....	37	Backlight .....	57
Intended use .....	16	Location of use .....	37
Interfaces .....	21, 95	<b>M</b>	
10.1" Display front mounting .....	96	Maintenance .....	79
10.1" Display front mounting SmartWire-DT ..	99	Manuals .....	109
10.1" Display rear (panel) mounting .....	102	Marine approvals .....	28, 42
10.1" Display rear mounting SmartWire-DT ..	104	Materials used .....	83
15.6" Display front mounting .....	97	Missing parts .....	45
15.6" Display front mounting SmartWire-DT ..	100	Mounting .....	45
7.0" Display front mounting .....	95	Mounting-,Mounting cutout .....	48
7.0" Display front mounting SmartWire-DT ...	98	Mounting distance .....	39
7.0" Display rear (panel) mounting .....	101	Mounting position	
7.0" Display rear mounting SmartWire-DT ....	103	SD card .....	37
Basic .....	59	<b>N</b>	
CAN1 .....	67	Nameplate .....	21, 25
Equipment .....	21		
Ethernet .....	63		

**O**

Online Catalog .....	109
Operating elements .....	20
Operating System .....	93
Operation	
Proper .....	31
Original Operating Instructions .....	2

**P**

Package contents .....	44
Part number .....	22
PCT .....	79
Peculiarities	
SmartWire-DT .....	15
XN300 .....	15
Ports .....	58
POW/AUX	
Power supply SmartWire-DT .....	71
Power consumption .....	51, 105
Power supply .....	53
POW/AUX .....	71
SmartWire-DT .....	106
Power Supply .....	51, 105
Profibus .....	21, 60, 69

**R**

Radio interference filter .....	42
Real-time clock .....	93
Rear (wall) mounting .....	48
Repairs .....	80
Resolution	
Display .....	93
RS-232 .....	64
RS-485 .....	65

**S**

Safety .....	29
Screen area	
Visible .....	93
Screen diagonal .....	93
SD card .....	61
SD card slot .....	20-21, 59
Sealing .....	45
Service .....	26
Service page .....	20
Shipping classification .....	28, 42
SmartWire-DT .....	21, 60, 71
Standards .....	107
Std. pack .....	44
Storage .....	81
Supply voltage	
SmartWire-DT .....	106
SWD .....	72
Support .....	26
System .....	93

**T**

Technical data .....	85
Touch sensor .....	20, 93
Transit damage .....	44
Transport .....	81
Troubleshooting .....	78

**U**

UL listing .....	27, 72
USB device .....	21, 59, 62
USB host .....	21, 59, 62
USB peripheral devices .....	62



**V**

Versions ..... 17, 22  
Voltage range ..... 51, 105

**W**

Weight ..... 85

Eaton is an intelligent power management company dedicated to improving the quality of life and protecting the environment for people everywhere. We are guided by our commitment to do business right, to operate sustainably and to help our customers manage power – today and well into the future.

By capitalizing on the global growth trends of electrification and digitalization, we're accelerating the planet's transition to renewable energy, helping to solve the world's most urgent power management challenges, and doing what's best for our stakeholders and all of society.

Founded in 1911, Eaton has been listed on the NYSE for nearly a century.

We reported revenues of \$19.6 billion in 2021 and serve customers in more than 170 countries.

For more information, visit [eaton.com](https://www.eaton.com). Follow us on [LinkedIn](#).

Eaton Industries GmbH  
Hein-Moeller-Str. 7–11  
D-53115 Bonn

© 2015 Eaton Corporation  
07/2023 MN048017EN (PMCC)



*Powering Business Worldwide*