klemko[®] wrf-wi-8z-8s-wh/wrf-wi-8z-8s-zw



Feature

- Touch sensitive
- Glass interface(White & Black)
- Control 4 zones synchronously and separately
- Save up to 4 color/modes in each zone
- Wireless, can use together with 860550,860552











Parameter


Remote


Part No.	Operation Voltage	Operation Frequency	DIMENSIONS ø/h (mm)	Remarks				
860554	12-24VDC	434MHz/868MHz	86x86x29.1	Touch Sensor				
860556	12-24VDC	434MHz/868MHz	86x86x29.1	Touch Sensor				

Receiver


Part No.	luput Voltage	Current	Output	Remarks
860510	12-36VDC	4x5A	4x(60-180)W	Constant voltage
860500	12-36VDC	4x350mA	4x(4.2-12.6)W	Constant current
860505	12-36VDC	4x700mA	4x(8.4-25.2)W	Constant current

Product Size

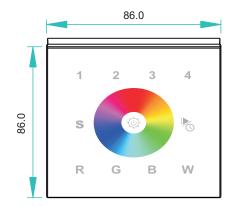

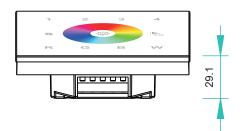

Installation

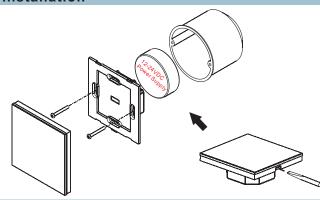


Button introduction


Button 1,2,3,4 are zone numbers. S button is for saving short press: starting running color or mode. mode or pause mode, there are 10 bulid-in modes long press: press zone button (1 or 2 or 3 or 4), then do long short press: switch on/off of lighting press on button which is to R G В W adjust running speed. long press:press zone button (1 or 2 or 3 or 4), then do long press on "ON/OFF" button, which is to dim brightness of any R/G/B/W are 4 colors. Short press is zone to get direct color, such as red, green, blue, white. Long press is to dim red color, green color, blue color, white color.

Wiring diagram


1)Sender Connection Diagram

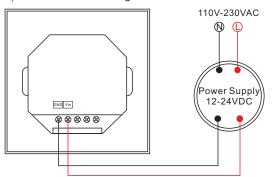

2)Receiver Connection Diagram for Single Unit

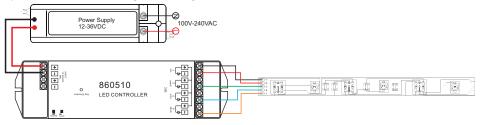

3)Receiver Connection Diagram for Multiple Units

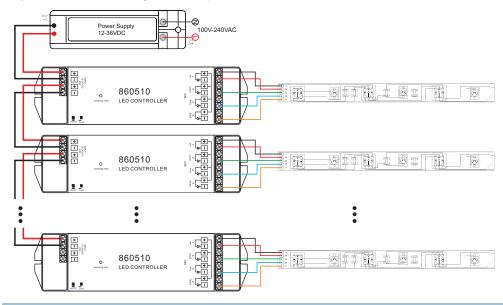

Operation

1. Do wiring according to connection diagram

2. Learning process

- a. Wake up the panel by touching ON/OFF w button.
- b. Press at learning button on receiver.
- c. Touch any zone button on panel.
- d.Then touch color wheel.
- e.Connected LED light will blink to confirm zone designation.
- f . Press at learning button on receiver over 5 seconds until LED light flash, then delete the

Note: To choose a master from slaves by jumper for each zone.

Short circuit for master.

Open circuit for slave.

Each zone only can set 1 slave to be master. After a period of time, the master will do synchronization operation to keep the same color or mode of all slaves in one zone.

3.how to save color or mode

Button can save the color from mode or save color when you touch color wheel.

In "S" button, it saved "R/ G/B" 3 colors in default. But with your operation, you can save another 3 colors replace those R/G/B colors.

Press any zone button----> press | button, mode runs, see favorite mode---> press \$\infty\$ button over 3 seconds until connected light flashes. Then it saved successful ly.

Press any zone button----> touch ocolor wheel, see favorite color---> press sutton over 3 seconds until connected light flashes. Then it saved successfully.

Safety & Warnings

- 1) The product shall be installed and serviced by a qualified person.
- 2) IP20.Please avoid the sun and rain. When installed outdoors, please ensure it is mounted in a water proof enclosure
- 3) Always be sure to mount this unit in an area with proper ventilation to avoid overheating.
- 4) Please check if the output voltage of any LED power supplies used comply with the working voltage of the product.
- 5) Never connect any cables while power is on and always assure correct connections to avoid short circuits before switching on.
- 6) Please ensure that the cable is secured tightly in the connector
- 7) For update information please consult your supplier.

Warranty Agreement

- 1) We provide lifelong technical assistance with this product:
- 3-year warranty. We print date on every products, for example :1125 means year 2011, week 25. The warranty is for free repair or replacement and covers manufacturing faults only.
- For faults beyond the 3-year warranty we reserve the right to charge for time and parts.
- 2) Limited Warrenty
- Any defects caused by wrong operation.
- Any damages caused by unauthorized removal, maintenance, modifying, incorrect connection and replacement of chips.
- Any damages due to transportation, vibration etc. after purchase.
- Any damages caused by earthquake, fire, lightning, pollution and abnormal voltage.
- Any damages caused by negligence, inappropriate storing at high temperatures and humidity or near harmful chemicals.
- Product has been updated
- 3) Repair or replacement as provided under this warranty is the exclusive remedy to the customer.