



Datasheet

Article number: 70025247

Designation: KG32.T204/33.KL51V **Description:** Switch Global Disconnector

Rated insulation voltage Ui							
		Voltag	ge (V) AC / DC				
Rated uninterrupted current	I/I+h		690 AC				
Current (A)	Ambient temperature (°C)	Peak temperature (°C)	additional regi	uirements			
32	50				during 24 hours v	vith peaks up to +55°C	
Rated operational current le			, and temp	, c. a.a.c		THE POUND UP TO YOU O	
Utilization category				Vo	Itage (V)		Current (
AC-32A					20 - 400		
Rated operational power							
Utilization category		Voltage (V)	No.	of phases		No. of poles	Power (k
AC-3		220 - 240		3		3	5,
AC-3		380 - 440		3		3	7,
AC-3 AC-23A		660 - 690 220 - 240		3		3	7,: 5,:
AC-23A AC-23A		380 - 440		3		3	5,
AC-23A AC-23A		660 - 690		3		3	
Max Fuse Rating IEC		000 000		3		3 , 1	
Fuse characteristic					No. of Fu	ises	Current
gG						1	oun one (
UL60947-4-1 , UL508	1					-	
Nominal Voltage							
itoniniai voitaye		Voltac	ge (V) AC / DC				
		Voltag	600 AC				
Rated insulation voltage Ui							
		Voltag	ge (V) AC / DC				
			600 AC				
Rated thermal current							
	Current		A	mbient tempera	ture (°C) Additio	nal Text	
		30			0 - 40		
Horsepower rating			1/-14 (1.1)			D(11D)	A bi
Across-the-Line Motor Startin				No. of phases	No. of poles	Power (HP)	
Across-the-Line Motor Startin DOL			110 - 120	No. of phases	No. of poles	1,50	
Across-the-Line Motor Startin DOL DOL			110 - 120 200 - 208	No. of phases	No. of poles 2	1,50	
Across-the-Line Motor Startin DOL DOL DOL DOL			110 - 120 200 - 208 220 - 240	No. of phases	No. of poles 2 2 2	1,50 3 5	Ambient temperature [
Across-the-Line Motor Startin DOL DOL			110 - 120 200 - 208 220 - 240 277 - 277	No. of phases 1 1	No. of poles 2	1,50	
Across-the-Line Motor Startin DOL DOL DOL DOL DOL			110 - 120 200 - 208 220 - 240	No. of phases 1 1 1 1	No. of poles 2 2 2 2 2	1,50 3 5 5	
Across-the-Line Motor Startin DOL DOL DOL DOL DOL DOL DOL			110 - 120 200 - 208 220 - 240 277 - 277 415 - 415	No. of phases 1 1 1 1 1	No. of poles 2 2 2 2 2 2 2	1,50 3 5 5 5	
Across-the-Line Motor Startin DOL DOL DOL DOL DOL DOL DOL DOL DOL DOL			110 - 120 200 - 208 220 - 240 277 - 277 415 - 415 440 - 480 550 - 600 110 - 120	No. of phases 1 1 1 1 1 1 1 3	No. of poles 2 2 2 2 2 2 2 2 2 2 3	1,50 3 5 5 5 7,50 7,50 3	
Across-the-Line Motor Startin DOL			110 - 120 200 - 208 220 - 240 277 - 277 415 - 415 440 - 480 550 - 600 110 - 120 200 - 240	No. of phases 1 1 1 1 1 1 3 3	No. of poles 2 2 2 2 2 2 2 2 3 3	1,50 3 5 5 5 7,50 7,50 3 10	
Across-the-Line Motor Startin DOL			110 - 120 200 - 208 220 - 240 277 - 277 415 - 415 440 - 480 550 - 600 110 - 120 200 - 240 415 - 415	No. of phases 1 1 1 1 1 1 3 3 3	No. of poles 2 2 2 2 2 2 2 2 3 3 3 3	1,50 3 5 5 5 7,50 7,50 3 10	
Across-the-Line Motor Startin DOL			110 - 120 200 - 208 220 - 240 277 - 277 415 - 415 440 - 480 550 - 600 110 - 120 200 - 240 415 - 415 440 - 480	No. of phases 1 1 1 1 1 1 1 3 3 3 3 3	No. of poles 2 2 2 2 2 2 2 2 3 3 3 3 3	1,50 3 5 5 5 7,50 7,50 3 10 10	
Across-the-Line Motor Startin DOL			110 - 120 200 - 208 220 - 240 277 - 277 415 - 415 440 - 480 550 - 600 110 - 120 200 - 240 415 - 415	No. of phases 1 1 1 1 1 1 3 3 3	No. of poles 2 2 2 2 2 2 2 2 3 3 3 3	1,50 3 5 5 5 7,50 7,50 3 10	
Across-the-Line Motor Startin DOL			110 - 120 200 - 208 220 - 240 277 - 277 415 - 415 440 - 480 550 - 600 110 - 120 200 - 240 415 - 415 440 - 480	No. of phases 1 1 1 1 1 1 1 3 3 3 3 3	No. of poles 2 2 2 2 2 2 2 2 3 3 3 3 3	1,50 3 5 5 5 7,50 7,50 3 10 10	
Across-the-Line Motor Startin DOL			110 - 120 200 - 208 220 - 240 277 - 277 415 - 415 440 - 480 550 - 600 110 - 120 200 - 240 415 - 415 440 - 480	No. of phases 1 1 1 1 1 1 1 3 3 3 3 3	No. of poles 2 2 2 2 2 2 2 2 3 3 3 3 3	1,50 3 5 5 5 7,50 7,50 3 10 10	
Across-the-Line Motor Startin DOL			110 - 120 200 - 208 220 - 240 277 - 277 415 - 415 440 - 480 550 - 600 110 - 120 200 - 240 415 - 415 440 - 480	No. of phases 1 1 1 1 1 1 1 3 3 3 3 3	No. of poles 2 2 2 2 2 2 2 2 3 3 3 3 3	1,50 3 5 5 5 7,50 7,50 3 10 10	
Across-the-Line Motor Startin DOL			110 - 120 200 - 208 220 - 240 277 - 277 415 - 415 440 - 480 550 - 600 110 - 120 200 - 240 415 - 415 440 - 480	No. of phases 1 1 1 1 1 1 1 3 3 3 3 3	No. of poles 2 2 2 2 2 2 2 2 3 3 3 3 3	1,50 3 5 5 5 7,50 7,50 3 10 10	
Across-the-Line Motor Startin DOL	g		110 - 120 200 - 208 220 - 240 277 - 277 415 - 415 440 - 480 550 - 600 110 - 120 200 - 240 415 - 415 440 - 480 550 - 600	No. of phases 1 1 1 1 1 1 3 3 3 3 3 3	No. of poles 2 2 2 2 2 2 2 3 3 3 3 3 3	1,50 3 5 5 5 7,50 7,50 3 10 10 20 25	
Across-the-Line Motor Startin DOL	e on circuits capable of delivering	not more than 10kA rms symm	110 - 120 200 - 208 220 - 240 277 - 277 415 - 415 440 - 480 550 - 600 110 - 120 200 - 240 415 - 415 440 - 480 550 - 600	No. of phases 1 1 1 1 1 3 3 3 3 3 3 s, 600V ac max.	No. of poles 2 2 2 2 2 2 2 3 3 3 3 3 when protected	1,50 3 5 5 5 7,50 7,50 7,50 3 10 10 20 25	
Across-the-Line Motor Startin DOL	g	not more than 10kA rms symm	110 - 120 200 - 208 220 - 240 277 - 277 415 - 415 440 - 480 550 - 600 110 - 120 200 - 240 415 - 415 440 - 480 550 - 600	No. of phases 1 1 1 1 1 3 3 3 3 3 3 s, 600V ac max.	No. of poles 2 2 2 2 2 2 2 3 3 3 3 3 when protected	1,50 3 5 5 5 7,50 7,50 7,50 3 10 10 20 25	
Across-the-Line Motor Startin DOL	e on circuits capable of delivering	not more than 10kA rms symm 1 65000 rms symmetrical ampe	110 - 120 200 - 208 220 - 240 277 - 277 415 - 415 440 - 480 550 - 600 110 - 120 200 - 240 415 - 415 440 - 480 550 - 600	No. of phases 1 1 1 1 1 1 3 3 3 3 3 3 3 3 x, when protect	No. of poles 2 2 2 2 2 2 2 3 3 3 3 3 when protected	1,50 3 5 5 5 7,50 7,50 7,50 3 10 10 20 25	
Across-the-Line Motor Startin DOL	e on circuits capable of delivering apable of delivering not more than	not more than 10kA rms symme o 65000 rms symmetrical ampe	110 - 120 200 - 208 220 - 240 277 - 277 415 - 415 440 - 480 550 - 600 110 - 120 200 - 240 415 - 415 440 - 480 550 - 600	No. of phases 1 1 1 1 1 1 3 3 3 3 3 3 3 3 x, when protect	No. of poles 2 2 2 2 2 2 2 3 3 3 3 3 3 when protected	1,50 3 5 5 5 7,50 7,50 7,50 3 10 10 20 25	
Across-the-Line Motor Startin DOL	e on circuits capable of delivering capable of delivering not more than	not more than 10kA rms symme o 65000 rms symmetrical ampe	110 - 120 200 - 208 220 - 240 277 - 277 415 - 415 440 - 480 550 - 600 110 - 120 200 - 240 415 - 415 440 - 480 550 - 600	No. of phases 1 1 1 1 1 1 3 3 3 3 3 3 3 3 x, when protect	No. of poles 2 2 2 2 2 2 2 2 3 3 3 3 3 3 3 when protected eted by 40A Class	1,50 3 5 5 5 7,50 7,50 3 10 10 20 25	



AC / DC Voltage (V) Current (A) No. of phases No. of poles No. of contact	1 1 sing means
AC 600 30 3 3 3	erature [°C]
Centeral Information	erature [°C]
Text	erature [°C]
The operating handle and position indicating means to be used with these manual motor controllers. When intended for use as a motor disconnector the device shall be provided with a method of being locked in the OFF-position. CSA Nominal Voltage Voltage (V) AC / DC 600 AC Rated insulation voltage Ui Voltage (V) AC / DC 600 AC Rated thermal current Current (A) Ambient temperature (**C) Additional Text 30 0 0 40 Horsepower rating Across the Line Motor Starting DOL 110 120 1 2 150 DOL 220 -240 1 2 5 5 DOL 277 - 277 1 1 2 5 5 DOL 415 - 415 1 2 5 5 DOL 415 - 415 1 2 5 5 DOL 440 - 400 1 1 2 75,00 DOL 4415 - 415 1 2 5 5 DOL 440 - 400 1 1 2 75,00 DOL 4415 - 415 1 2 5 5 DOL 440 - 400 1 1 2 75,00 DOL	erature [°C]
Nominal Voltage (V) AC / DC	
Nominal Voltage Voltage (V) AC / DC 600 AC	
Voltage (V) AC / DC	
Voltage (V) AC / DC 600 AC	
Rated thermal current Current (A) Ambient temperature (**C) Additional Text 0 - 40 - 40 - 40 - 40 - 40 - 40 - 40	
Current (A) Ambient temperature (*C) Additional Text 0 - 40 - 40 - 40 - 40 - 40 - 40 - 40	
No. of poles No. of contact No. of contact No. of poles No. of poles No. of contact No. of contact No. of poles No. of poles No. of contact No. of contact No. of poles No. of poles No. of contact No. of poles No. of contact No. of poles No. of contact No. of contact No. of contact No. of contact No. of poles No. of contact No. of c	
Across-the-Line Motor Starting Voltage (V) No. of phases No. of poles Power (HP) Ambient temper	
DOL	
DOL	40
DOL S50 - 600	40
DOL	40
DOL 220 - 240 3 3 10	40
DOL	40
DOL 440 - 480 3 3 20	40
DOL 550 - 600 3 3 25	40
Pilot duty rating code	40
Duty Code A600 Temp. rating of wire Current (A) Text 75 General Use AC / DC Voltage (V) Current (A) No. of poles No. of contact AC 277 30 1 1 AC 600 30 1 2 AC 600 30 3 3 GENERAL TECHNICAL INFORMATION	40
A600 Temp. rating of wire Temperature rating (°C) 75 Current (A) Text 75 Current (B) Text 75 Current (C) Text 75 AC	
Temp. rating of wire Temperature rating (*C) Current (A) Text	
Temperature rating (*C)	
T5	
General Use AC / DC Voltage (V) Current (A) No. of phases No. of poles No. of contact AC 277 30 1 1 AC 600 30 1 2 AC 600 30 3 3 GENERAL TECHNICAL INFORMATION	
AC / DC Voltage (V) Current (A) No. of phases No. of poles No. of contact AC 277 30 1 1 AC 600 30 1 2 AC 600 30 3 3 GENERAL TECHNICAL INFORMATION	
AC 277 30 1 1 1 AC 600 30 1 2 AC 600 30 3 3 3 GENERAL TECHNICAL INFORMATION	to in corice
AC 600 30 1 2 AC 600 30 3 3 3 GENERAL TECHNICAL INFORMATION	
AC 600 30 3 3 GENERAL TECHNICAL INFORMATION	1
GENERAL TECHNICAL INFORMATION	1
	!
Tightening torque of screws	
tightening torque (Nm) tightening tor	
1,25	11
Stripping length	
Length (mm) 9 STRIPPINGLENGTH	
Size of conductor	
Cross section (mm²) or	
composition of conductor Min. / Max. value No. of conductor per terminal (AWG/kcmil) Material of the wire	
solid wire Min. 1 0.75mm ² Copper	
solid wire Min. 2 0.5mm² Copper	
flexible wire Min. 2 0.75mm² Copper	
flexible wire Max. 1 AWG 10 Copper	
flexible wire Max. 1 4mm² Copper	
flexible wire Min. 1 1.5mm² Copper	
Single-core or stranded wire Max. 1 6mm ² Copper	
Single-core or stranded wire Max. 1 AWG 10 Copper	
flexible wire with sleeve Max. 1 4mm² Copper	
flexible wire with ferrule according to DIN 46228 Min. 1 0.75mm ² Copper	
flexible wire with ferrule according to DIN 46228 Min. 2 0.5mm ² Copper	
Approbations	I
Specification	
EAC	Marking
EAC	-
CE marking	ERC
UK Directives	EHI C€
CSA C.22.2 No.14	₩ •
GB/T14048.3	EHI C€



Recommended screw driver						
Type of screw driver	Value					
Cross Screwdriver	PH2					
Slot screwdriver according to DIN 5264	0,8x4					
General Information						

General Information

Text

- EMC Note: This device is suitable for use in environment A and B.
- Do not lubricate or treat contacts.
- Switches may only be mounted, connected and set into operation by qualified persons according to the accepted rules of technology.
- Use copper wire only. Do not coat the wire end with tin.
- Terminals with factory fitted jumper links are tightened during production. Take care during installation to ensure factory fitted links are not lost by undoing both sides of linked terminals. After wiring, all terminal screws must be tightened to recommended torque specifications.

Waste Electrical & Electronic Equipment (WEEE)

Picture name Description

Do not the

Do not throw in the trash as care must be taken to ensure environmentally sound disposal and recycling. Please either use an environmentally friendly waste disposal company; return to the supplier for disposal; or return direct to the manufacturer, Kraus & Naimer. You can find local Kraus & Naimer offices at www.krausnaimer.com


Proposition 65

Picture name

Description

WARNING: This product can expose you to chemicals including nickel and lead, which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov.

Classification Contact: Rigid contact bridge
Classification Contact Mat: Silver
Classification Terminal: Screw terminal

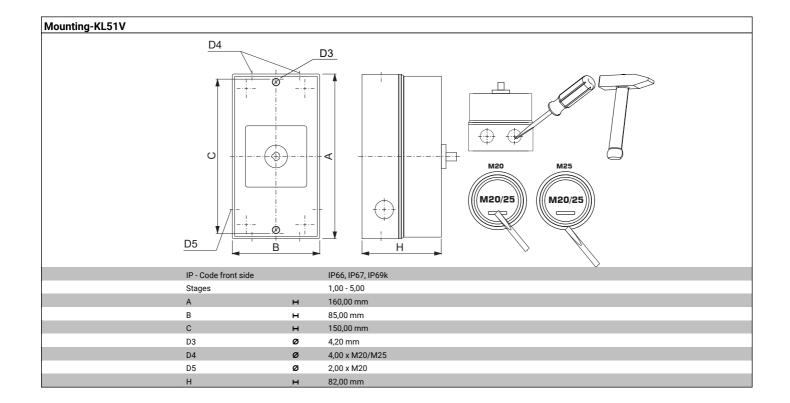




Wiring diagram KG32.T304.KL51V

L1 L2 L3 N
T1 T2 T3 N



Switch program KG32.T304.KL51V

	Kraus &	ΙVd	ımer	KG3	32	T304			Page	1 of 1
	Face Plate									
	1 0		L1 1	L2 3	L3 5	N 7	9	11	13	15
0 270 90 -			\	\	\	\\ \				
	hing Angle 90 switching Angle 90		2 T1	4 T2	6 T3	8 N	10	12	14	16
ı otal s	switching Angle 90	270	- 11	12	13	IN				
_										
	1	0								
						<u> </u>				
_		90								
		180								

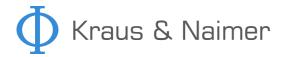

Face plate s1.F656/E10.V9

