

Emergency Range

Installation instructions for JC110001 Emergency Bulkhead



Warnings & Cautions

- To avoid electric shock, serious injury or property damage, isolate power before installing, removing or servicing the product.
- It is recommended that luminaires are installed by a qualified electrician to ensure the installation complies with the local current wiring regulations.
- It may be necessary to upgrade your MCBs to allow for increased inrush current.
- This product is designed for connection to a 100-240V~ 50/60Hz.
- It is recommended that the ambient room temperature should not exceed 26°C.
- All testing should be carried out in accordance to EN 50172:2004
- The light source of this luminaire is not replaceable: when the light source reaches the end of its life the whole of the luminaire must be replaced.
- Read instructions and check that you have all of the tools and accessories required to complete the installation correctly.
- Isolate power supply before starting installation.
- Do not carry out insulation tests with the product connected to the circuit.
- Any broken or damaged parts should be replaced as soon as possible. JCC will not accept responsibility for claims arising from sub-standard installations; which will void the warranty.
- This luminaire is suitable for indoor and outdoor use.

INSTALLATION

ENGLISH

3W 100-240V~ 50/60Hz - Class II ☐

Colour temp: 7000K Ra: 84

Wire preparation: 1-2.5 mm²

Light source: Integral LED

Wattage: 3W

Lumens: 120 lumens

KEY:

E: EARTH PROVISION


N: NEUTRAL

L: U/SWITCHED LIVE(in)

L1: U/SWITCHED LIVE(out)

L2: Sw/LIVE


Maintained(3M)
+ on/off Switched
+ Emergency

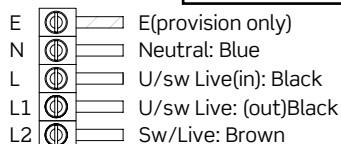




Maintained(3M)
+ Light on 24/7
+ Emergency
(linked)




Non-Maintained(3NM)
+ Light off 24/7
+ Emergency
(remove link)

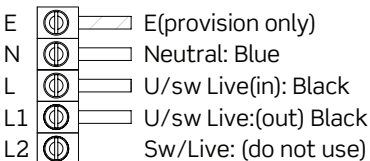

- Remove the two screws holding the diffuser to gain access to the interior.
- Release the LED tray to access the mains input terminal by pressing the quick release tabs. This is hinged so the LED tray remains attached to the body.
- Cable entry is available through rear, top and bottom or both ends. Ensure appropriate grommets or compression couplings are used to maintain the IP65 rating where required.
- Connect the mains input supply as indicated on the above as per the required operation.
- Connect the emergency battery leads to the circuit board where indicated.
- Close the LED tray, ensuring it is secured using the securing tabs.
- Refit the diffuser ensuring there is a good seal to maintain the IP65 rating.
- Switch on mains supply and test for operation(allow 24hrs for batteries to charge). Charging and normal operation is indicated when the green light is on
- Fit the legends on the front of the diffuser to suit the application from the three choices indicated on the right which are included.
- Familiarise yourself with the enclosed emergency fittings test record sheet and ensure it is completed as required and left with the end user.

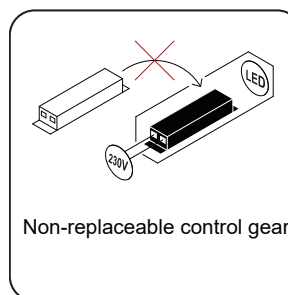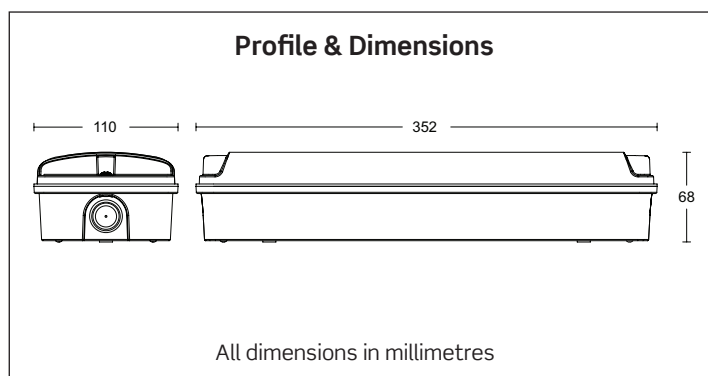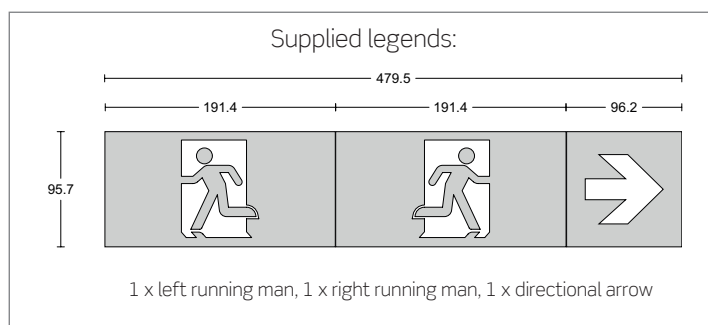

Non-replaceable control gear

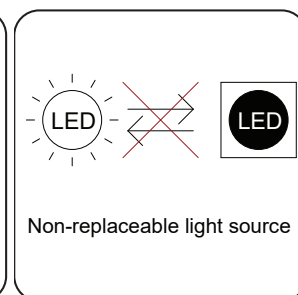

Non-replaceable light source

CE UK RoHS Compliant IP65 jcc.co.uk

Important warranty information

This product is supported by a 2-year standard warranty which will extend to 5 years if registered within the first year of purchase. (5 year on batteries). Please register at jcc.co.uk/warranty - Terms and conditions apply.

The installer will be asked to provide the following information, which is detailed on a label attached to the luminaire's chassis:
Product Code/Date Code.

BS EN ISO9001 - 2015 - Registered Firm Certificate No. GB 1552
JCC Lighting Products Ltd. Lux Park, Chichester Business Park, City Fields Way, Tangmere, Chichester, West Sussex, PO20 2FT
Technical Support: +44(0)1243 838986 Customer Services: +44(0)1243 838999

V5_Sept_2022_RS

Emergency Test Record

Installation Engineers:

Luminaire Type:

Location:

Tel:

Batch Number:

Installation Date:

General Information

These instructions contain important information regarding safety. They should be read carefully and retained at the installation for future reference. The company will not accept any responsibility for any injury, damage or loss that may arise as a result of incorrect installation, operation or maintenance due to the non-adherence to these instructions. Our products are designed to comply with the requirements of UK law and the relevant industry national and international standards and should not be modified in any way. All emergency lighting systems should comply with the recommendations of BS5266-1: Code of Practice for the Emergency Lighting of Premises and be installed by competent engineers in accordance with the relevant wiring regulations. Before installing any type of Emergency Lighting always seek the advice and approval of the local Fire Prevention Officer (or equivalent authority).

Maintenance

Failed or faulty light sources connected to this equipment should be replaced immediately. These units are designed especially for a long and trouble free life and, under normal conditions, will require no routine maintenance or service beyond the inspection and test regime of BS5266-1.

Both mains supply and battery protection fusing is incorporated internally. Should access to these or any other part of the circuitry be required this must be undertaken only by suitably qualified personnel. Special care must be taken when removing the cover to circuitry and battery. Only replacement components authorised by the company must be used. Disposal of replaced components should be in accordance with the component manufacturers instructions.

Routine Inspection and Test

All tests must be undertaken at times of least risk and in accordance with EN 50172:2004 as indicated below:

Daily: Indicators of central power supply shall be visually inspected for correct operation.

Monthly: (in addition to the daily check)

If automatic testing devices are used, the results of the short duration tests shall be recorded.

Test shall be carried out as follows:

a) Switch on in the Emergency mode each luminaire and each internally illuminated exit sign from its battery by simulation of a failure of supply to the normal lighting for a period sufficient to ensure that each lamp is illuminated.

NOTE: The period of simulation failure should be sufficient for the purpose of this clause whilst minimising damage to the system components e.g lamps. During this period, all luminaires and signs shall be checked to ensure that they are present, clean and functioning correctly. At the end of this test period, the supply to the normal lighting should be restored and any indicator lamp or device should be checked to ensure that is showing that the normal supply has been restored.

Annually:

If automatic testing devices are used, the results of the short duration tests shall be recorded. For all other systems the monthly inspection shall be carried out and the following additional tests made:

a) each luminaire and internally illuminated sign shall be tested Monthly as above but for its full duration in accordance with the manufacturer's information;

b) the supply of the normal light shall be restored and any indicator lamp or device checked to ensure that it shows the normal supply has been restored.

The charging arrangements should be checked for proper functioning;

c) the date of the test and its results shall be recorded in the system logbook.

A copy of this report must accompany any fitting returned to the manufacturer for any reason.

[illegible]